



DISPLAYS2GO
CONNECTING PEOPLE & BRANDS WITH THE WORLD



FLOOR ACRYLIC EASEL A-FRAME WITH ADJUSTABLE PEGS

Assembly Instructions

SKU: ACEASFLAFA

Scan the QR
code to visit the
product page.




PART**QUANTITY**


A: Front Leg - Right, Left.....	1,1
B: Center Support	1
C: Back Support Leg.....	1
D: Connecting Plates - Small, Medium, Large.....	1,1,1
E: Acrylic Tray	1
F: Acrylic Peg	2
G: Hex Screw.....	16
H: Hex Wrench	1
I: Wing Screw	1
J: Wing Nut	1

Assembly


1. Place left and right front legs together face down on a soft surface to avoid scratches. The smaller holes for the hex screws should face the back.
2. Attach front legs where the 2 legs meet at the top of the unit using the small connecting plate. Secure with hex screws and tighten with hex wrench.
3. Attach medium and large connecting plates with hex screws and wrench.
4. Stand the unit up to connect the center support to the front of the medium and large connecting plates. The flat side of the center support should face the front. Secure with hex screws and wrench.

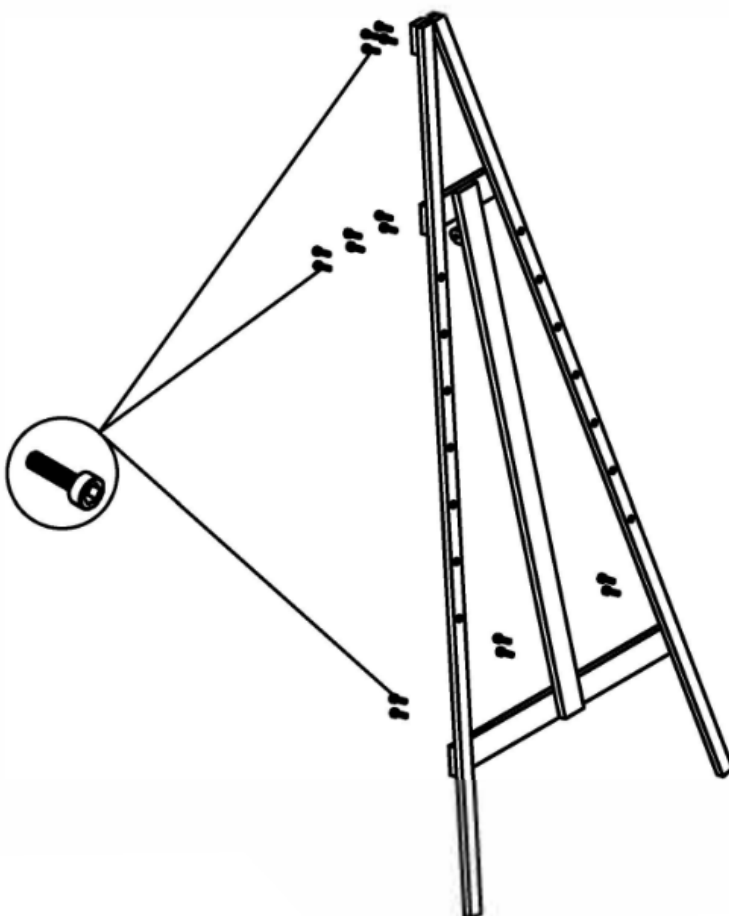

5. Attach the back leg to the medium connecting plate with wing screw and wing nut, making sure the rounded top edge of the leg faces the front.

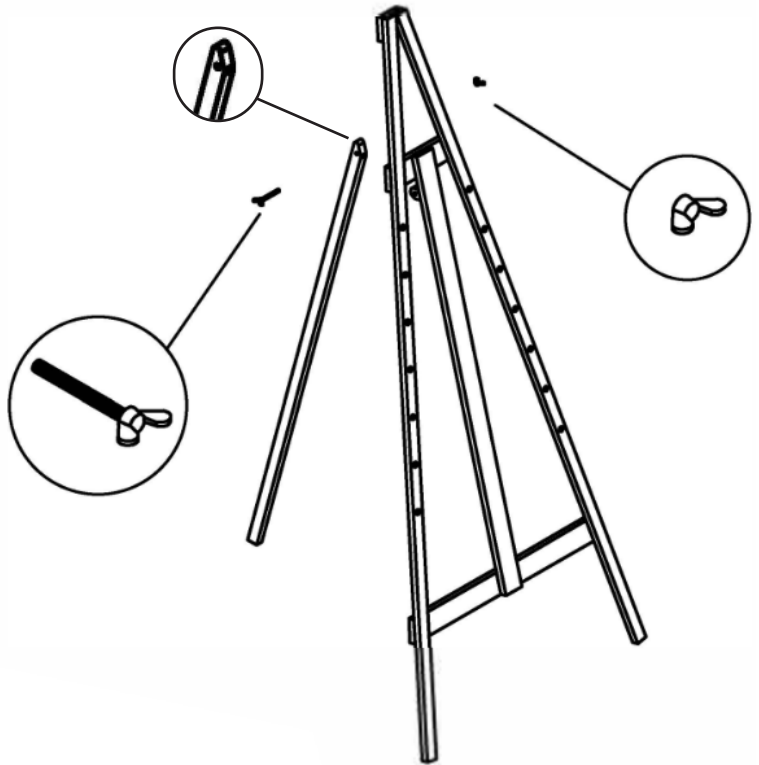

6. Insert pegs into slots of front legs at desired height, then place acrylic tray onto the pegs.

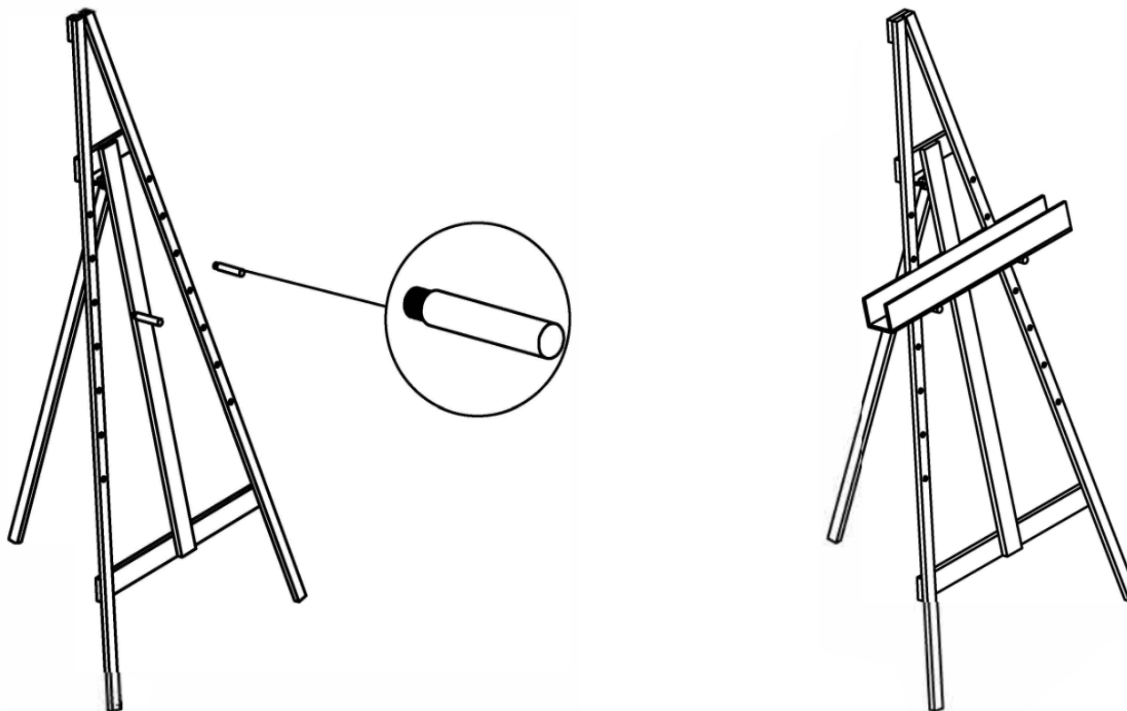

Assembly is complete.

If you have any questions regarding our products, please visit us at www.displays2go.com or contact Displays2go customer service at 844-221-3388.