

ASSEMBLY INSTRUCTIONS

DISPLAYS2GO

ACEASFLAFF - Floor Acrylic Easel A Frame Fixed

V19.09




Wing Screw M10x30 1 pc



Hex Nut M10 1 pc




Peg 2 pcs

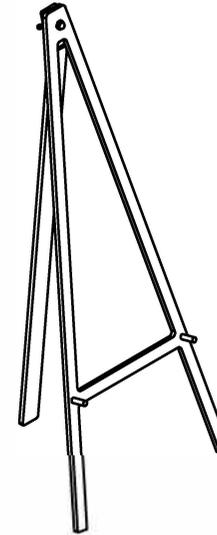

Scan QR code to visit the product page:




If you have any questions regarding our products, please visit us at www.displays2go.com or contact D2G customer service at 844-221-3388.

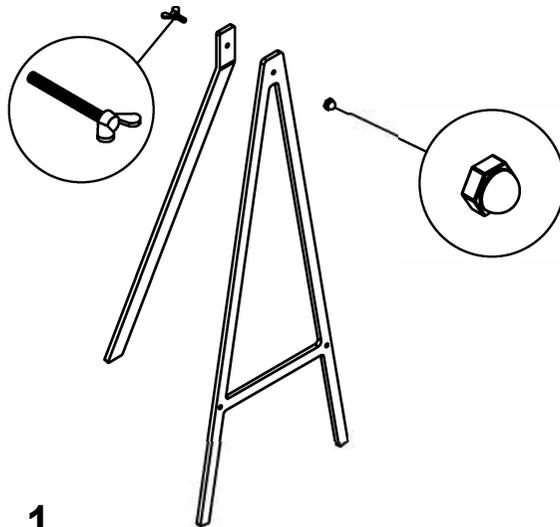

STEP 1

Assemble the Front Leg and support leg using M10X30 Screws and tighten it with Nut.

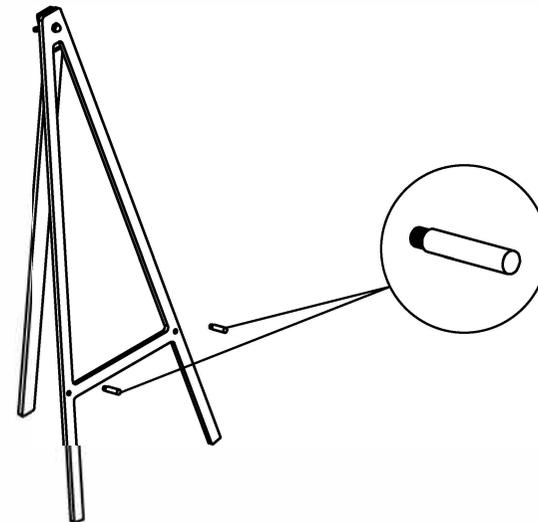

STEP 2

Insert the peg into the corresponding holes in the front legs as shown above.