

ASSEMBLY INSTRUCTIONS

ACEASFLTRI - Floor Acrylic Easel Tripod


DISPLAYS2GO


V19.09


Scan QR code to visit the product page:




If you have any questions regarding our products, please visit us at www.displays2go.com or contact D2G customer service at 844-221-3388.


 Wing Screw M4X40 3 pcs


 Connecting Block

 Wing Screw M4X25 6 pcs

 Tray Fixing Block

 Wing Screw M4X30 1 pcs

 Wing Nut M4 3 pcs

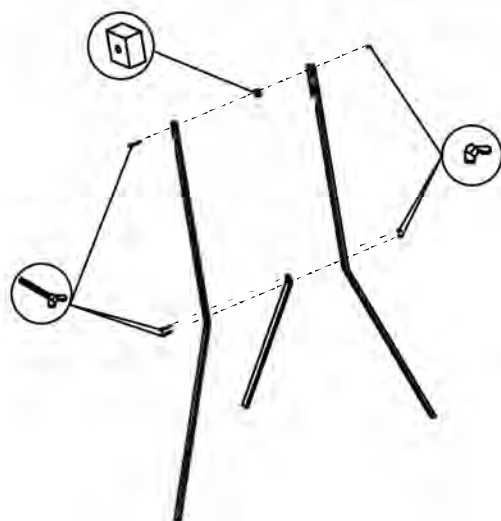


STEP 1

"Sandwich" the back leg and connecting block between 2 front legs as shown above. Fix the leg assembly with M4X40 screws and M4 wing nuts.




STEP 2

Fix front feet at bottom with connecting bar by using 2 M4X25 screws.

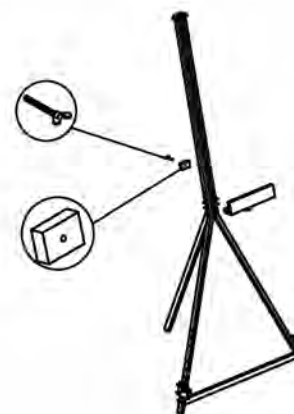

STEP 3

Assemble the acrylic tray to the front by tightening tray fixing block from the back with M4X30 screw. The height of the tray can be adjusted.

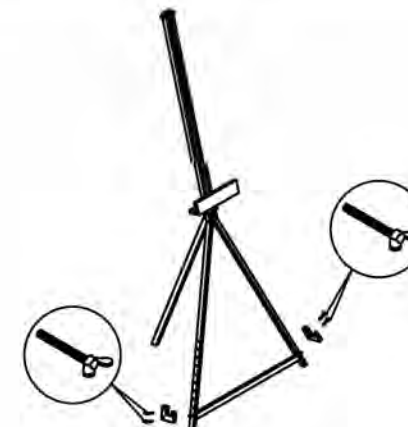

STEP 4

Select a desired height and attach 1 acrylic hook to each front leg using M4X25 screws.