




Tilting Wood Studio Easel with Wheels, Adjustable Height and Shelf

SKU: ARTSNFB2

V2.0

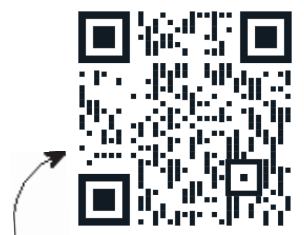

Scan the QR code to
visit the product page.

Included Hardware

A. (x1)	B. (x4)	C. (x4)	D. (x2)	E. (x2)	F. (x2)	G. (x2)	H. (x1)	I. (x1)
	 	 		 	  		 	
J. (x2)				K. (x2)				

Photos of Assembled Unit



Front

Oblique

Side


Back

Assembly

ⓘ **Note:** 2 people recommended for easiest assembly.


Assemble Base.

1. Assemble the frame of the base as shown. The wood tabs should face the inside of the unit.
2. Secure the four corners of the frame using the longest cam screws and cam locks (B). Tighten with the hex wrench (A).
3. Attach the diagonal arms to each side of the base using Phillips wood screws (D).

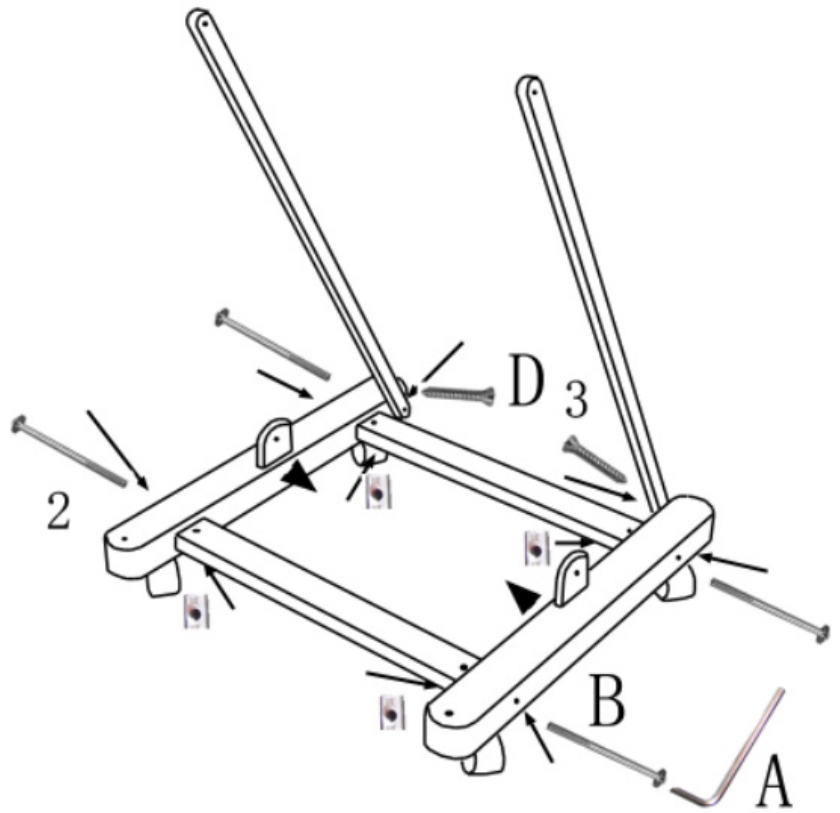


Assemble Main Easel.

4. Connect the top and bottom cross pieces to the vertical track.
Note: The metal track should face the front of the unit.
5. Insert cam locks (C), then connect the left and right side pieces using cam bolts. Tighten with the hex wrench.

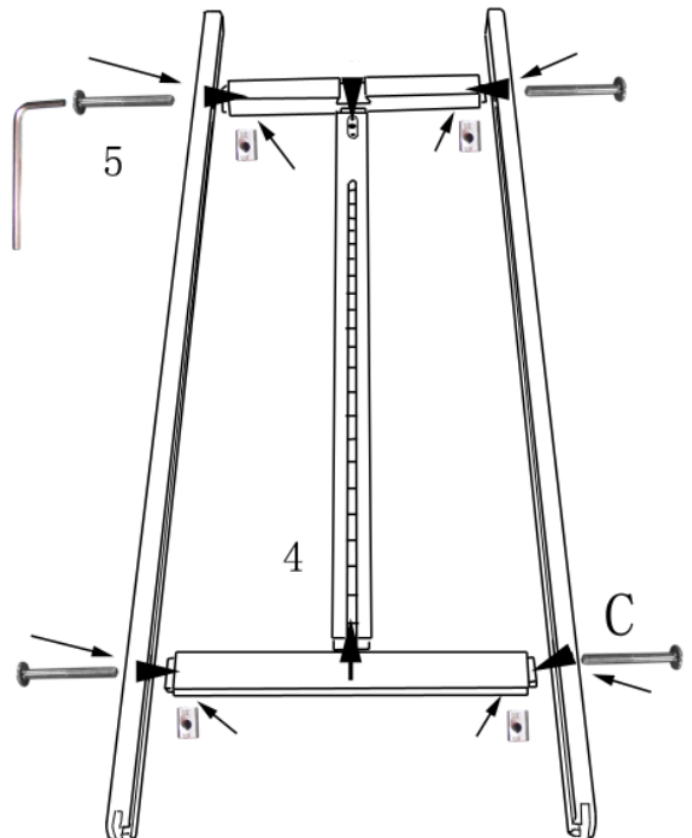


Attach Easel to Base.

6. Set the easel down onto the wood tabs on the base.
7. Insert a carriage bolt (E) and secure on the other side of the wood tab with a washer and lock nut.
8. Attach the diagonal support pieces to the easel with knobs, screws, and black plastic washers (F). Tighten the knobs until the easel is secure and the tilting function is locked.
9. Press a brass plate (G) into the corresponding holes at the top of the vertical track piece.

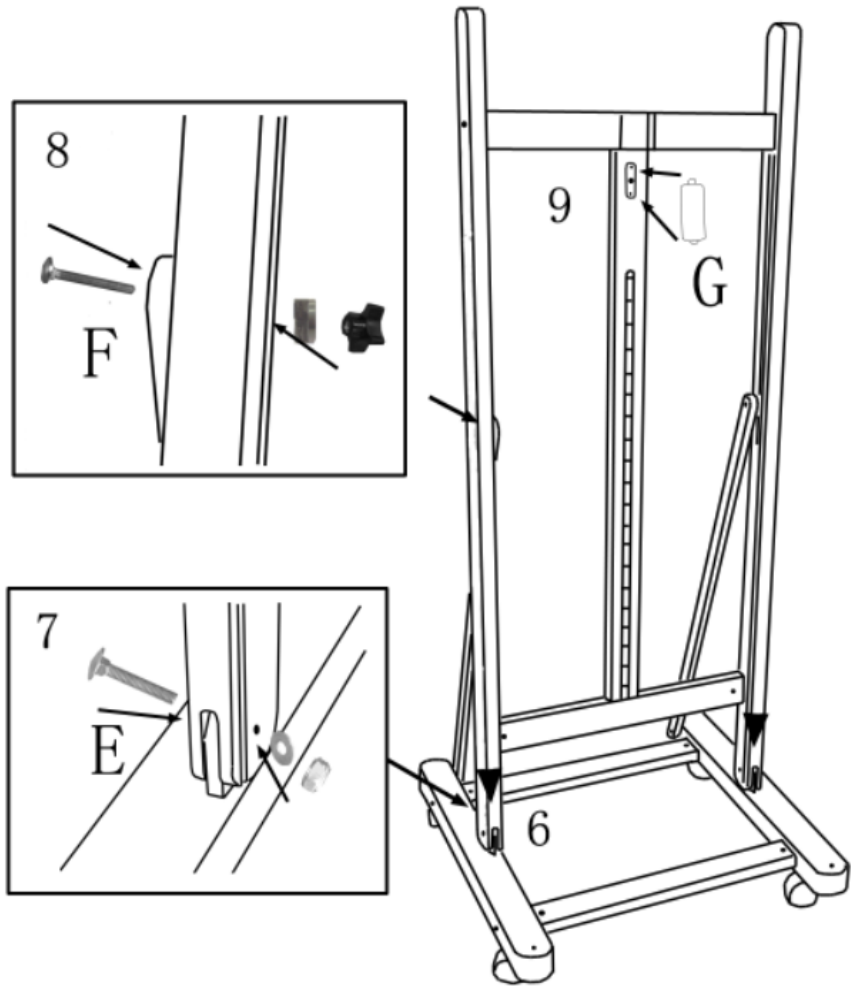


Assemble Adjustable Shelf.

10. Pull back the brass trigger on the underside of the shelf and place the shelf onto the wide post. Secure with Part H.
11. Insert the narrow post over the wide post and pull down until it reaches the shelf.

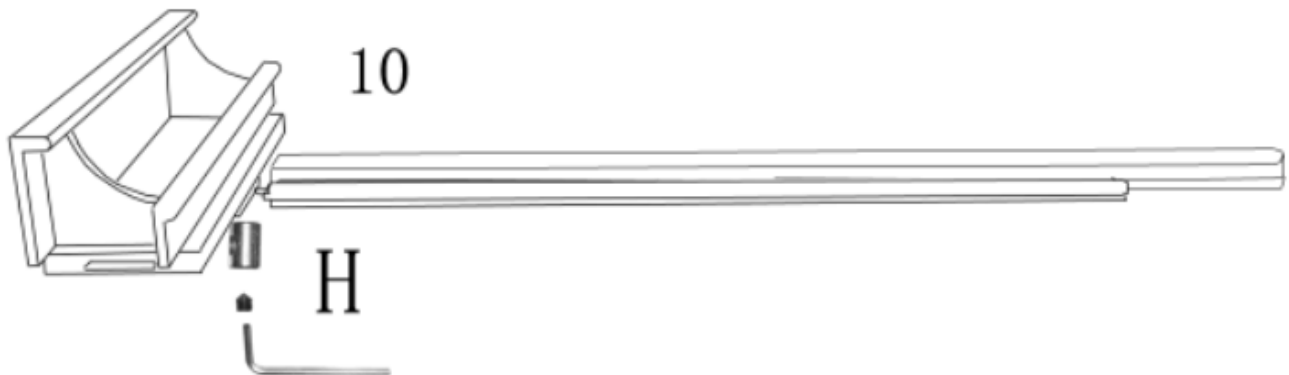

Attach Adjustable Posts and Shelf to Easel.

12. Insert a screw (I) into the pre-drilled hole in the posts. Insert knobs (J) into the back of the posts and finger-tighten until the posts are locked.
13. Press a brass plate into the wooden header, then slide onto the vertical post.
14. Install the brass levelers (K) into the front base to prevent movement of the casters.

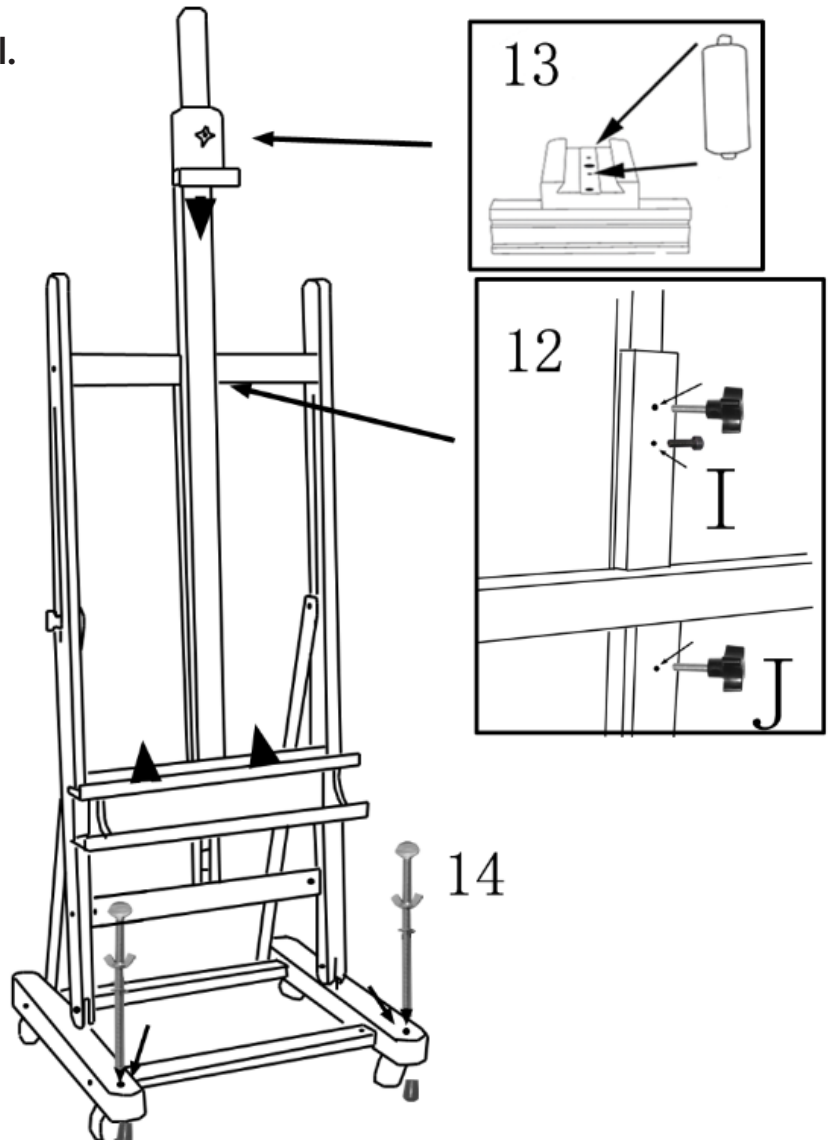

Note: To adjust the height of the easel, first loosen adjustment knobs and raise the posts to the desired height. Then pull the brass trigger to raise the shelf. You may need to further adjust the height of the posts in order to raise the shelf to full height.

Assembly is complete.