




DISPLAYS2GO
CONNECTING PEOPLE & BRANDS WITH THE WORLD

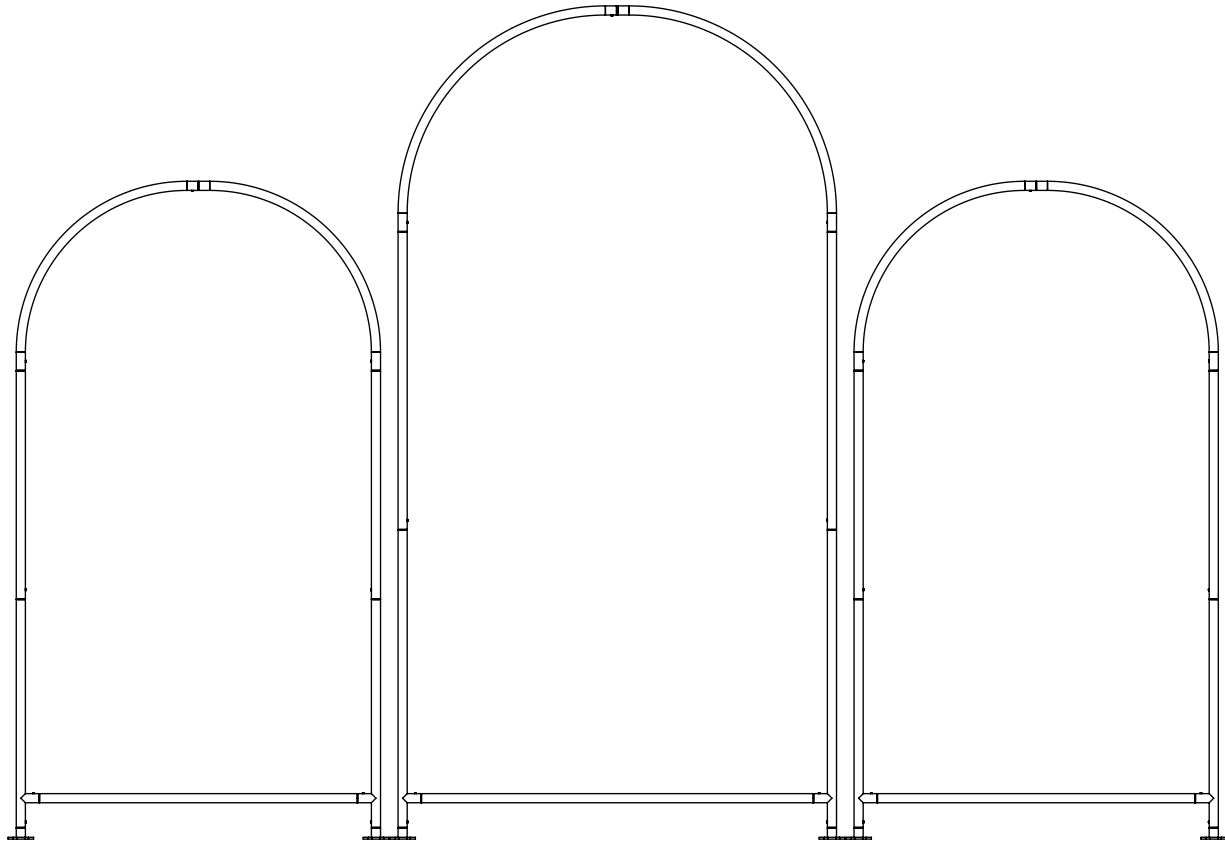

MODULAR FABRIC ARCH WALLS

Assembly Instructions

SKU: AS3WALLFG (3 Arch Shaped Walls, Frame Only)


SKU: AS3WFSSCP (3 Arch Shaped Walls, Single-sided Custom Graphics)

SKU: AS3WFSDCP (3 Arch Shaped Walls, Double-sided Custom Graphics)

Scan the QR code to
visit the product page.



PARTS LIST

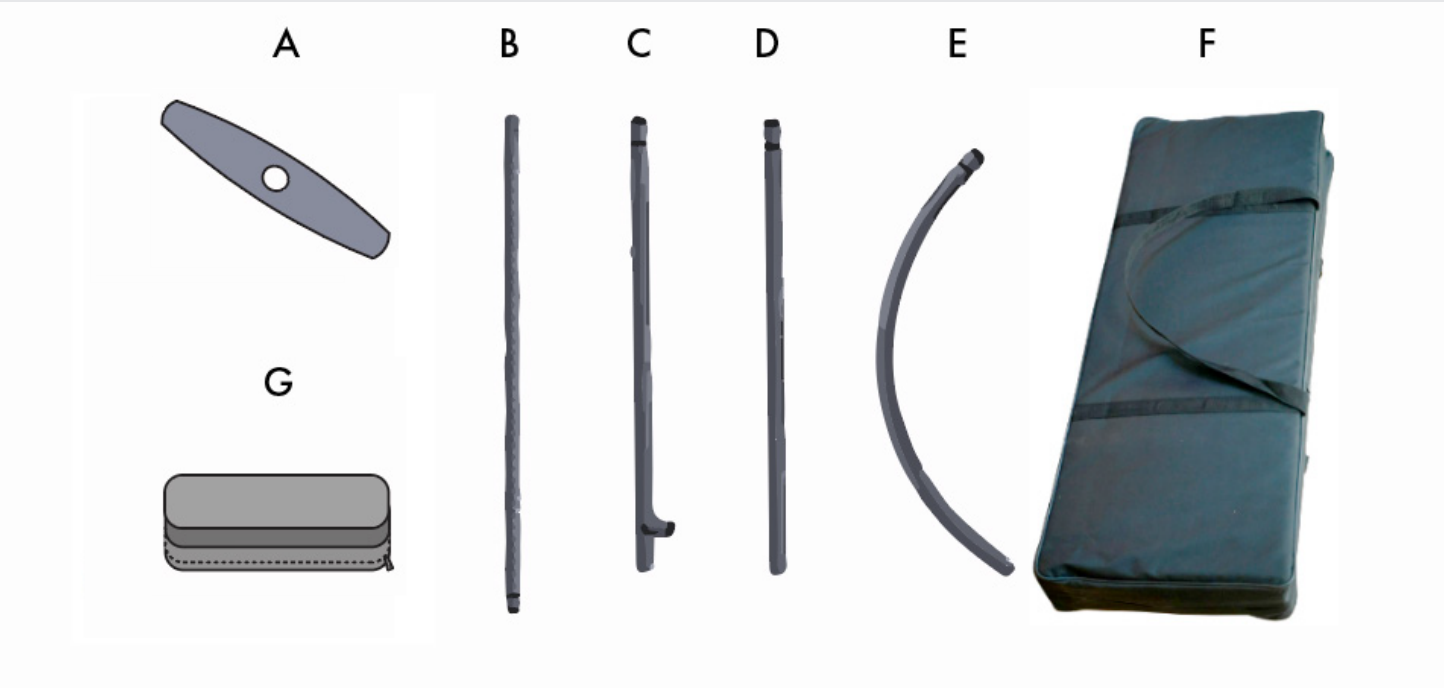

! **NOTE:** The 90" Arch has slightly longer poles than the 70" Arches. Before assembly, sort poles using numbered stickers, making sure there are 2 sets of poles for the 70" Arches (2A-2E) and one set for the 90" Arch (1A-1E).

PART	TOTAL QUANTITY
A. Foot	6
B. Stabilizing Bar	3
C. Lower Poles	6
D. Middle Poles	6
E. Arch Poles	6
F. Soft Travel Bag	1
G. Fabric Banner (Optional Accessory)	3

No tools required for assembly.

If you have any questions regarding our products, please visit us at www.displays2go.com or contact Displays2go customer service at 844-221-3388.


ASSEMBLY

Step 1. Poles are labeled with stickers for easy assembly. Identify parts needed for 1 arch wall.

Step 2. Lay out poles on a flat and level ground as shown below.

Step 3. Press down the push button on 1 pole and insert into the joining pole. Connect all parts and make sure the frame is secure.

Step 4. Assemble the remaining arch walls the same way.

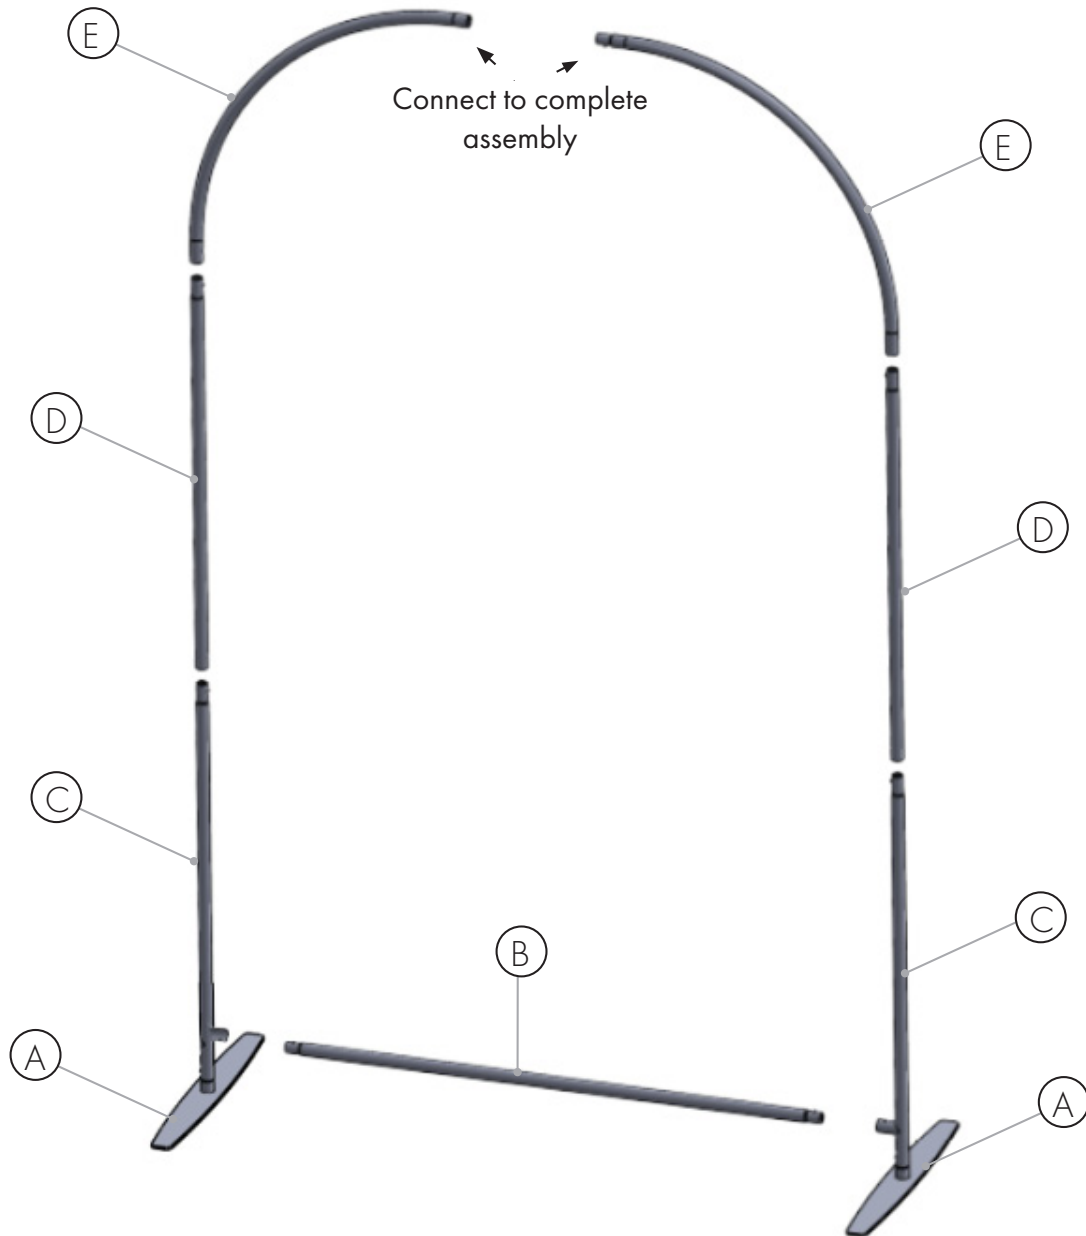

INSTALL FABRIC BANNERS

Pull fabric banner over the top of the arch and pull down to the floor. Adjust fabric as necessary, then zip bottom to secure in place.

! NOTE: Fabric banners not included with base package (AS3WALLFG - Frame Only).