



DISPLAYS2GO

ACRYLIC SIGN HOLDERS WITH STEEL CABLE SYSTEM, WALL INSTALLATION

Assembly Instructions

8.5" x 11" Landscape: CAB11851X1W, CAB11851X2W,
CAB11851X3W, CAB11851X4W

8.5" x 11" Portrait: CAB85111X1W, CAB85111X2W,
CAB85111X3W, CAB85111X4W

11"x17" Landscape: CAB17111X1W, CAB17111X2W,
CAB17111X3W, CAB17111X4W

11"x17" Portrait: CAB11171X1W, CAB11171X2W,
CAB11171X3W, CAB11171X4W

22"x28" Portrait: CAB22281X1W, CAB22281X2W

Cable Hanging System Wall-Mount Hardware: CSKITWTOW



Components



A. Cable, 16ft (x2)



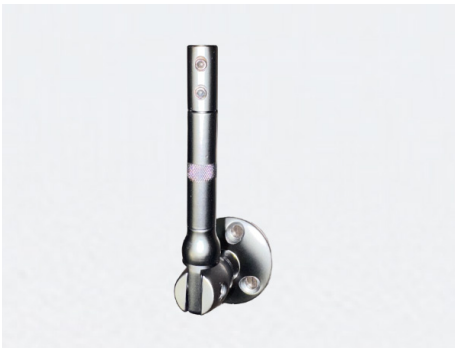
B. Acrylic Panel (x1)*



C. Hex Set Screws, Long (x6)*
Hex Set Screws, Short (x4)*



D. Top Wall Mount (x2)



E. Bottom Wall Mount (x2)



F. Panel Gripper (x4)



G. Hex Wrench (Small, Large)



H. Mounting Hardware Bag x1

! Tools Needed:



Tape Measure



Drill

**Quantities listed are per frame and vary based on the total number of acrylic sign holders.*

⚠ Safety Information

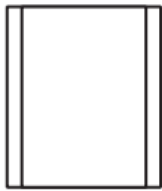
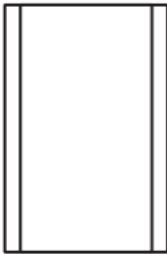
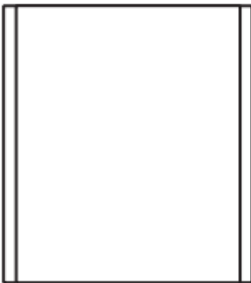
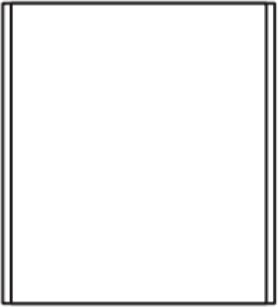
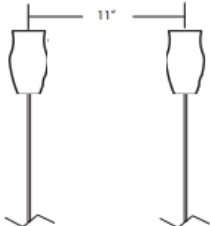
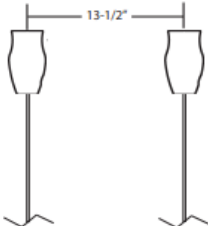
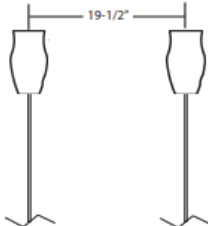
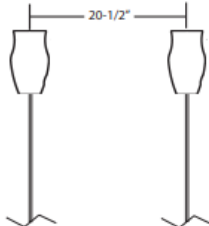
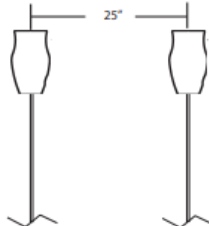
The most important part of the cable system is how it is mounted. **The cable system must be secure and able to support the weight of the assembly.**

Read and understand all instructions before beginning assembly. Displays2go is not responsible for incorrect installation or use of the product.

Assembly

1. Prepare for Installation.

Determine the location for the cable system. Mark the location for each top and bottom wall mount, keeping the appropriate distance between the mounts. Measure your acrylic panels or refer to the diagram below.


DISTANCE BETWEEN CABLE CENTERS				
 CABP8511	 CABP1185	 CABP1711	 CABP8511X2	 CABP1185X2
	 CABP1117		 CABP1824	 CABP2228
 11"	 13-1/2"	 19-1/2"	 20-1/2"	 25"
11"	13-1/2"	19-1/2"	20-1/2"	25"

Some wall materials require concrete anchors (included) to support the required weight. Determine the requirements of your wall before beginning assembly.

2. Install Wall Mounts.

Drill pilot holes at the marked wall locations.

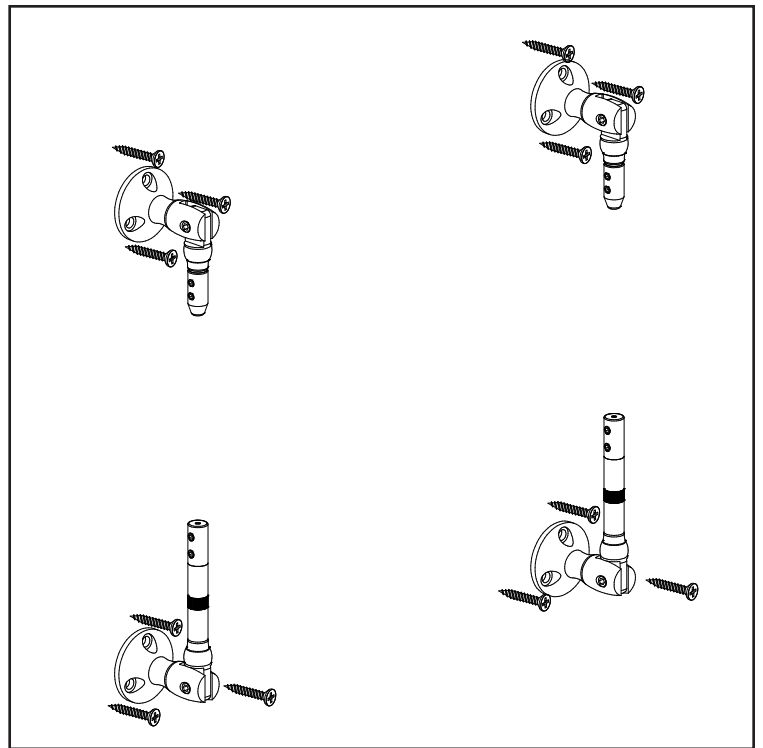Install the top and bottom wall mounts with screws and concrete anchors (if applicable).




3. Insert Cables.

Use the small hex wrench to loosen the set screws in the top wall mounts.

Insert the end of the cable into the top wall mount, making sure it is fully inserted and not blocked by the set screws.

Fully tighten the set screws to secure the cable.

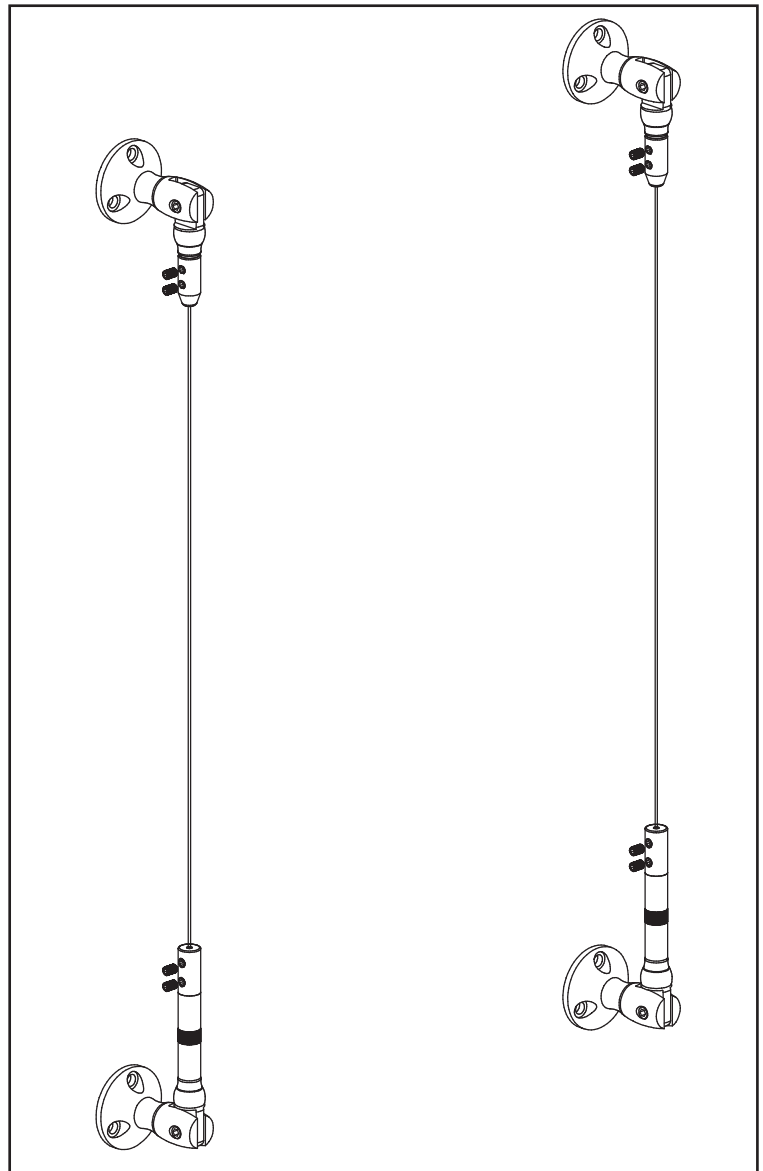
Repeat this procedure to install the cable into the bottom wall mounts.



4. Install Panel Grippers.

Press the cable into the channel of the panel gripper. Insert a short hex screw over the cable and tighten with the large hex wrench.


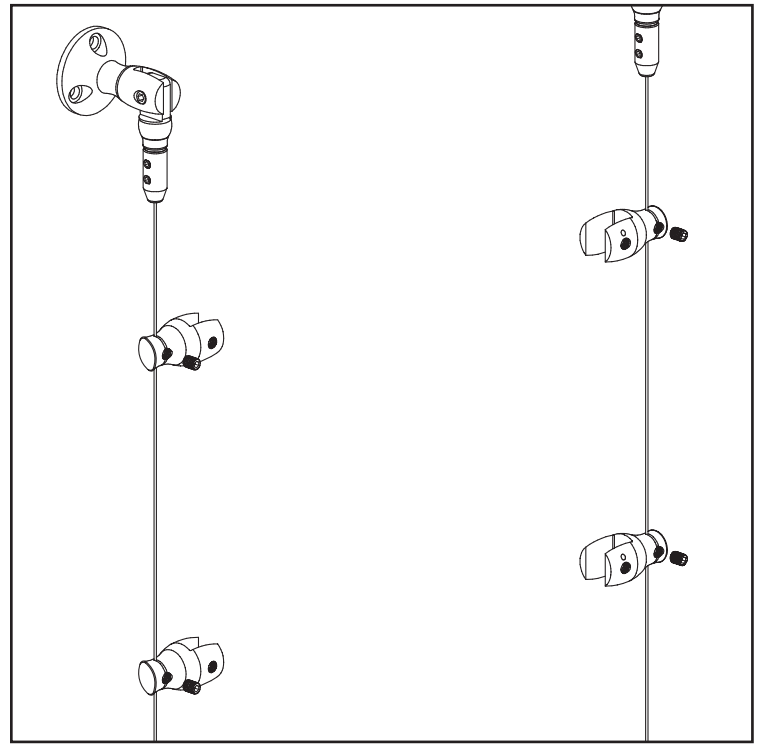
Repeat this procedure on the other side, making sure the pair of grippers are both level.



5. Install Acrylic Signage Panel.


Insert the acrylic panel into the panel gripper. Insert a long set screw and tighten until the acrylic panel is secure.

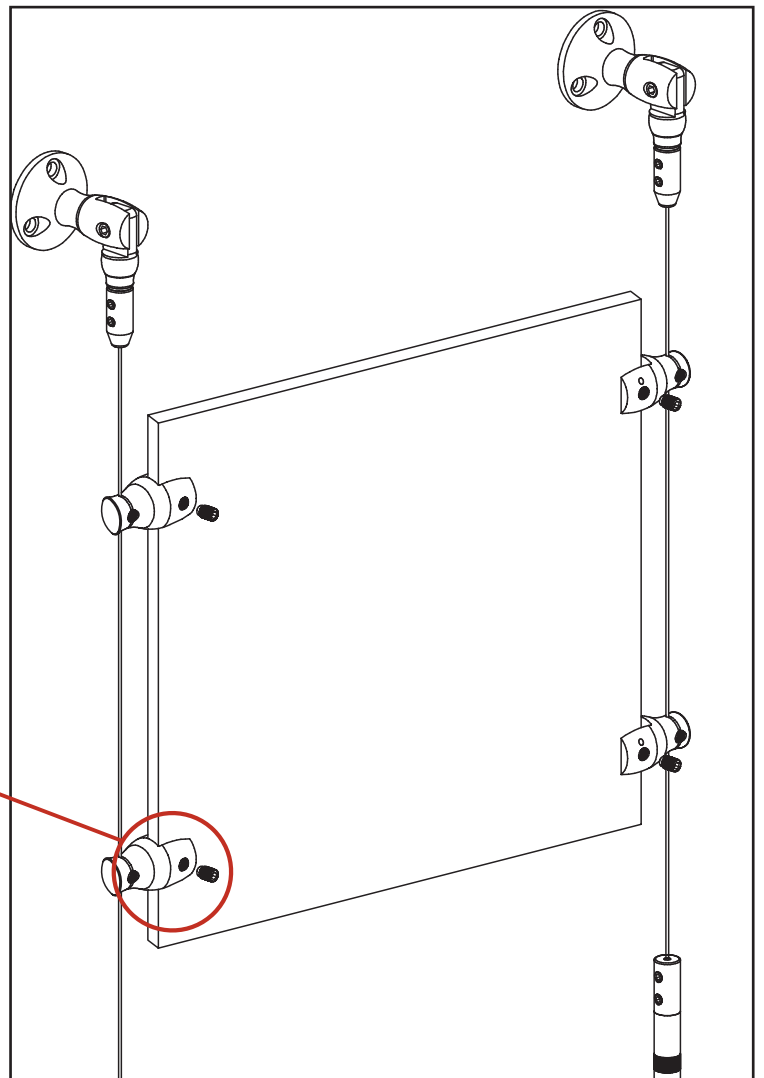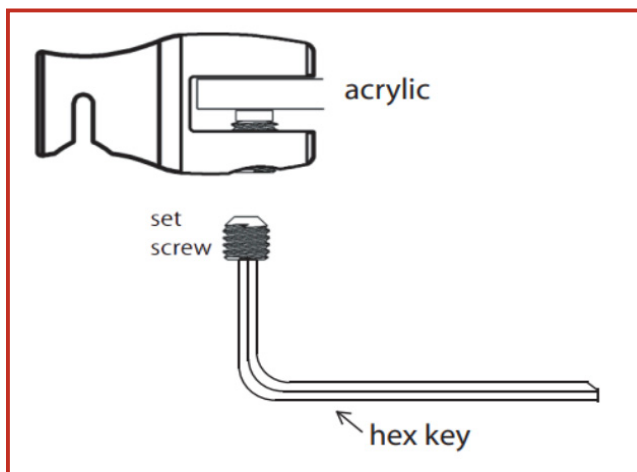Repeat for all 4 panel grippers to secure an acrylic panel.



6. Insert Your Signage.

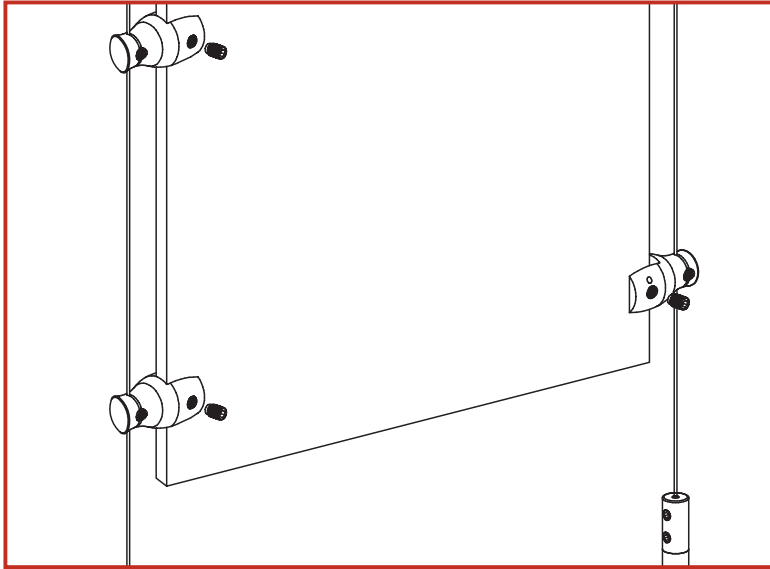Slide your custom signage into the acrylic panels.



- ⓘ Movement for this type of display is normal. Once all acrylic accessories are installed, turn the collar on the bottom cable mount to tighten or loosen the cable tension.



Assembly is complete.