



CARING FOR YOUR DISPLAY CASE

Maintenance Guide

V2.0

- **Indoor Use Only.**

Do NOT expose the product to the outdoor weather conditions. Cover the product during outdoor transport. Avoid excess humidity.

- **Cleaning.**

To clean the product body, moisten a soft cloth or non-abrasive sponge with water, glass cleaner, or other neutral detergent. Gently wipe the product. Do not use aggressive detergents such as degreasers or acids. To clean the glass, use a soft cloth with glass cleaner or rubbing alcohol to gently wipe the surface.

- **Shelf Adjustment.**

First, adjust the shelf supports to your desired height. To place the shelf, carefully lift it and, while keeping it tilted, set it on the supports, ensuring that the short sides are placed on first.