


Max Load: 275.5 lbs



Warning: Unplug the power cord while not using it and keep out of reach of children.

Max Load: 6.6 lbs

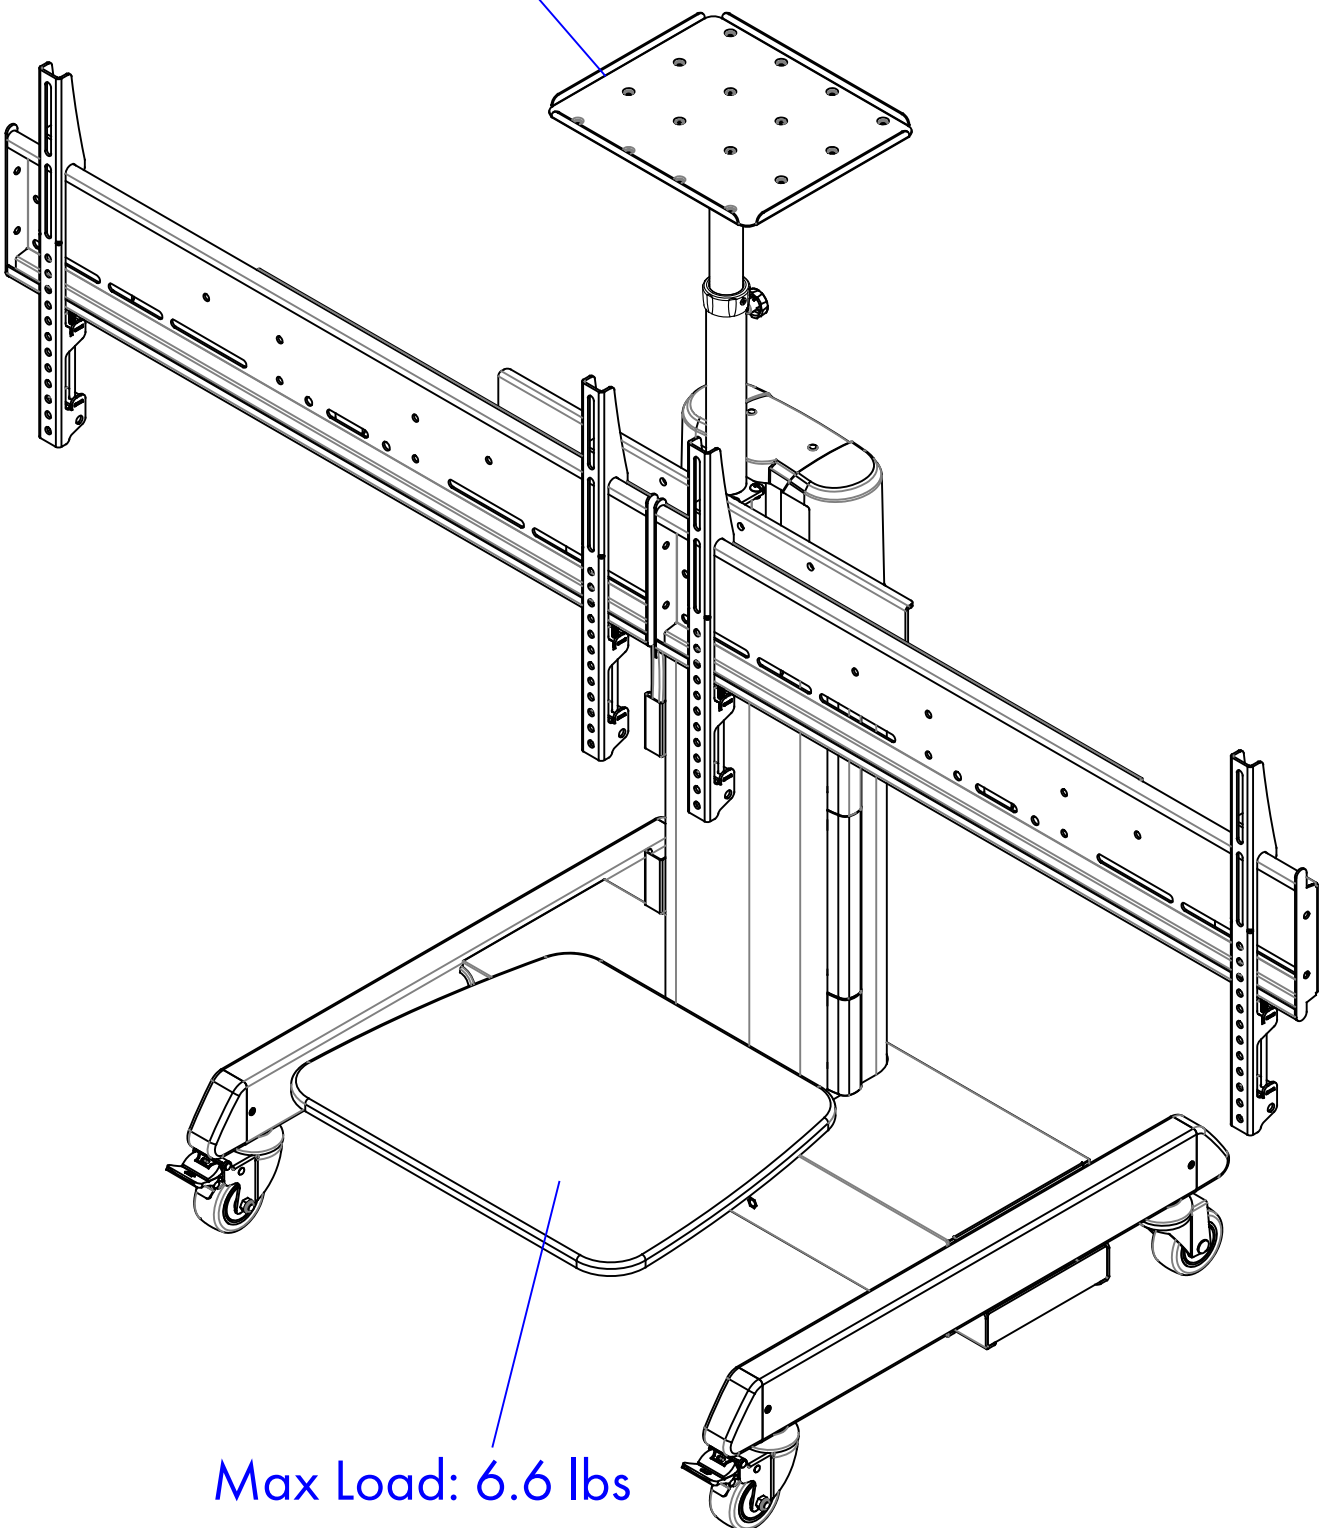


Max Load: 6.6 lbs

Part List:

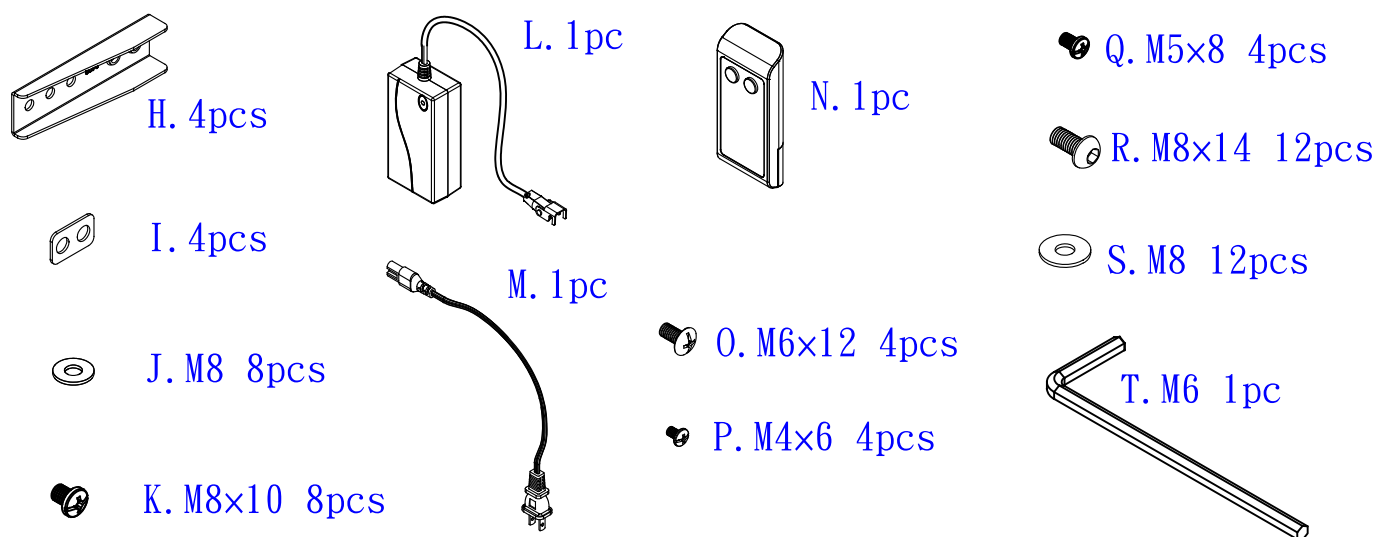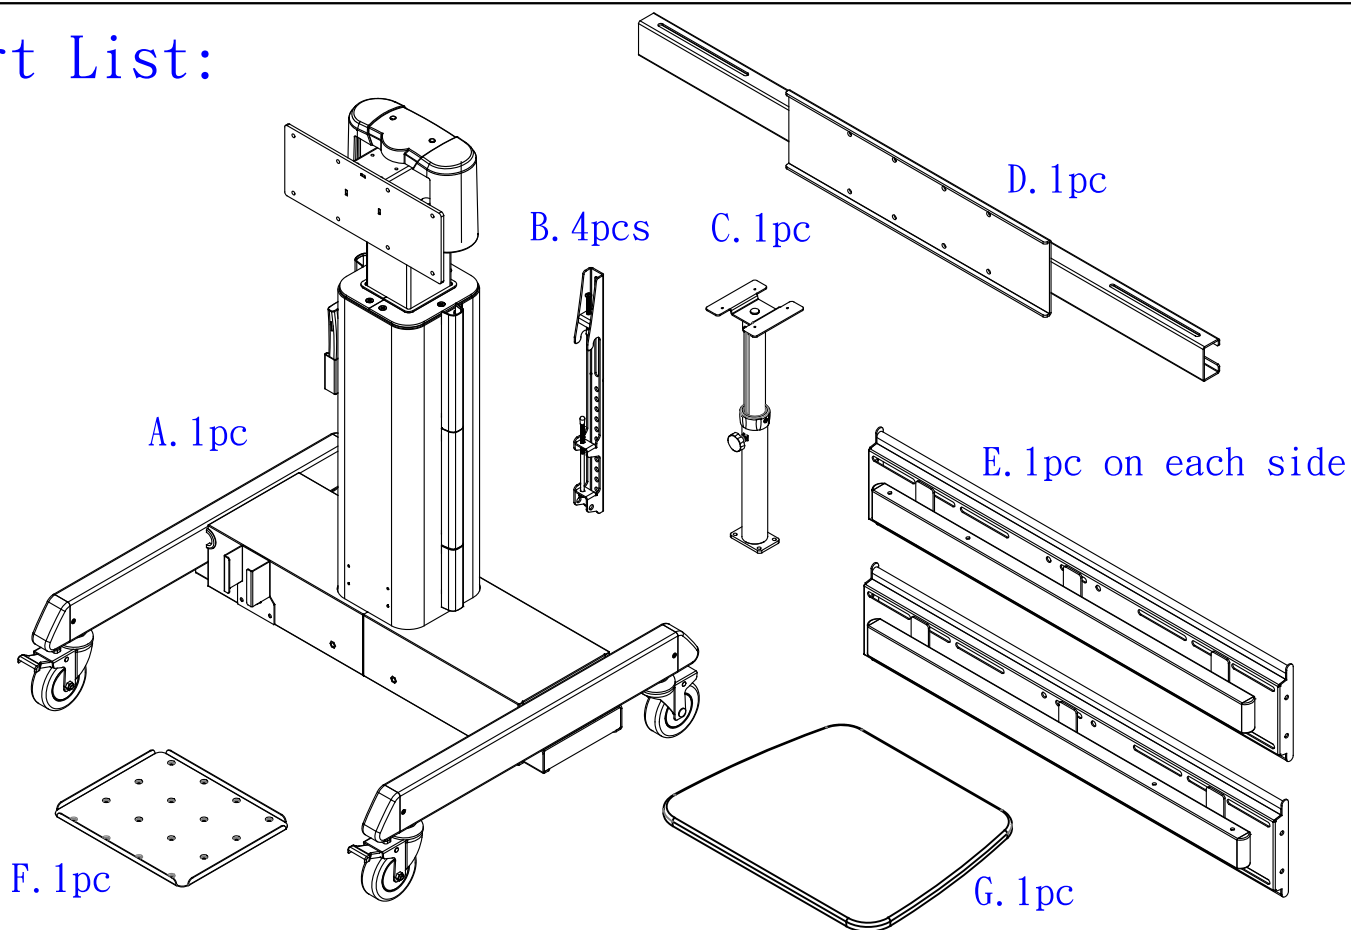

U. screws *2

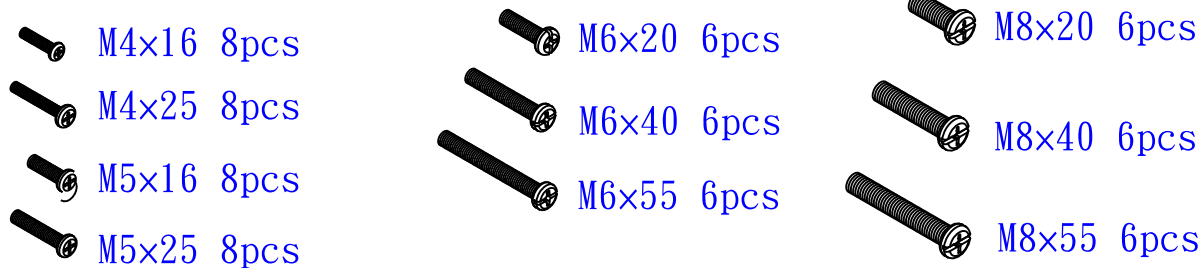


V. Washers *2




W. Spacers *2




1.

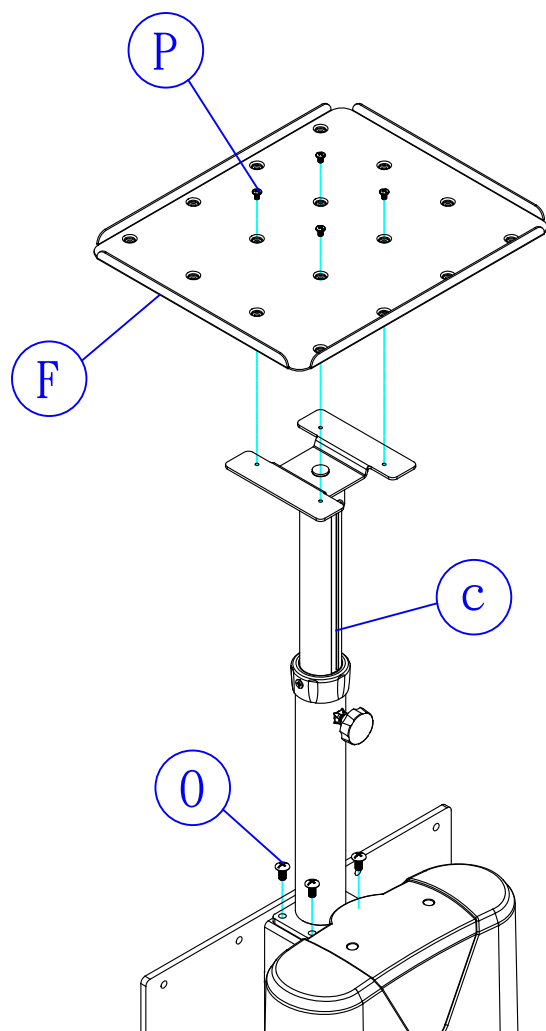

2.

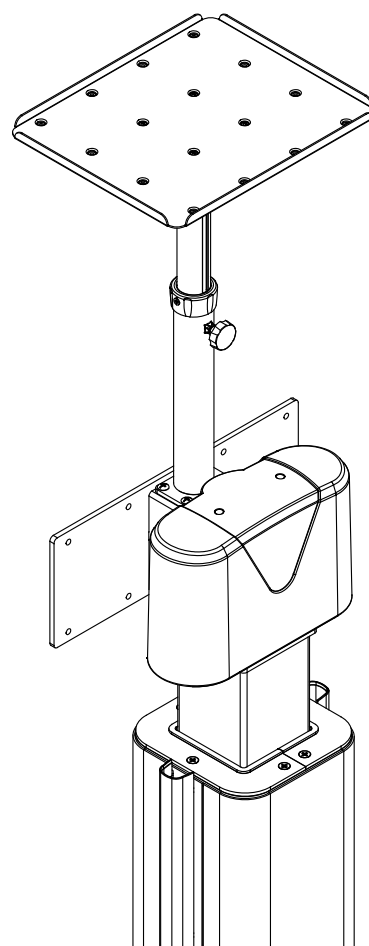


3.

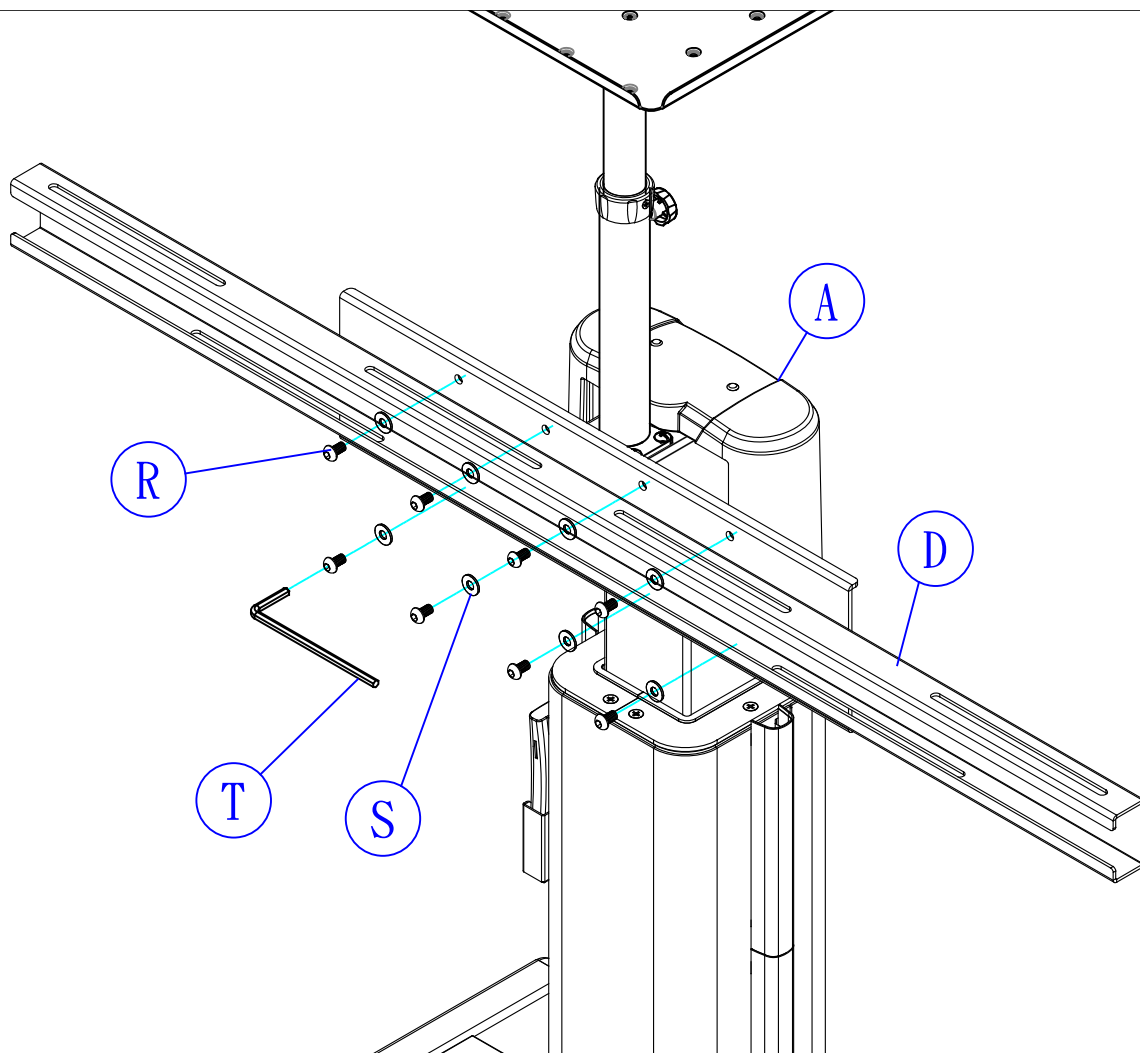


4.


This side up.

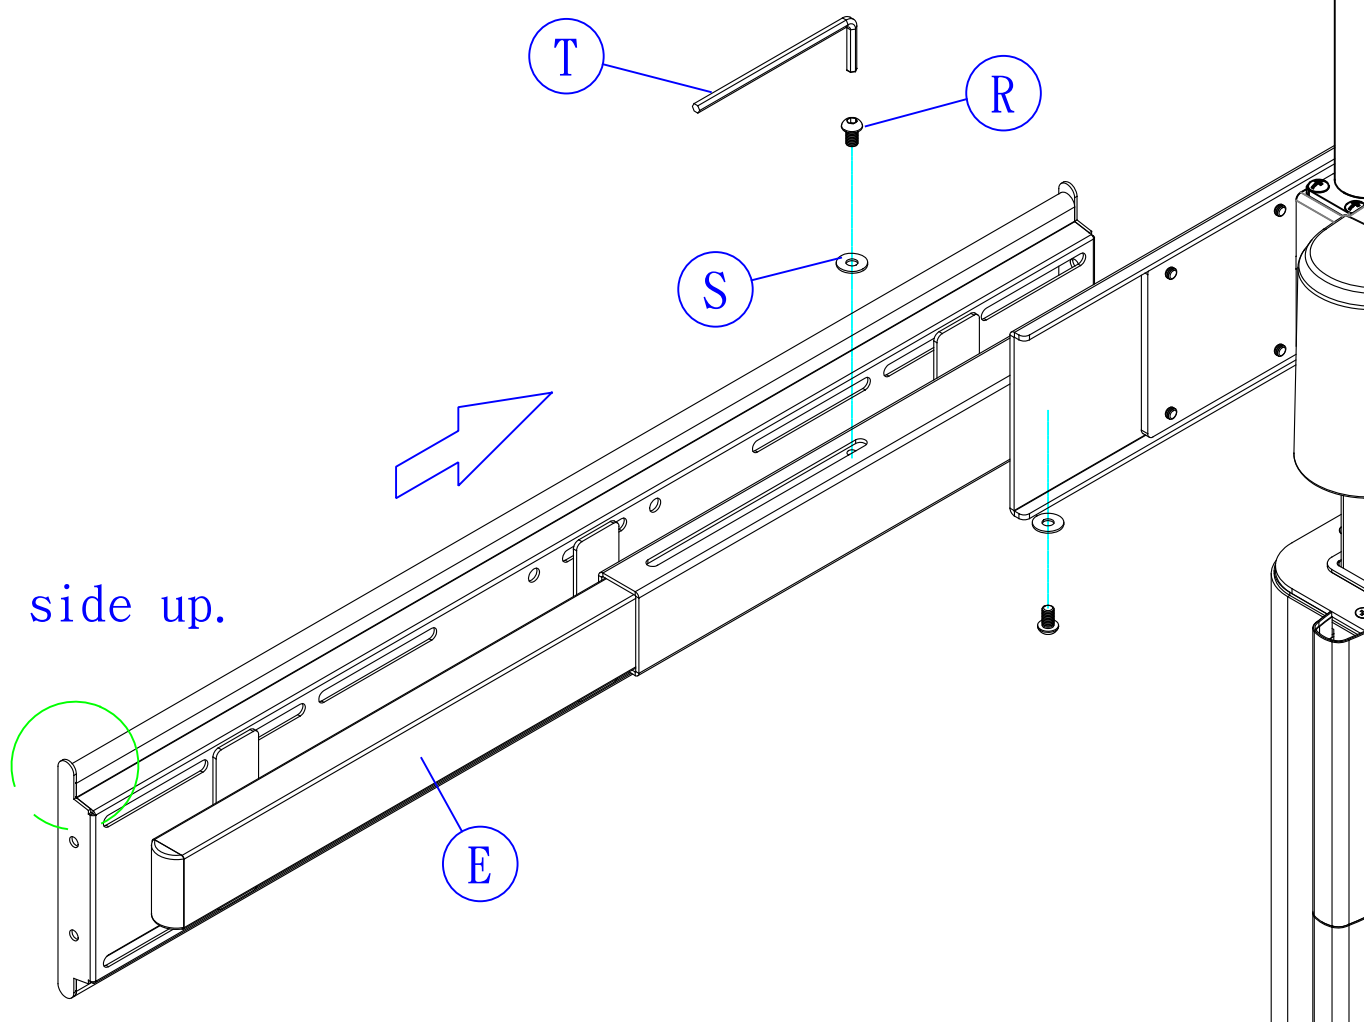

5.

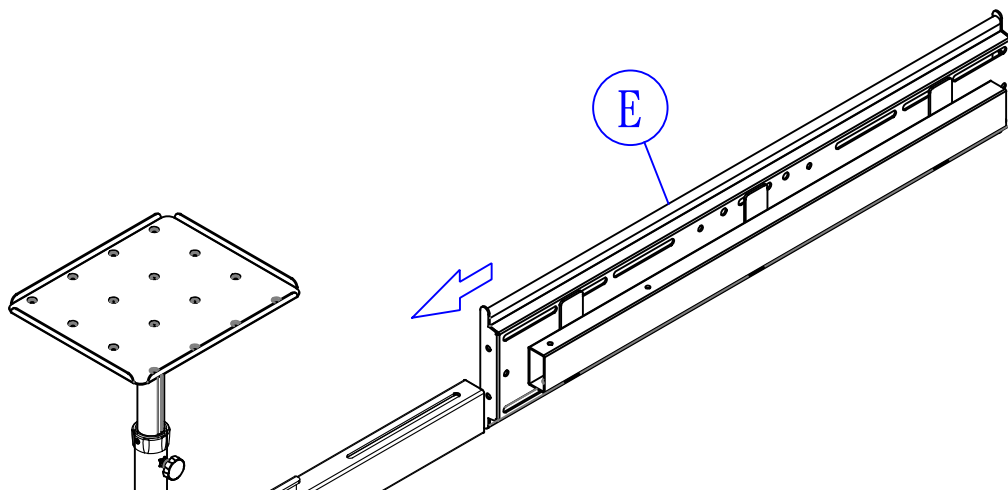


6. Angle Adjustable
-25~+25°

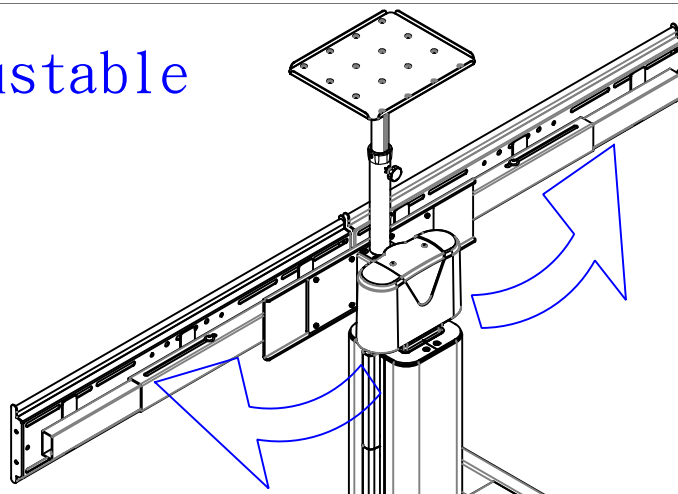

7.


TV

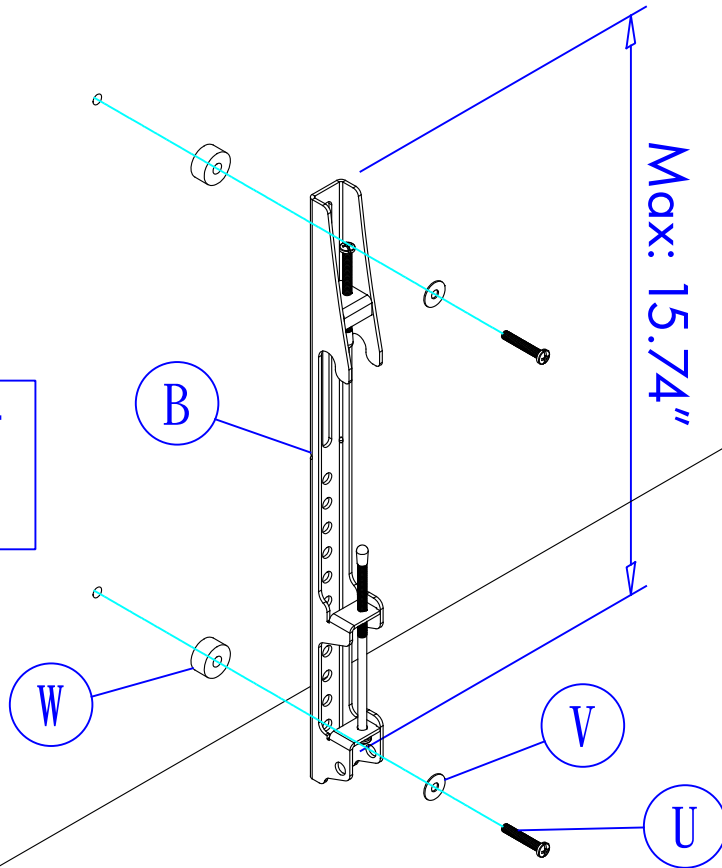

Add spacers
if necessary.


8.

TV

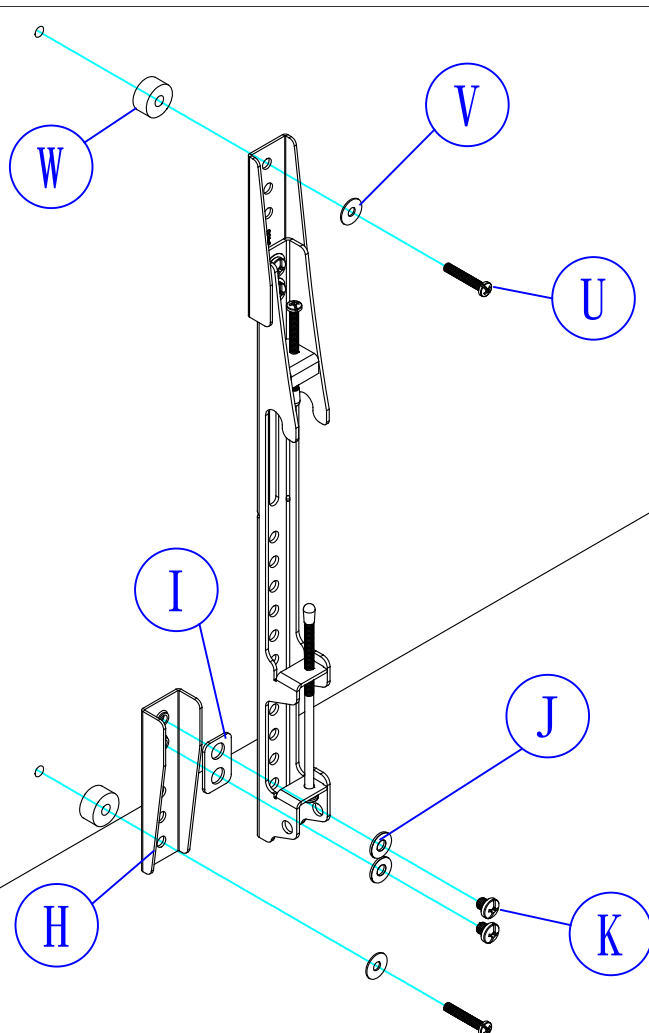


Add extension
brackets if
necessary.

9.

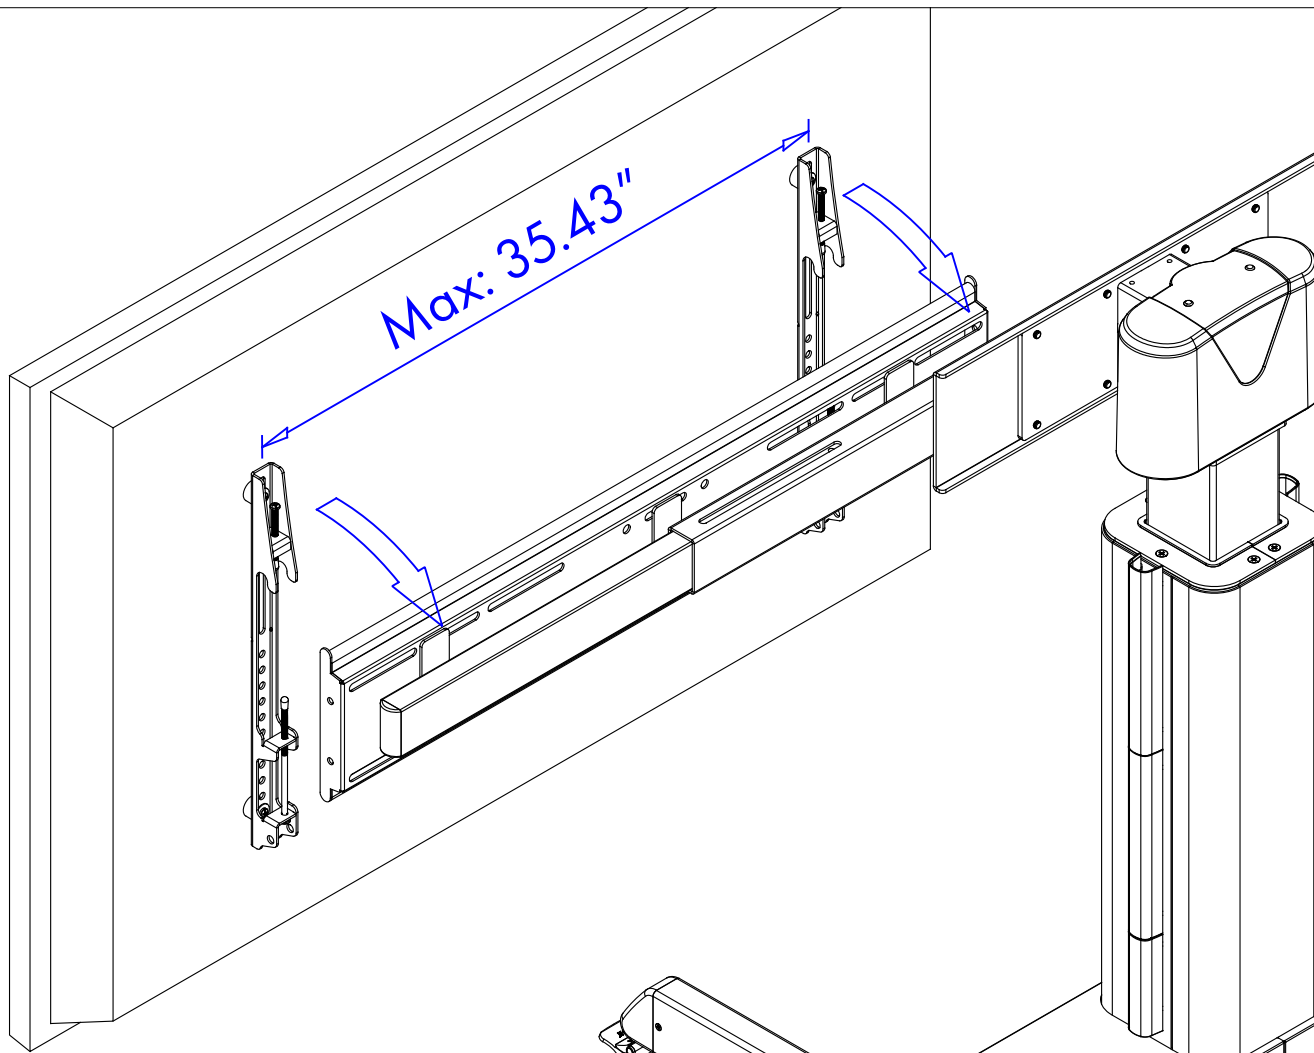





10.

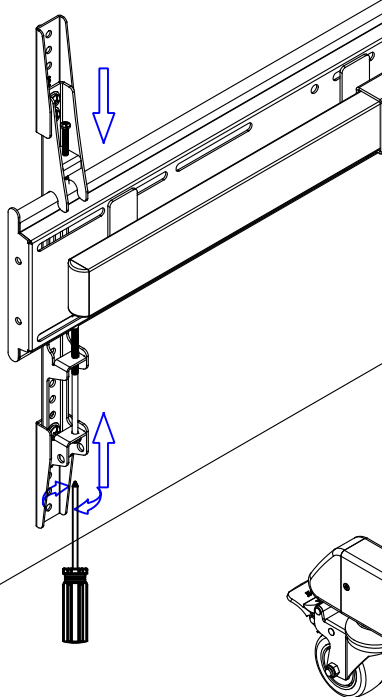


After installing the screen, fasten the holder with Phillips screwdriver.

11.

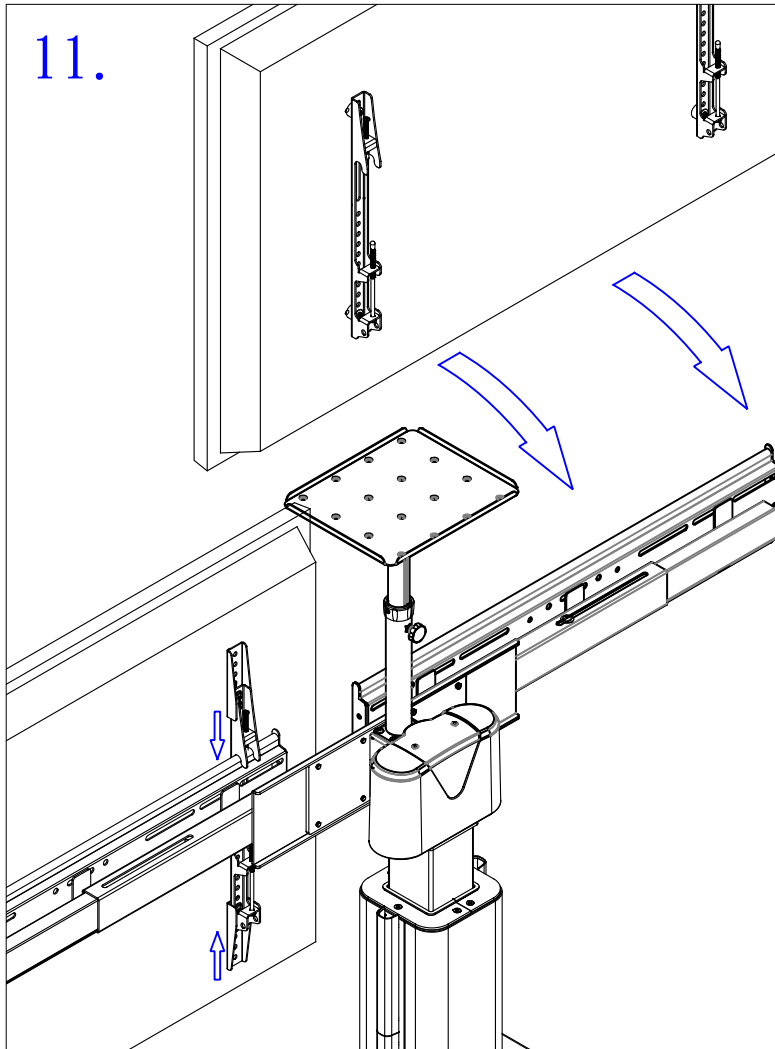


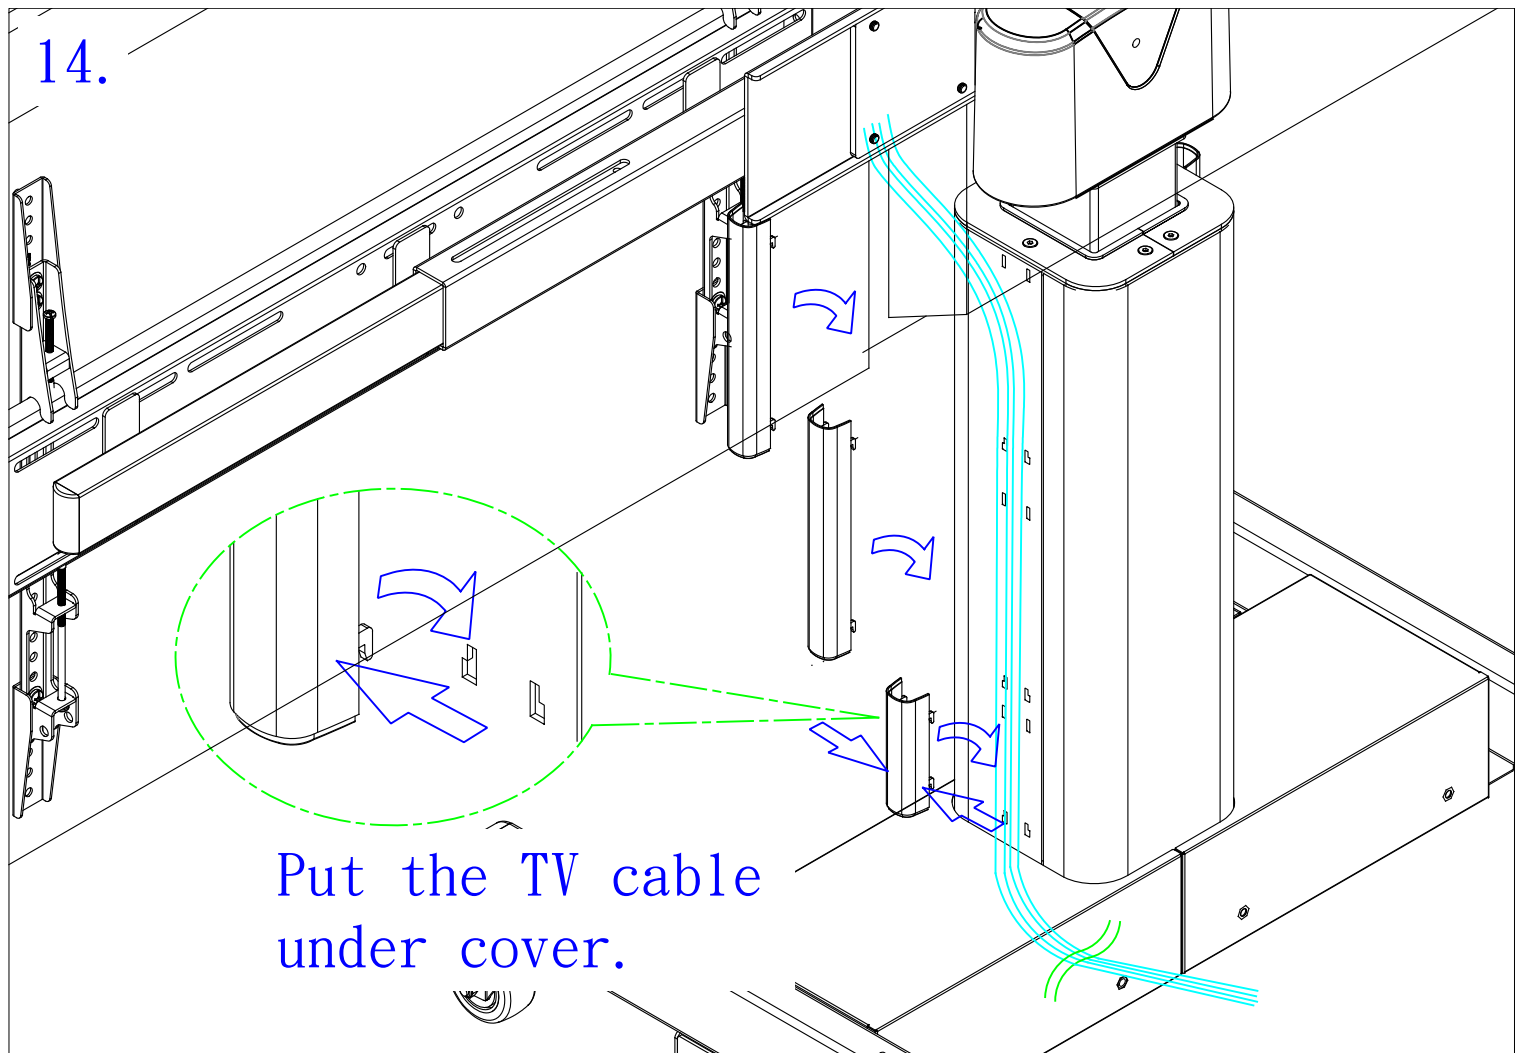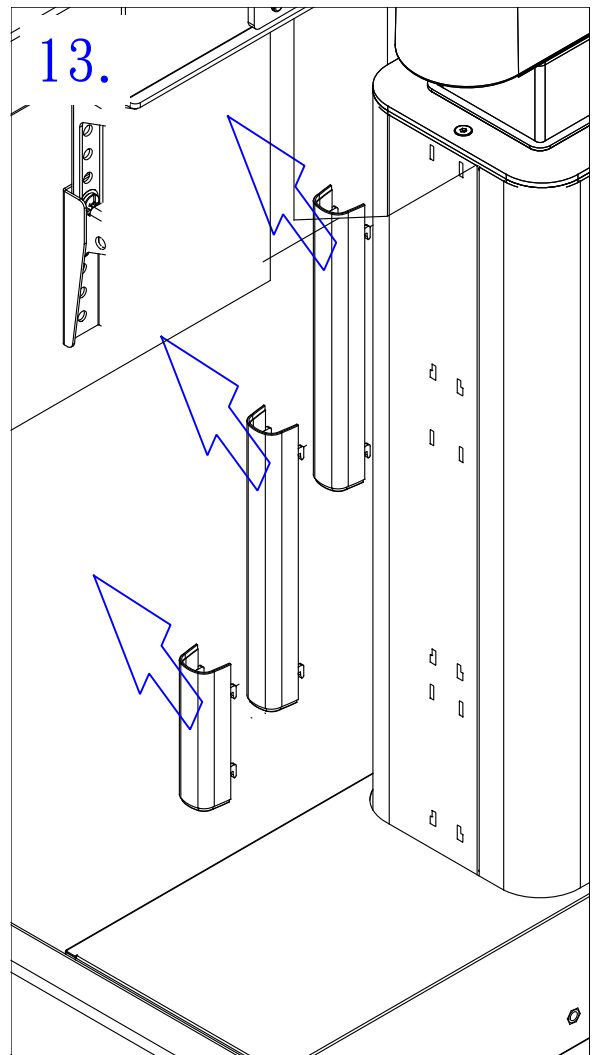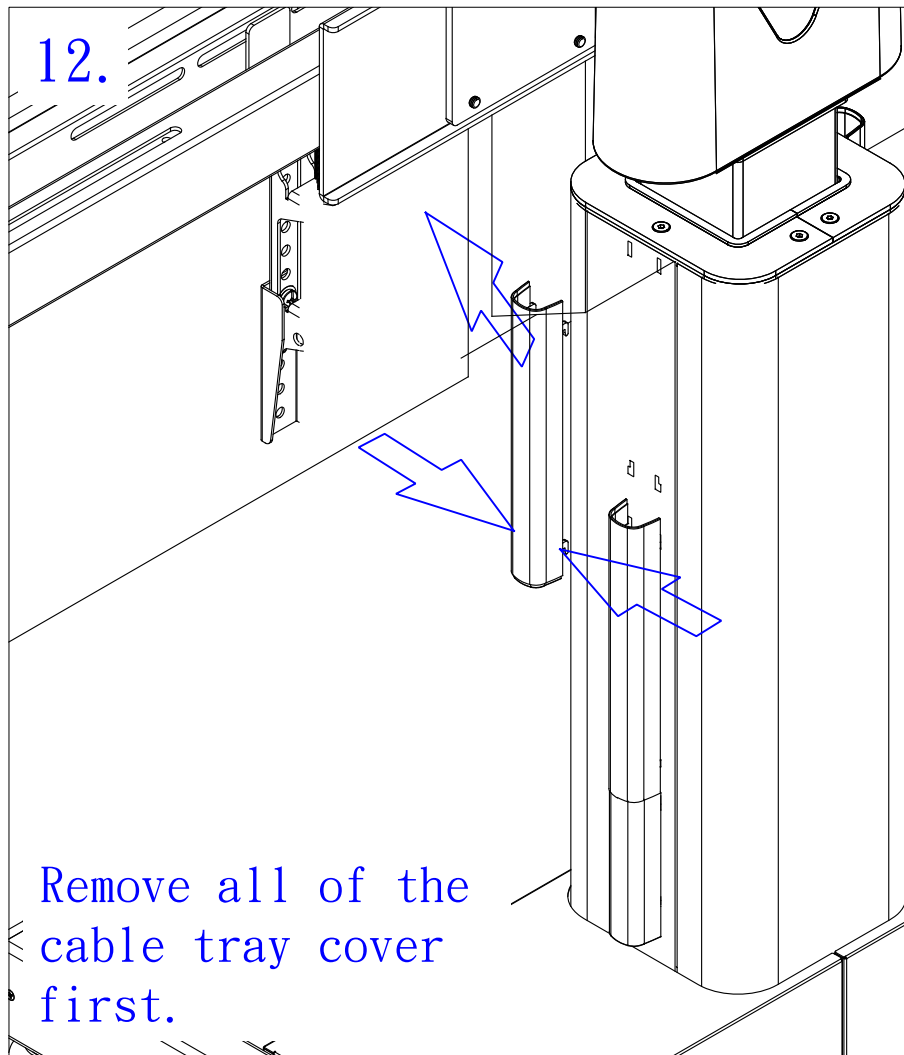


15.

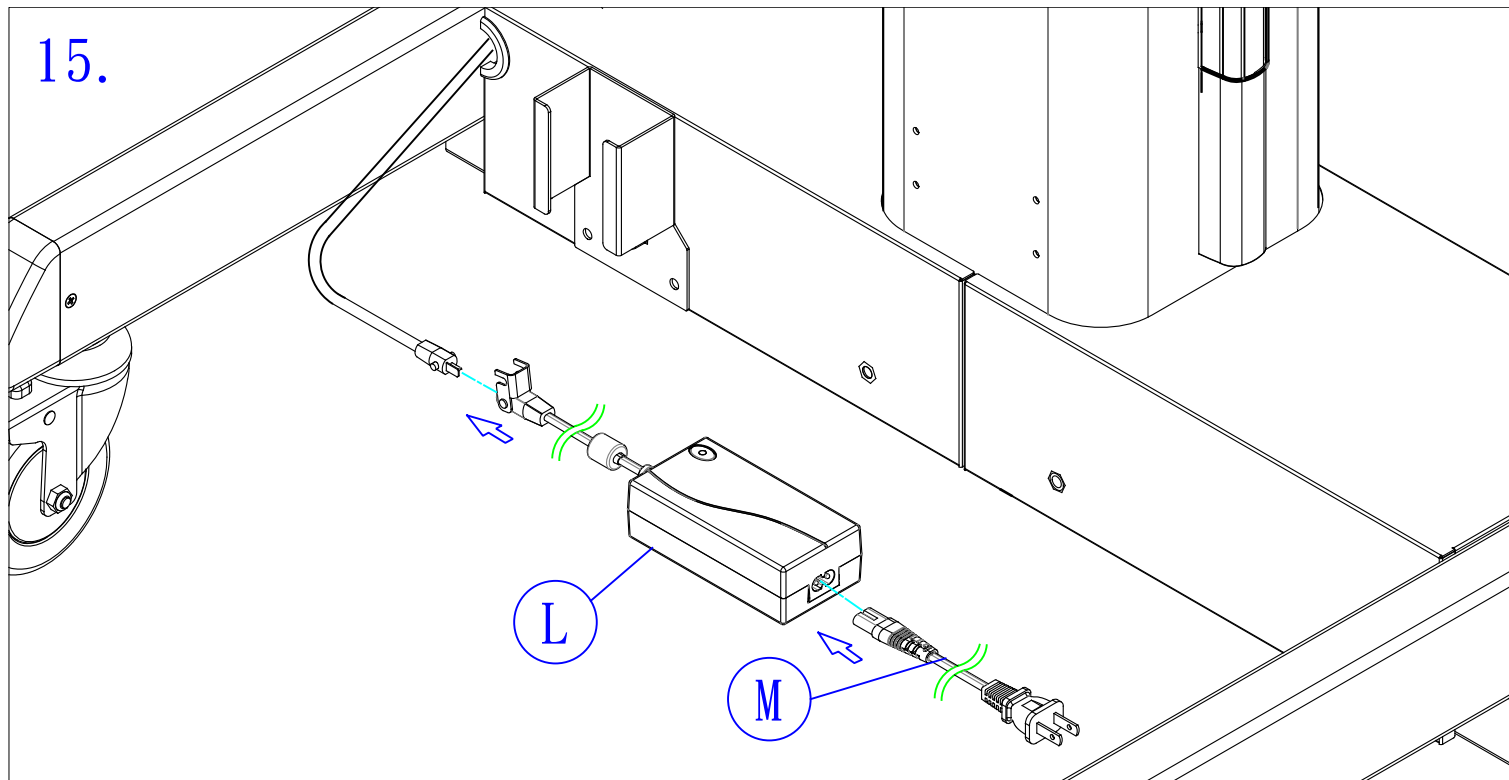


16.

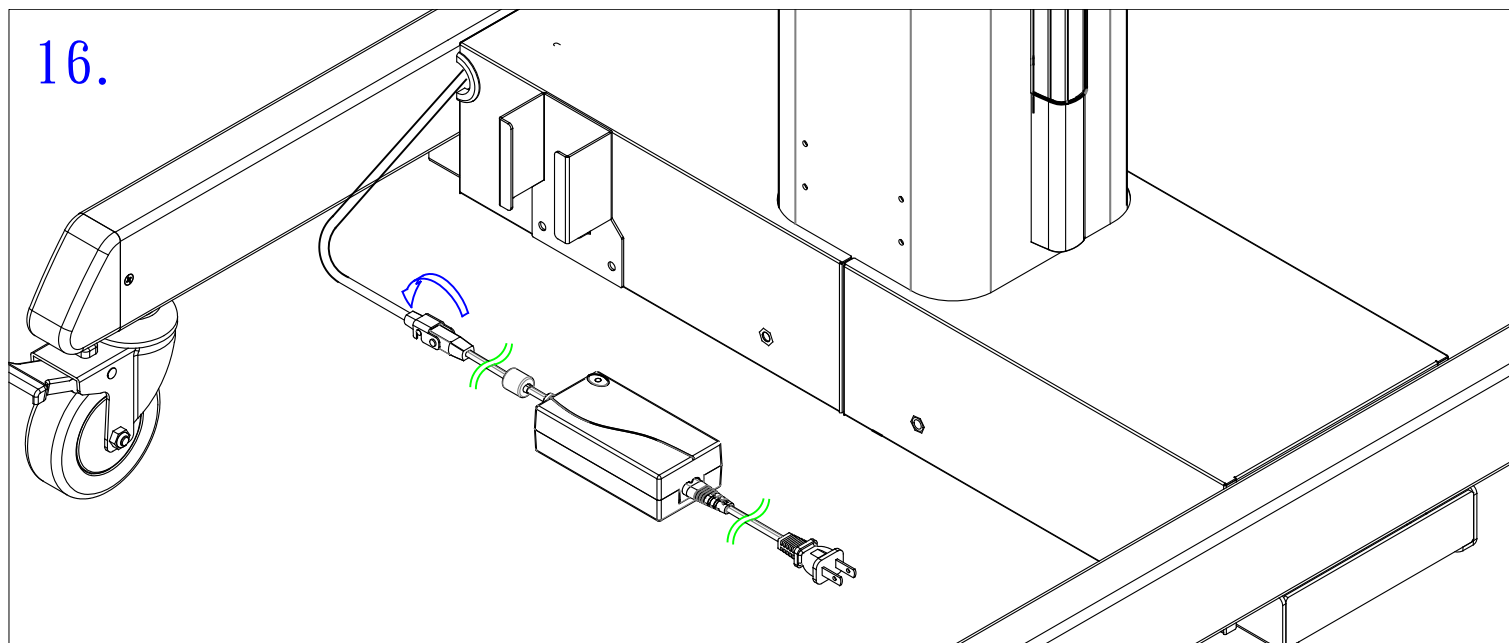


17.

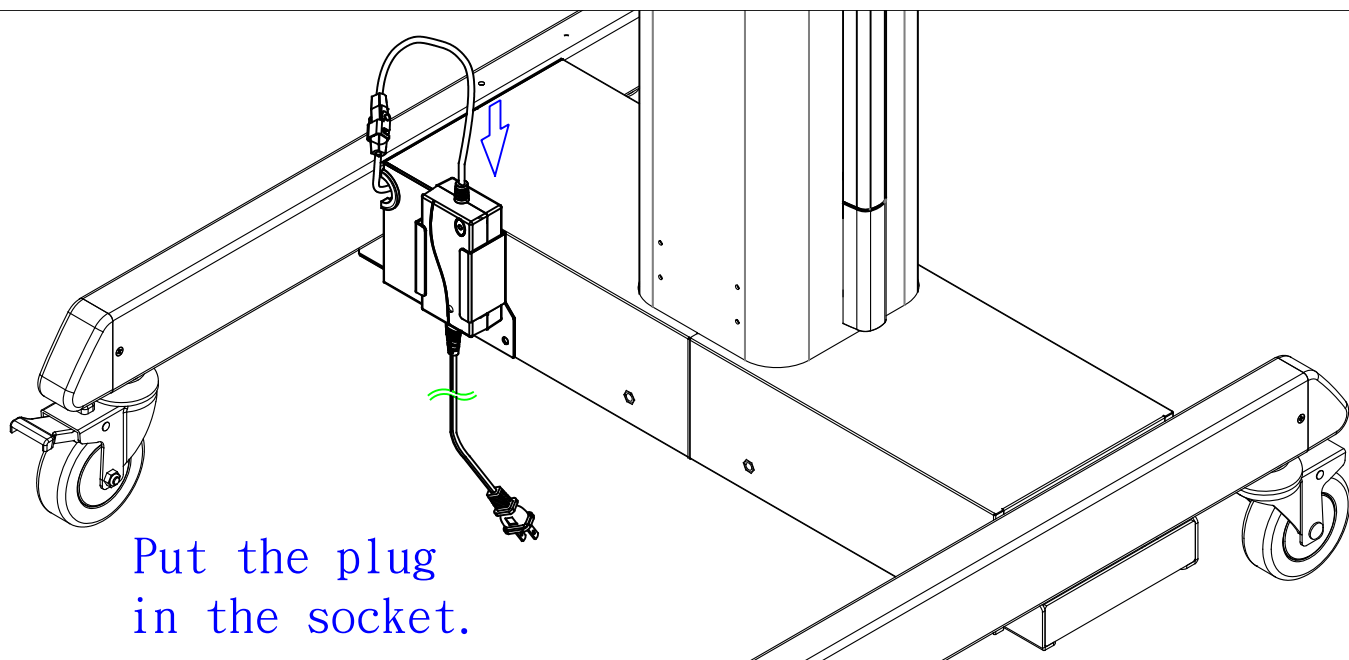

18.

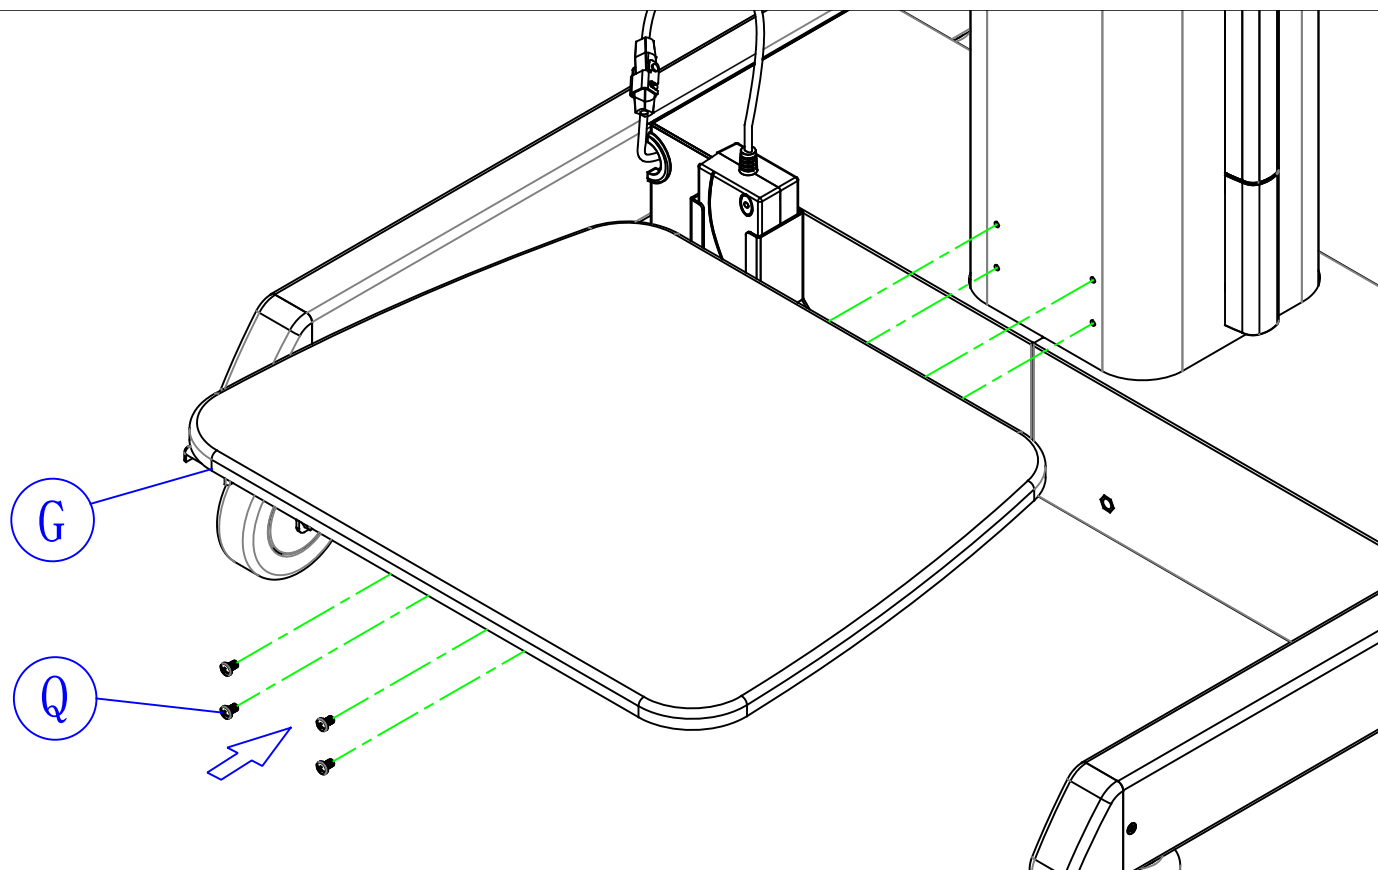

19.

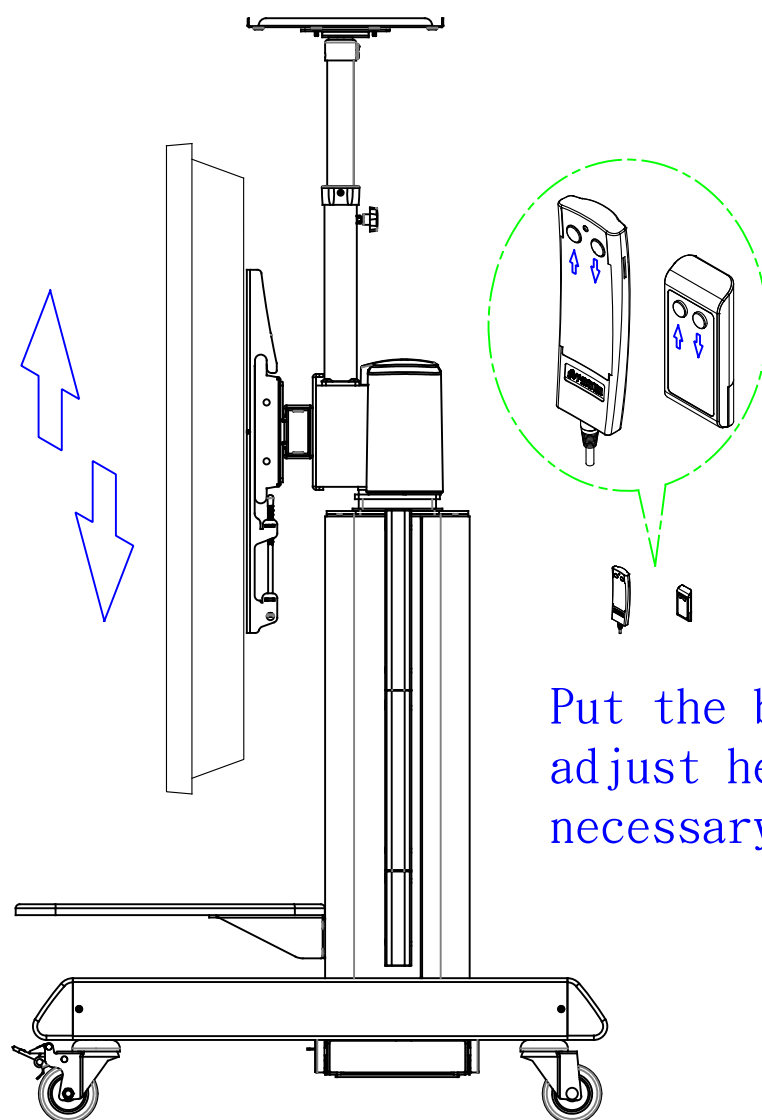

Put the bottom to
adjust height if
necessary.