


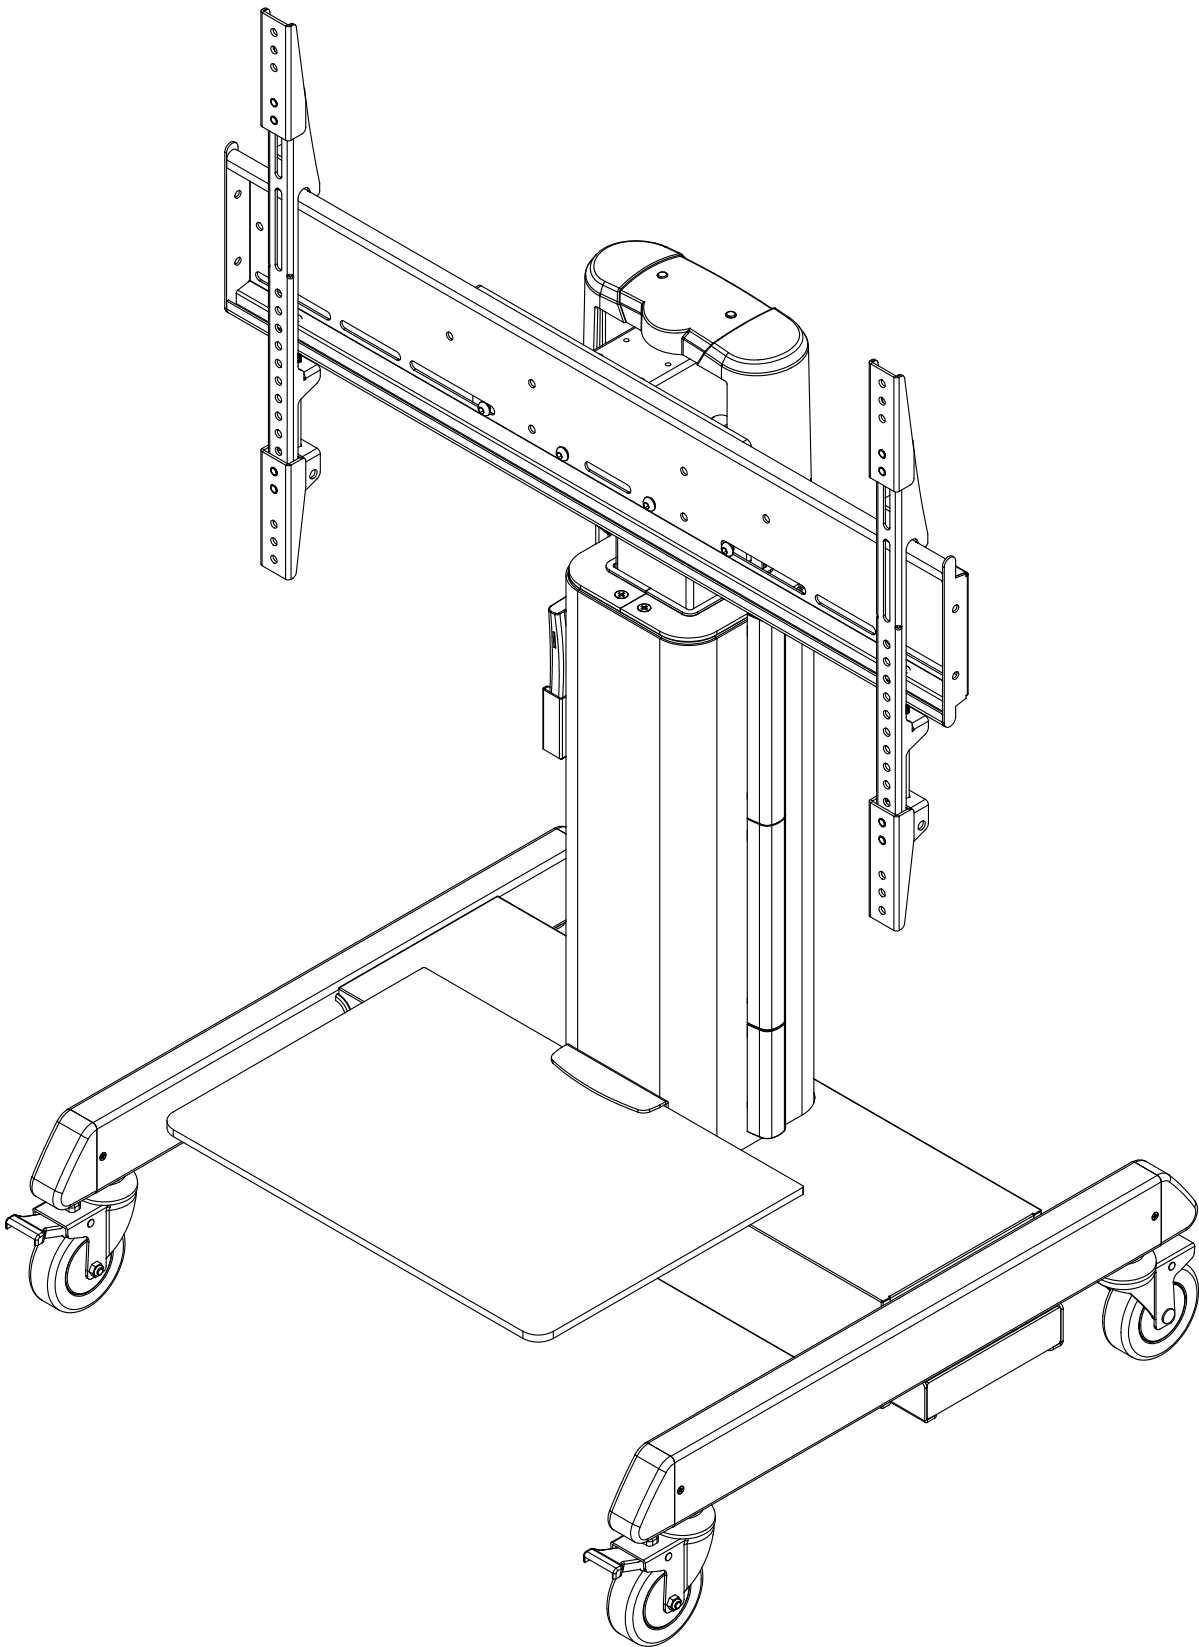


Max Load: 275.5 lbs


Warning: Unplug the power cord while not using and keep out of reach of children

Part List:

A. 1pc

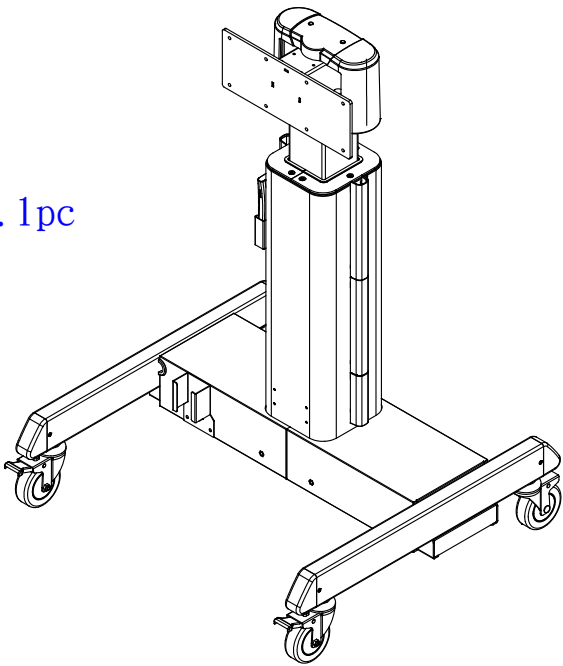


B. 1pc

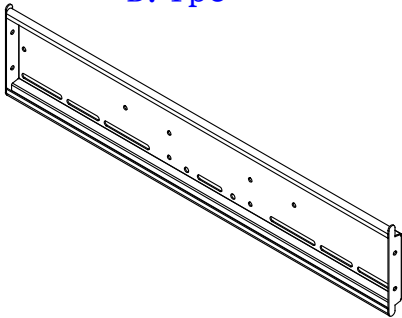


C. 2pcs



D. 1pc

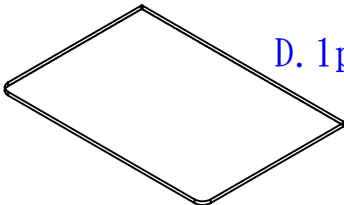


E. 1pc

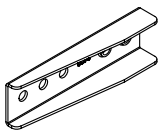


F. 4pcs



G. 4pcs

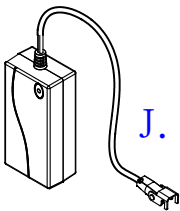

 J. 1pc



L. 1pc



N. M5x8 4pcs



O. M8x14 8pcs




P. M8x8pcs




H. M8x8pcs




I. M8x10 8cs

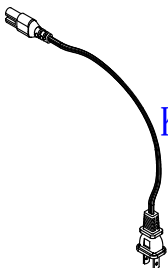

K. 1pc

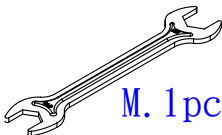

M. 1pc

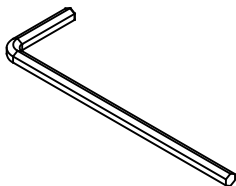

Q. M6x1pc

R.



M4x16 8pcs



M6x20 6pcs



 
M8x20 6pcs



M4x25 8pcs




M6x40 6pcs




M8x40 6pcs



 M5x16 8pcs



M6x55 6pcs

 

M8x55 6pcs



M5x25 8pcs

S. Washers



M5x8pcs




1/4"x6pcs

T. Spacers




M8x12pcs

1.

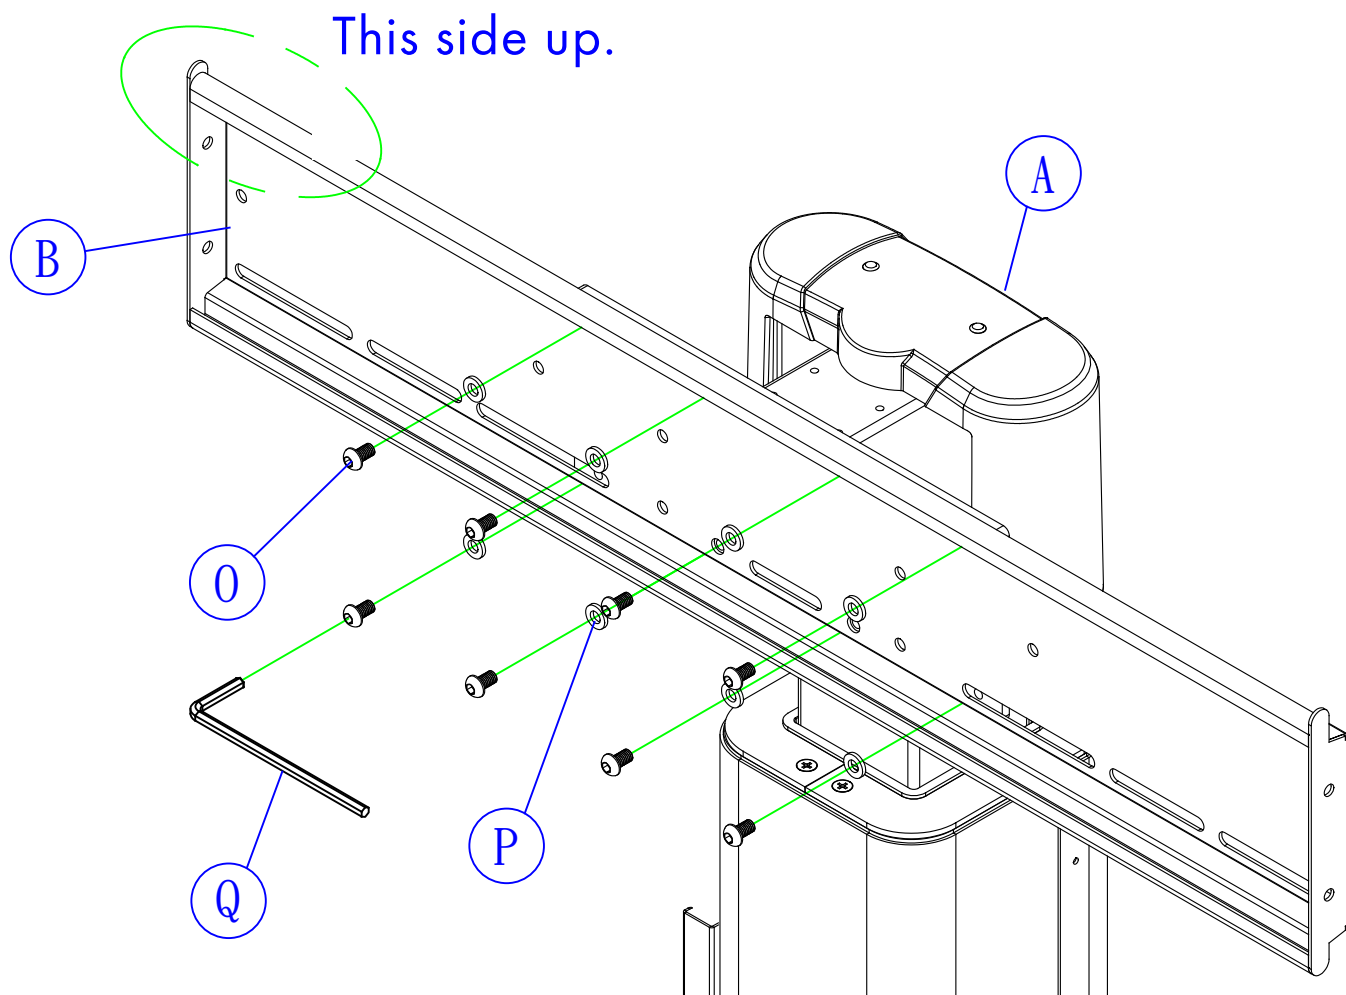


2.

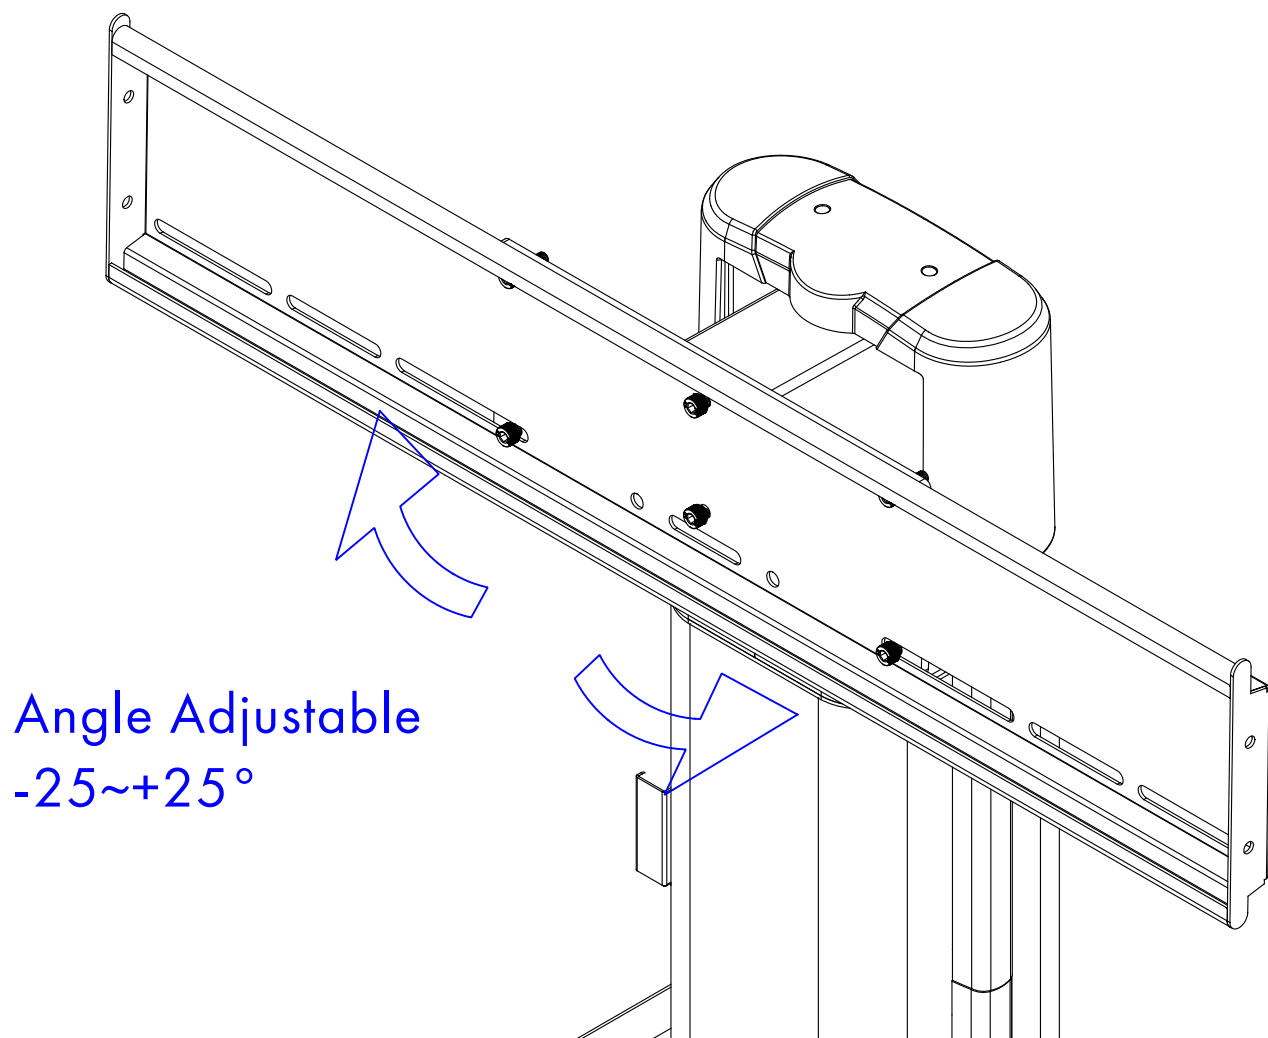

3.


TV

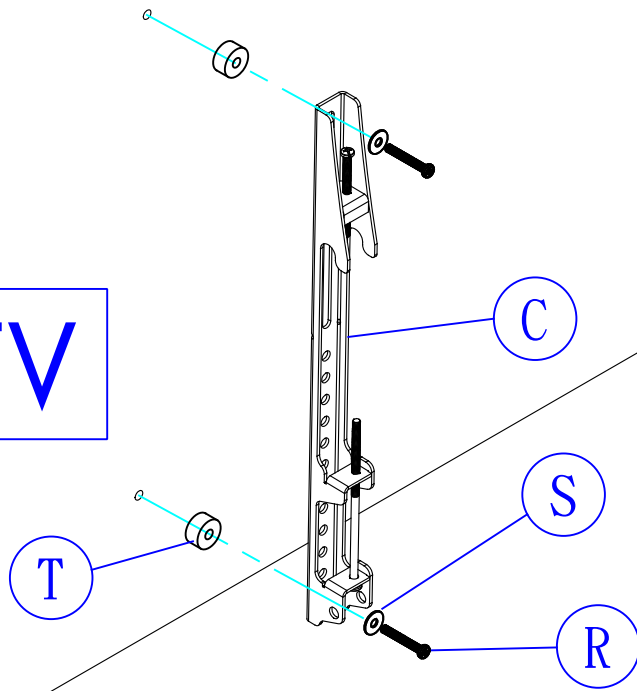

Add spacers if necessary.


4.

TV

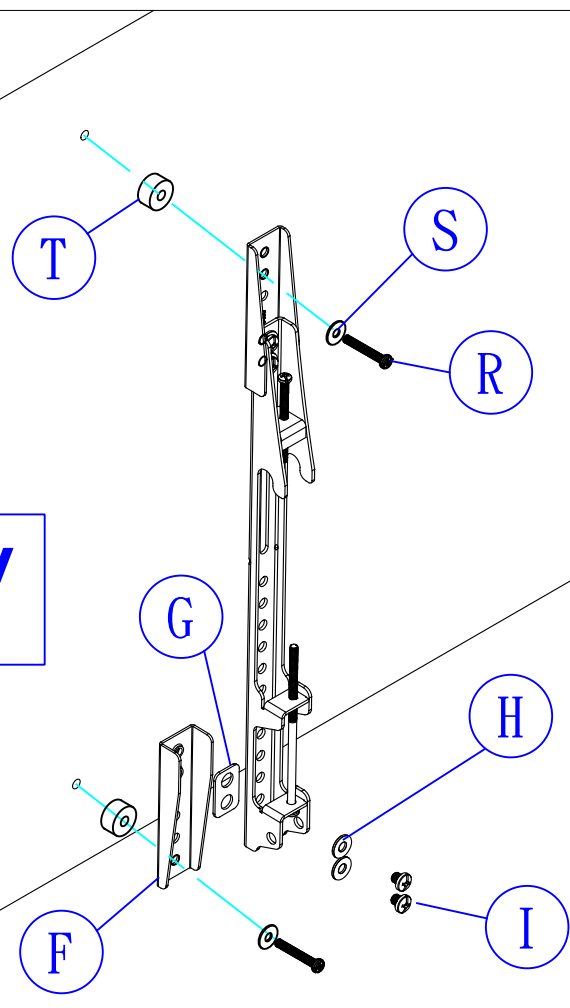


Add extension brackets if necessary.


5.

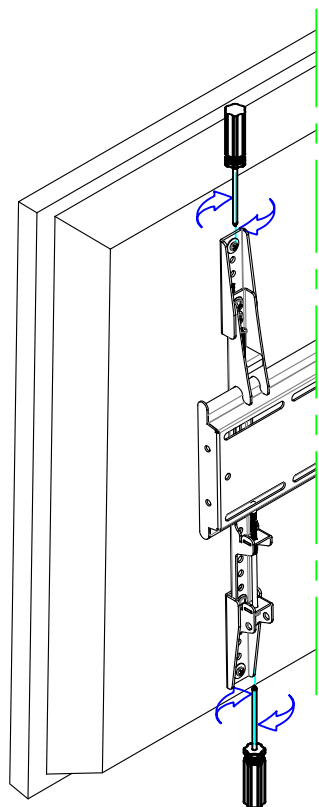


After installing the screen, fasten the holder with Phillips screwdriver.

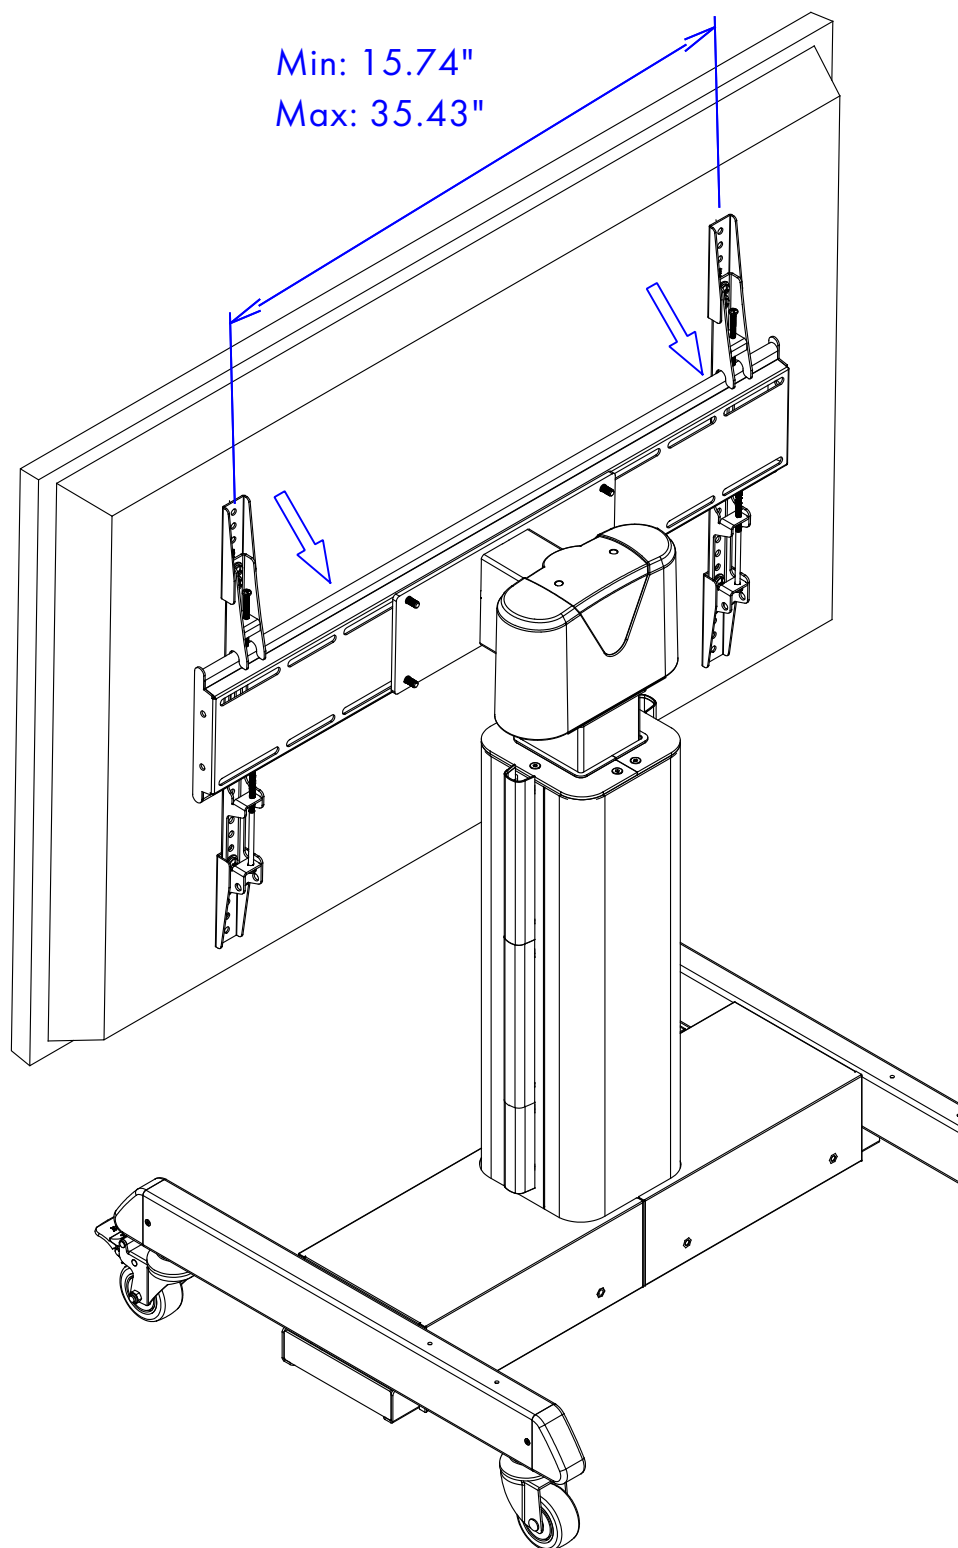

6.

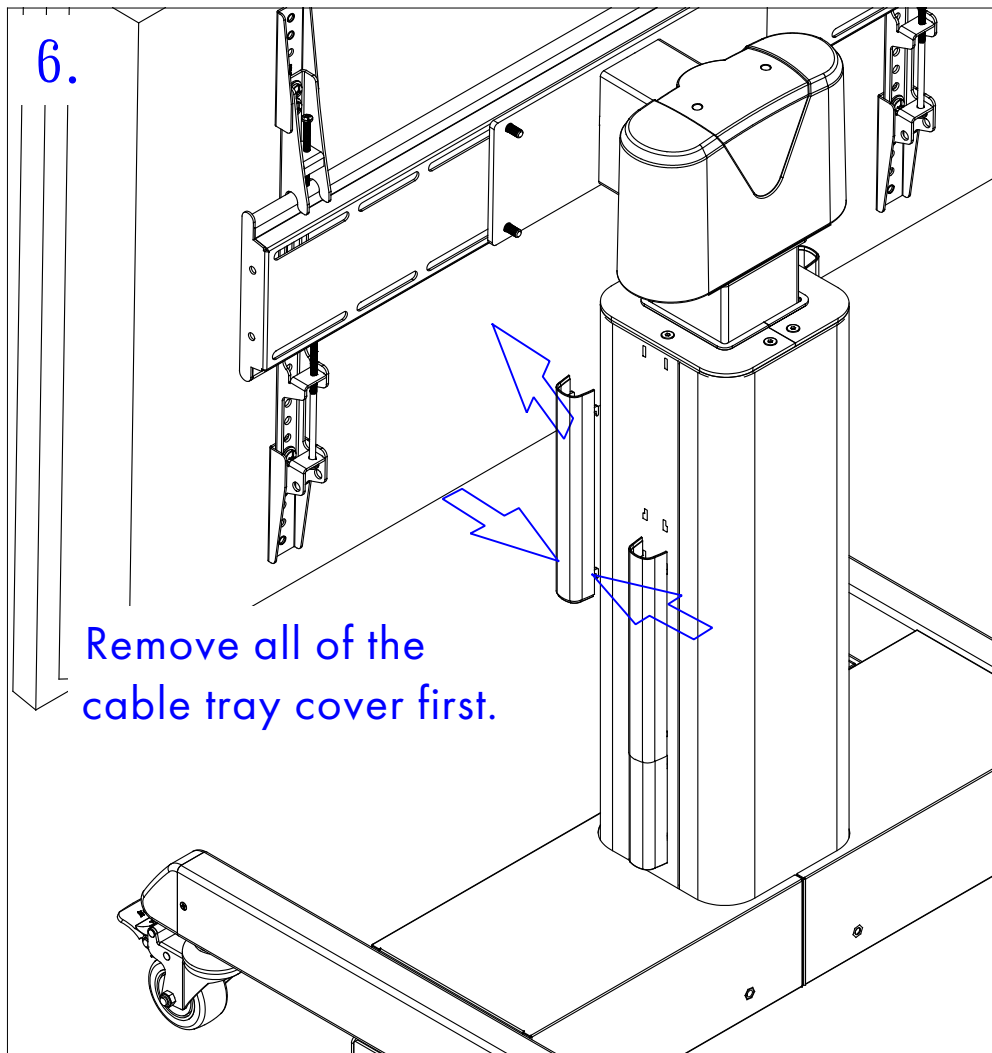


7.

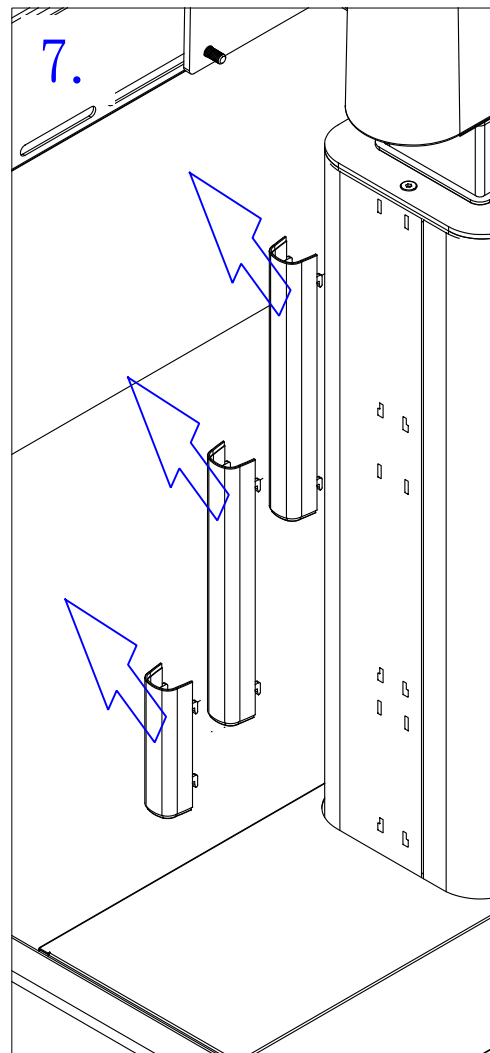


8.


Put the TV cable under cover.

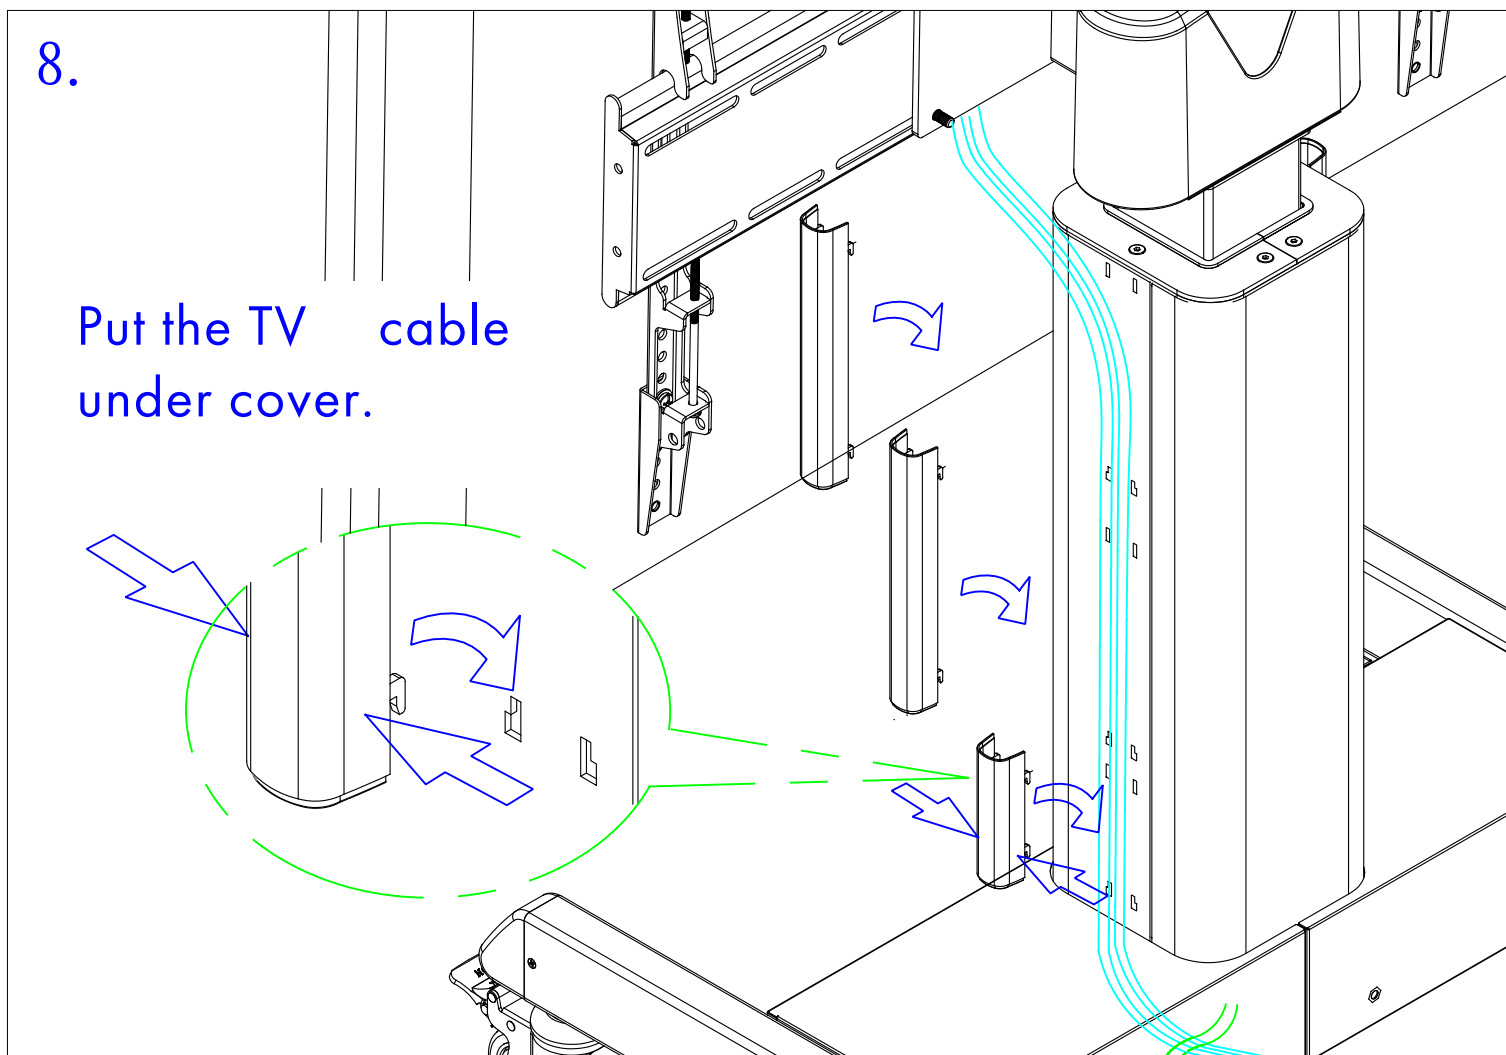


9.

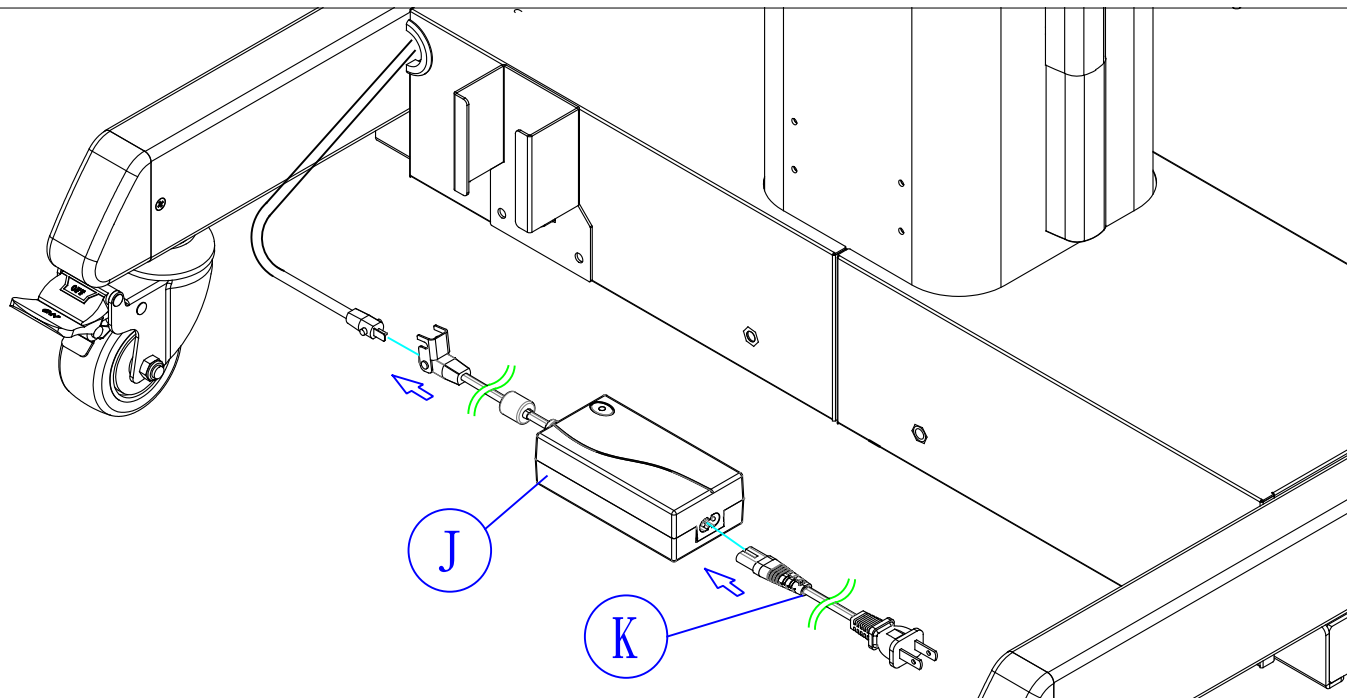



10.

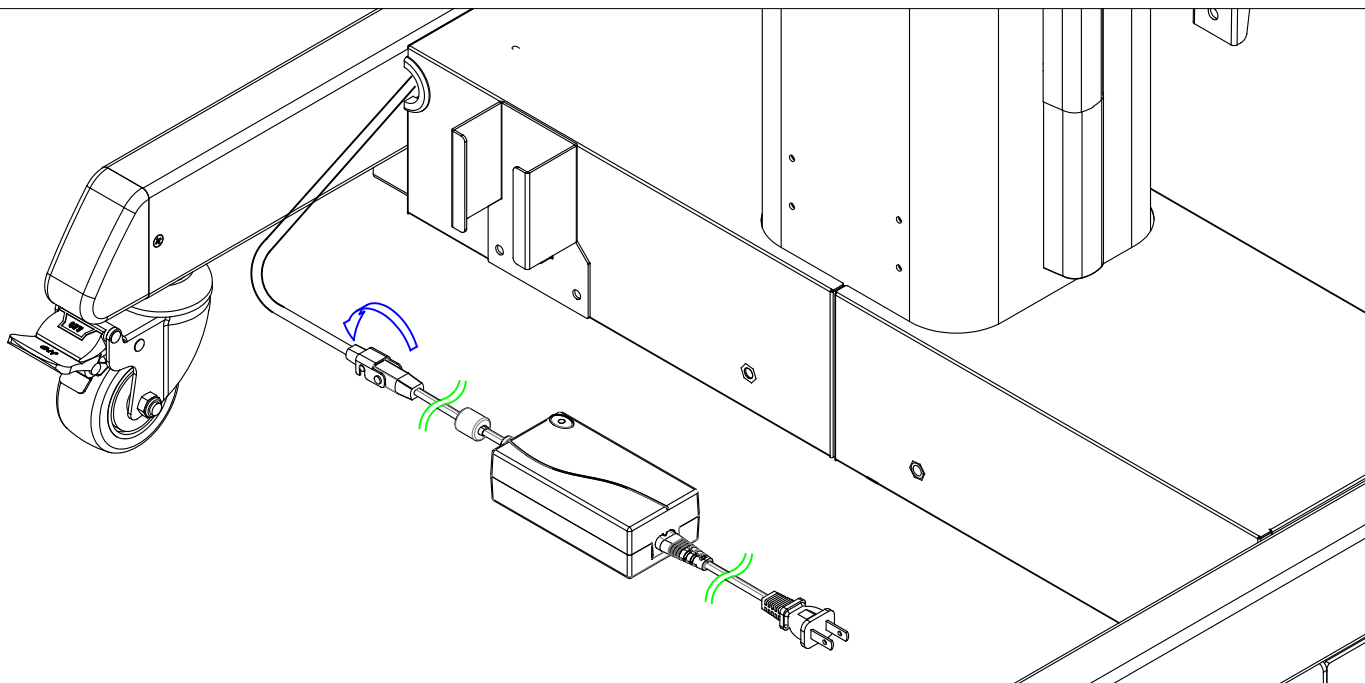

11.

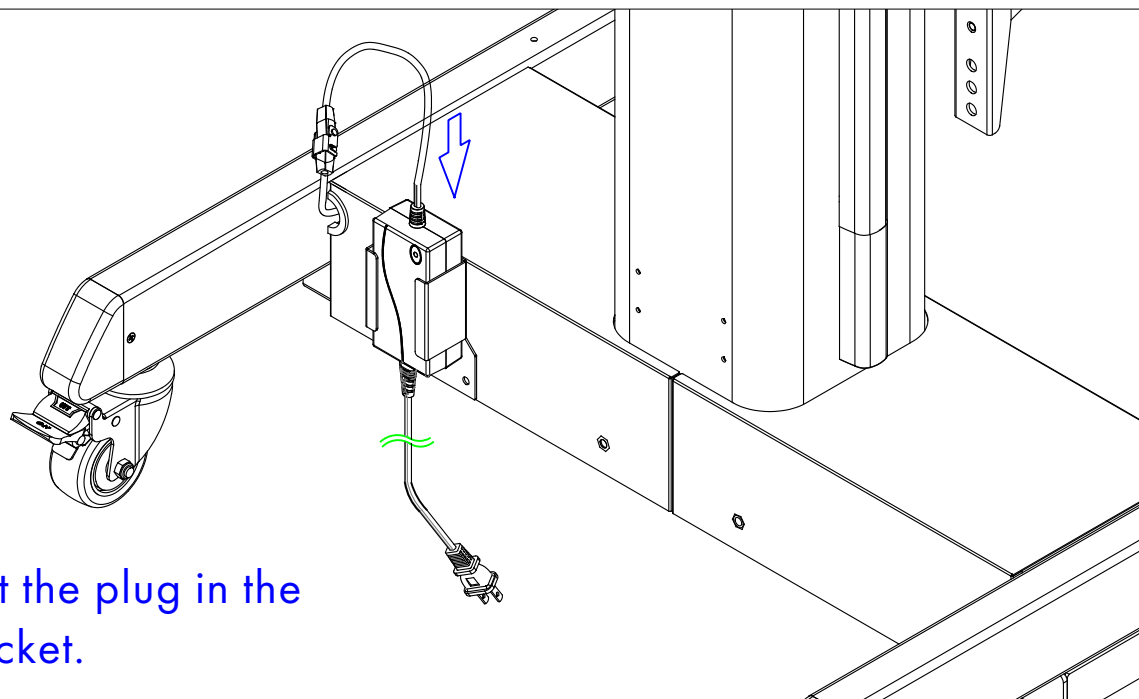

Put the plug in the
socket.

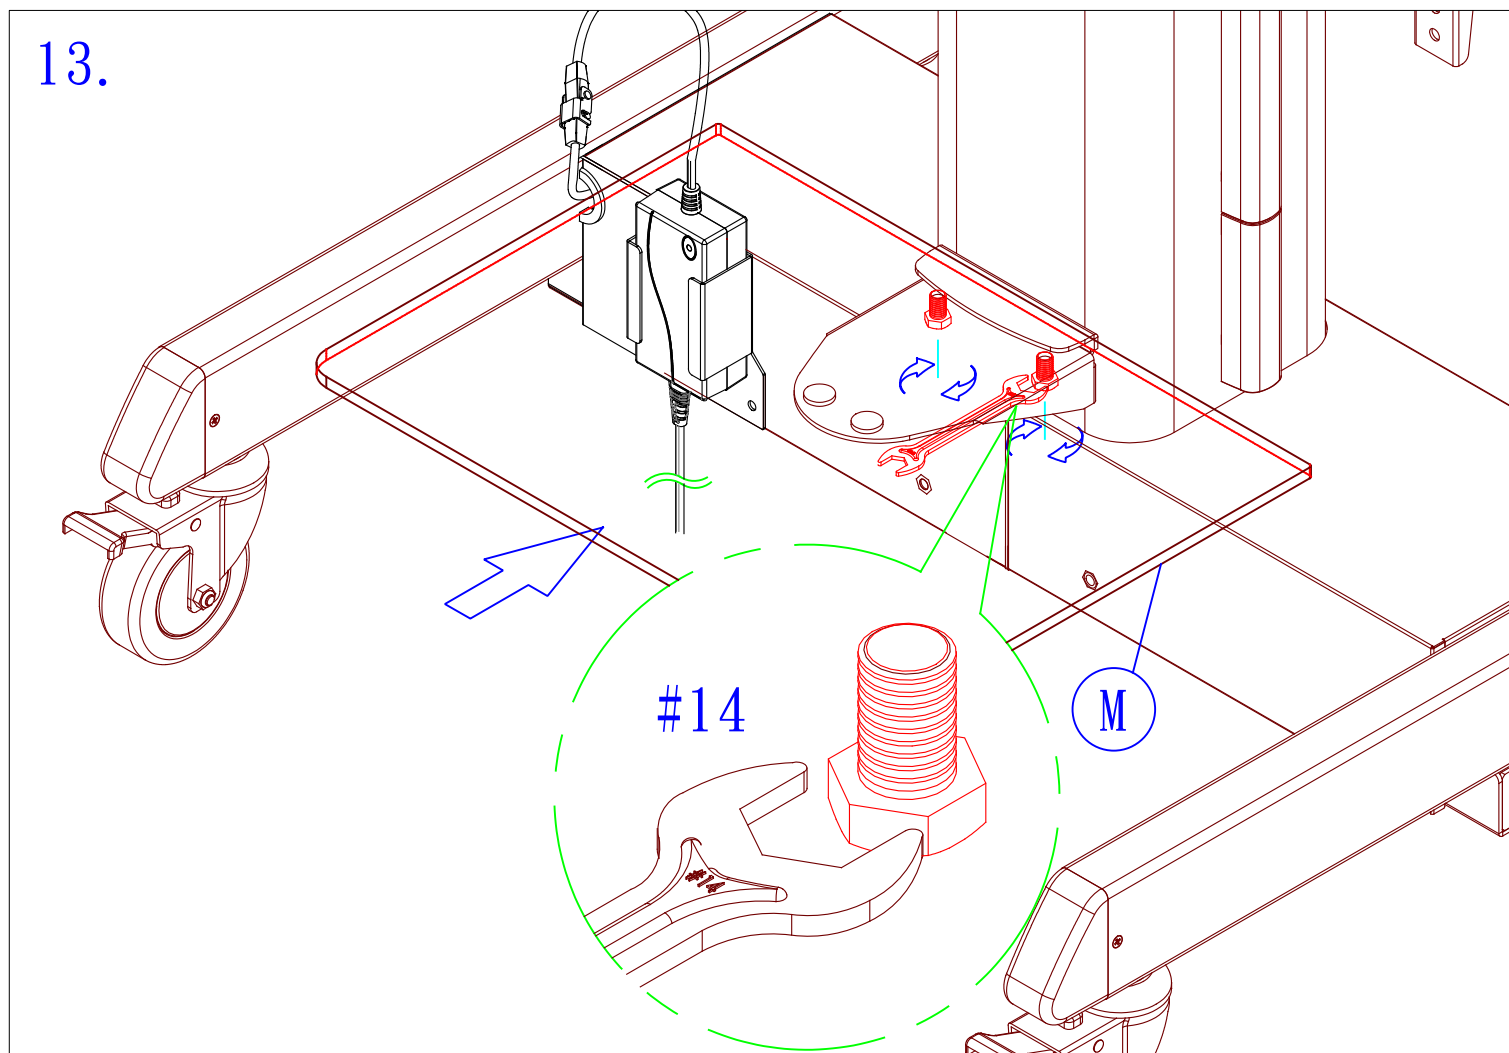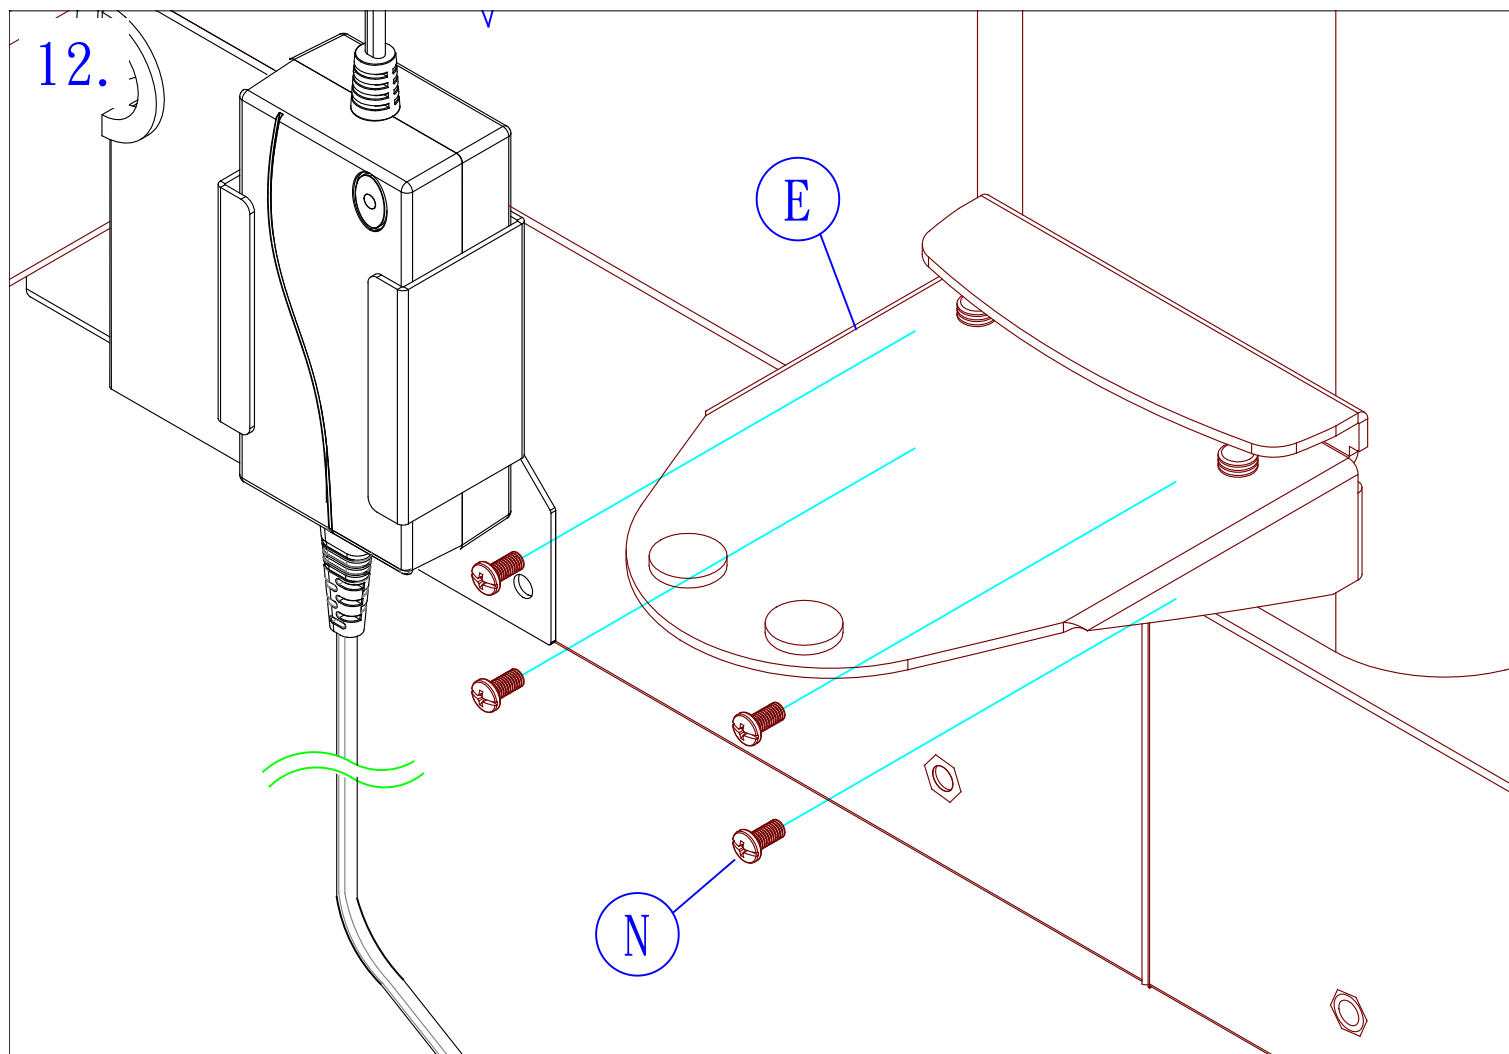

14.

