



Floor Standing Adjustable Poster Stand

Assembly Instructions

SKU: FLRST0523B Collapsible Easel Stand

Scan the QR
code to visit the
product page.




Components




- Carry Bag (x1)
- Tripod Base (x1)
- Telescoping Pole (x1)
- Connector (x1)
- Poster Clamp (Top x1, Bottom x1)

Assembly

- ① Extend the tripod base. Lock the legs by turning the knob clockwise.

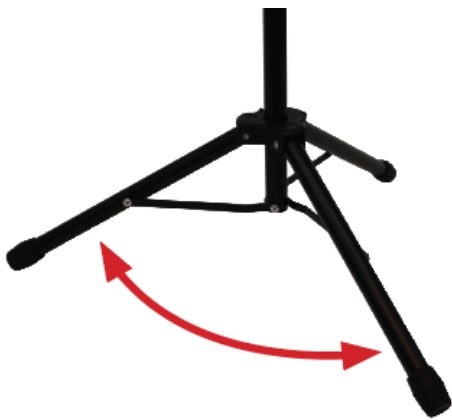


- ② Slide a poster clamp onto the pole with the slot facing up.

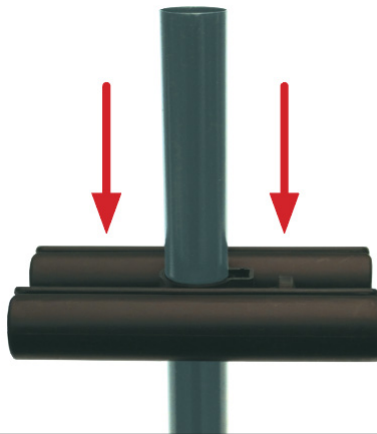


- ③ Unlock the connector and slide it onto the pole.



- ④ Place the other poster clamp on top of the telescoping pole with the slot facing down. Tighten the knob to secure.

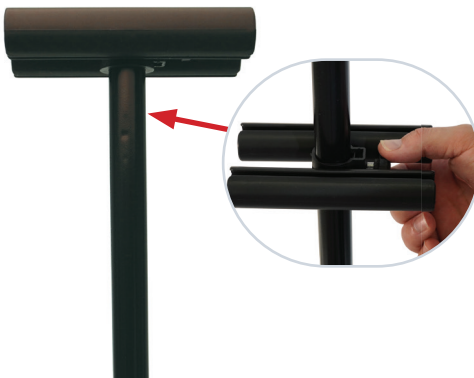

- ⑤ Insert the telescoping pole into the connector to connect both poles. Lock the connector.

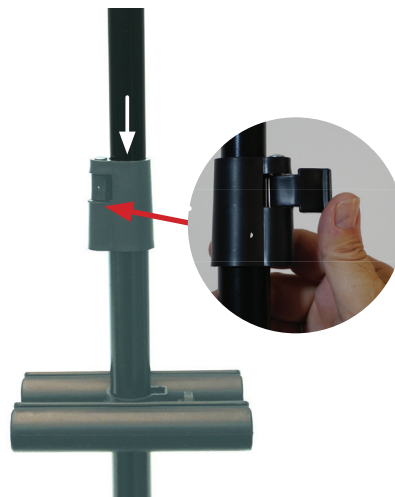

- ⑥ Insert your poster into the bottom clamp. Raise or lower the pole to insert the top edge of the artwork into the top clamp.



- Backing board is recommended (not included).
- Easel can accommodate any rigid poster size up to 70 inches tall and 5mm (0.2 inches) thickness.
- To adjust poster height: Unlock the connector and the bottom poster clamp and reposition. Lock to secure.