

Wire-Frame Display Assembly

Parts Included:

Base	Bearing
Pole adaptor	Steel Ring
Pole section A	Pole cap/sign holder
Pole section B	Pole collars (x2)

Instructions

1. Insert pole adaptor into base, making sure the legs are aligned with the slots in the base and press firmly to ensure a tight fit. The pole adaptor will be inset into the base if correctly aligned and snapped into place.
2. Insert section A of the pole into the base and push down firmly to ensure a tight fit.
3. Place the bearing ring and steel ring onto the pole section A so it sits on top of the steel ring welded to the pole.
4. Slide wire frame onto pole section A. It should sit on top of the bearing and rings.
5. Slide pole section B through the wire-frame and join it with pole section A, press firmly to ensure a tight fit.
6. Place the pole cap/sign holder onto the top of the pole.
7. If the wire-frame is a bit loose around the poles you can use the pole collars to help (see fig. 1 below.) Snap them onto the pole above each ring welding to the wire frame and slide them down so the collar is between the pole and the ring of the wire-frame. This will help reduce noise and wobble. (Smaller diameter poles will not need pole collars, they can be thrown away.)
8. Enjoy your new wire-frame display!

