 


DISPLAYS2GO

eMark Pen User Manual



1. Features

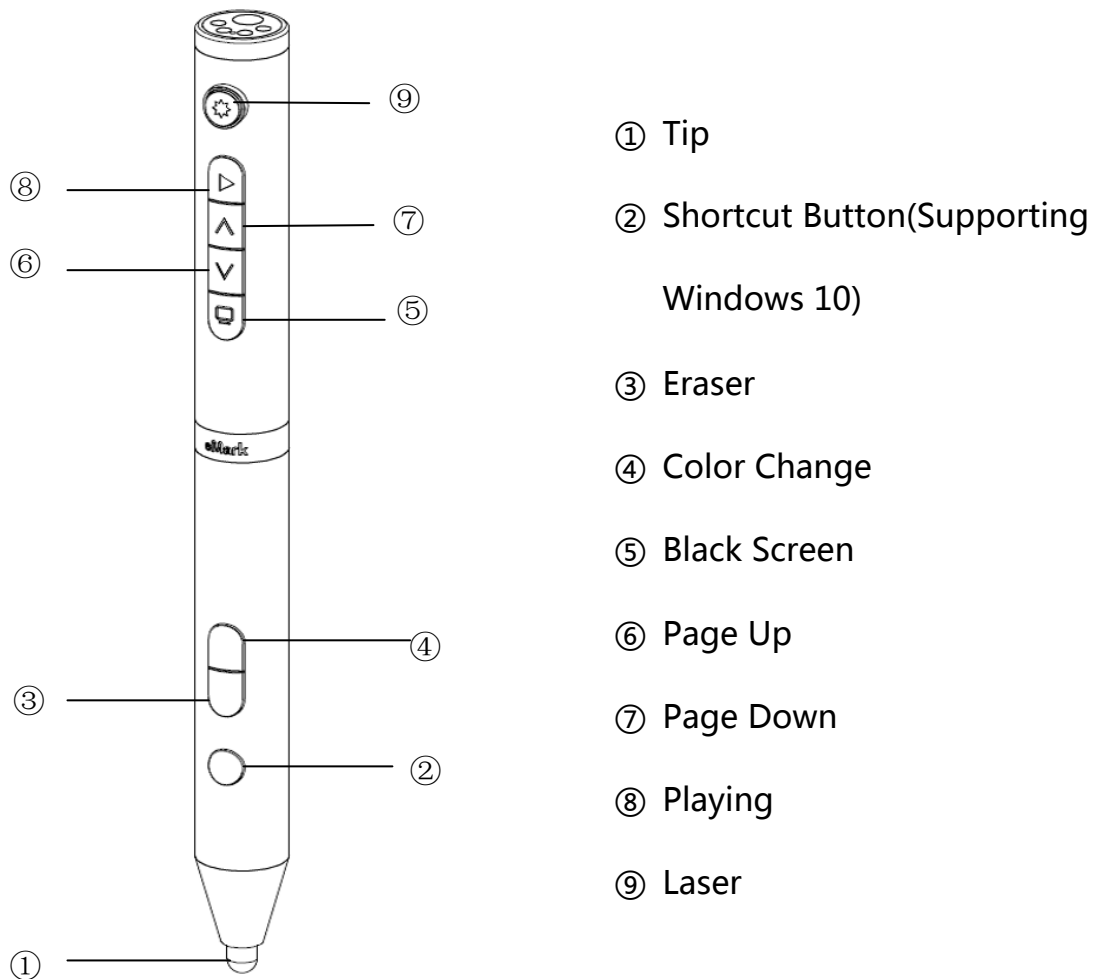

NOTE:

- DO NOT disassemble the Pen!
eMark Pen battery is built-in and cannot be removed.
- After fully charged, eMark Pen can work at least 7 hours.
- The tip light will flash to indicate low battery. Plug the Pen to charging base to charge.

 
2. Setup Instructions

➤ Charging

The eMark Pen has to be charged before 1st time use.

- Plug in the included adapter and place the eMark Pen on the charging base.

Battery Level 0% 100% Charge Complete

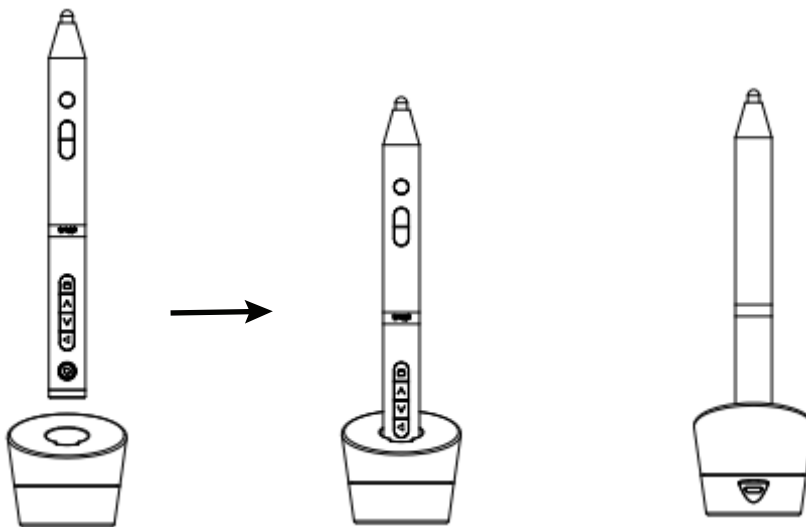

Plug in to charge

- eMark Pen charging from 0 to 100 takes up to 1 hour.

➤ Pairing

Start your PC or white board then check pairing status of the eMark Pen:

The tip will light in blue if the Pen paired successfully;

If not paired (no light), press ⑤ and ③ at the same time for 5 seconds to restart the pen;

Press ③ to light the tip, the color will indicate the pairing status.



Red: Abnormal. Need to restart

Yellow : Ready to pair

Blue : Paired successfully

➤ Restarting

If the Pen cannot pair, connect or write, reset the pen with a pin. Insert the pin into the hole at the top and press down to reset as shown below.



➤ Set up the shortcut button (Only for Windows 10)

Custom setting are as follows:

- “Settings” > “Devices” > “Pen and Windows Ink”, then set up the shortcut button.

 A screenshot of the Windows Settings application. The left sidebar shows the 'Settings' menu with 'Pen & Windows Ink' selected. The main content area is titled 'Pen & Windows Ink' and contains the following settings:

 
- Pen shortcuts**: A section with a blue arrow pointing to a drawing of the pen.
- Click once**: Two dropdown menus. The first is set to 'Windows Ink Workspace' and the second is set to 'Sketchpad'.
- Click once to open my Windows Ink Workspace notes even when the device is locked**: A toggle switch that is currently turned off.
- Double-click**: Two dropdown menus. The first is set to 'Windows Ink Workspace' and the second is set to 'Screen sketch'.

➤ **Changing Color**

Only certain software supported. Office 2013 and later versions need the add-in to support this functions. Please install the add-in from the included flash drive, or download from the product page at Disply2go.com.

➤ **Replacing Tip**

Spare pen tips are stored inside the charging base. Replace the old tip with a new one by pulling the tip out from the pen when needed.

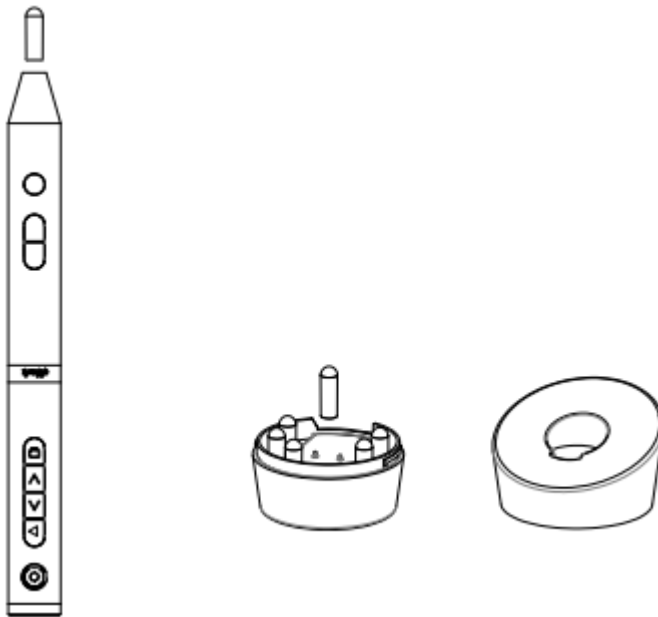

3. Specifications

eMark Optical Smart Pen			
Interface	Bluetooth 4.1	Built-in Battery	440mAH
Ink Color	7 colors from RGB	Dimension	15.5×166mm
Net Weight	28g	Technology	Optical Imaging
Pressure Sensitivity	2048 Levels/Supporting Authentic Handwriting		
Buttons	One Click Functions, PPT Playing, Eraser, User-Defined Magic Click		
Other Features	Zero writing distance , Safe from sleeves or palms' covering Smart writing different from touch imitation writing		
Compatibility	Use with Windows 10 recommended		

**WARNING: DO NOT point the laser beam directly at people's eyes.
It may cause irreversible damage.**