

DISPLAYS2GO



USER MANUAL

JTCPCS20D | 20-Port USB-C Charging Trolley

IMPORTANT

Read this manual carefully before using the charging trolley. Keep it for future reference.

DANGER

- Keep the AC plug and socket dry. Do not expose them to water or other liquids.
- Do not disassemble or modify the charging trolley. Any servicing or repairs must be performed by qualified personnel.

General

The appliance is designed for an AC input of 100–120 VAC, 60 Hz.

Charging Instructions

1. Place the charging trolley on a flat, stable surface near an AC power outlet. Make sure the ventilation openings are not blocked.
2. Open the charging trolley. Press and hold the button, then open the latches.



3. Connect the power cord to the external AC power connector on the charging trolley, then plug the other end into an AC power outlet.



4. Place the mobile devices into the slots and connect them to the USB-C charging ports.



5. Press the “I” side of the power switch on the external panel to start charging.
6. The LED indicator is red while charging and green when the devices are fully charged or no device is connected.

Moving the Charging Trolley

1. Unplug the charging trolley and disconnect all power and USB cables. Store the cables properly before moving the charging trolley.
2. Close the upper lid and secure the latches.
 - **Tip:** Use padlocks to secure the charging trolley. Padlocks are not included.



3. Push the button to the right and hold it in place, then pull up the handle.



Environmental Conditions

Condition	Temperature	Relative Humidity
Operation	14°F to 113°F (-10°C to +45°C)	40%–60% RH, non-condensing
Storage	-4°F to 122°F (-20°C to +50°C)	40%–60% RH, non-condensing

Product Disposal

Do not dispose of the charging trolley with normal household waste. Take it to an official collection point for recycling.

Proper disposal helps protect the environment.