

# CEILING HUNG POSTER/BANNER HOLDER


KITCH

(Chain)

KITFL

(Fish Line)


## INSTALLATION INSTRUCTIONS

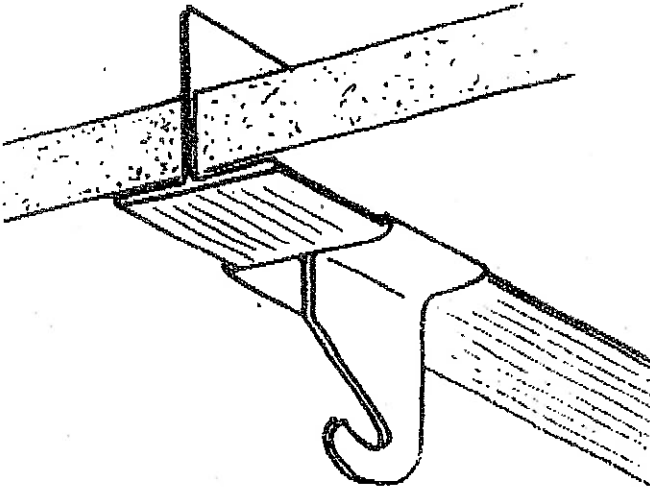

### BARNACLE CLIP

(For use on drop-supported ceilings)

1. Position white clip around ceiling channel and squeeze together to close. Hang "S" hooks.
2. Remove the hanging chain or fish line from packaging and hang on "S" hooks.
3. The remaining two "S" hooks are looped through the holes in the hanging frame. Complete installation by hanging the frame onto the chain/fish line.
4. Each hook will support up to 35 pounds if ceiling is properly installed.

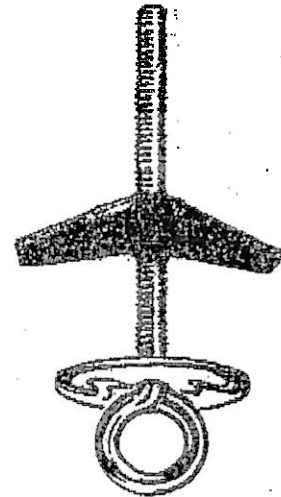

### TOGGLE BOLT

(For use in lathe and plaster ceilings)

1. Bolt requires a 9/16" hole.
2. Squeeze shut the "butterfly" toggle and insert the bolt assembly through the hole in ceiling.
3. Turn the eye bolt clockwise until the washer is tight against the ceiling.
4. Hang the "S" hooks onto the eye bolts.
5. Remove the hanging chain or fish-line from packaging and hang on "S" hooks.
6. The remaining two "S" hooks are looped through the holes in the hanging frame. Complete installation by hanging the frame onto the chain/fish line.