



DISPLAYS2GO

Caring for Your Display Case

OPULENT COLLECTION MAINTENANCE GUIDE

Indoor Use Only

- Do not expose the fixtures to outdoor weather.
- Cover the fixtures during outdoor transport.
- Avoid excess humidity.

Cleaning

- To clean wood, wet a soft non-abrasive cloth with water, glass cleaner, or other neutral detergent and gently wipe the unit.
- To clean glass, use a soft cloth with glass cleaner or alcohol.
- Never use aggressive detergents such as degreasers or acids.

Shelf Adjustment

Applicable SKUs: MWM39DC, MWM47DC

- Remove all 4 shelf supports and insert them at the new desired height.
- Tilt the shelf into the display case and onto all 4 supports, placing it down on the left or righthand shelf supports first. Then carefully lower it onto the other supports.
- Once in place, gently release the glass.

Feet Adjustment

Applicable SKUs: MWM39DC



SKU: MWM39DC




1 Open the cabinet door.




2 Unscrew the door hinge.



3 Remove the cabinet doors.

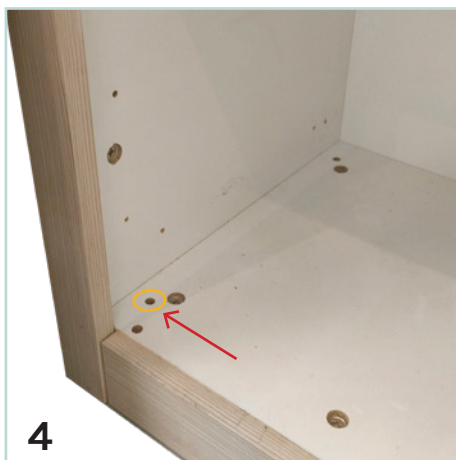

4 Locate the correct hole for the adjustment.

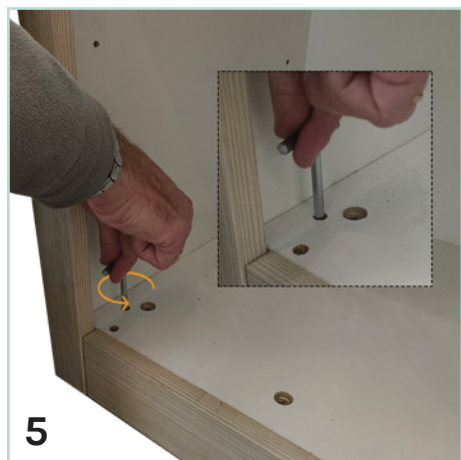

5 Insert a hex wrench into the hole and turn to adjust the height of the feet.



6 Insert the doors.



7 Reassemble doors with screws and drill.




Finished Cabinet

Door Installation


Applicable SKUs: MWM39DC, MWM47DC

Safety Instructions

- Handle all glass panels with care.
- 2 people required for safety.

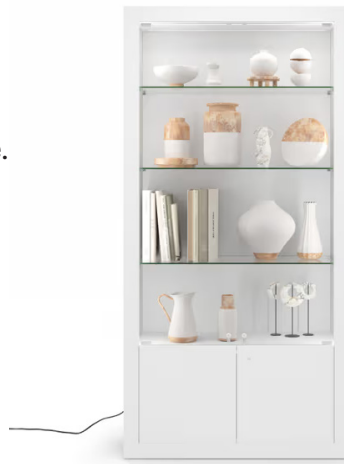

SKU: MWM39DC

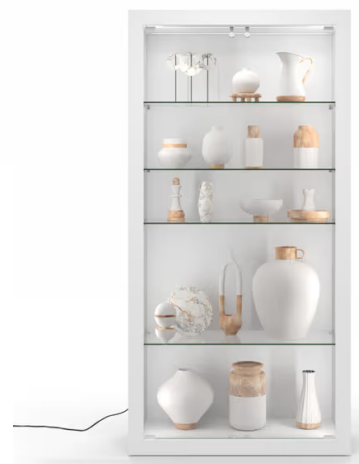

SKU: MWM39DC



1
Place the door hinge on the bottom of the glass door. Insert the hinge peg into the hole of the display case.



2
Place the door hinge onto the top of the glass door. Insert the hinge peg into the hole.



3
Adjust the horizontal alignment, then tighten the hinges with a screwdriver.