


QUICK REFERENCE GUIDE

How to Change the Screen Content from Landscape to Portrait


Note: Screen content default is landscape orientation.



Step 1: CLICK on Application Icon

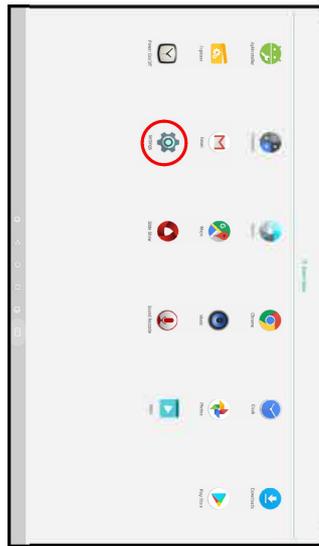


Step 2: CLICK on Settings Icon

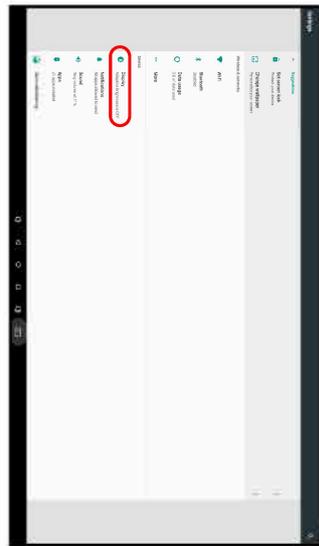


Step 3: CLICK on Display Setting



Step 4: CLICK on HDMI Setting

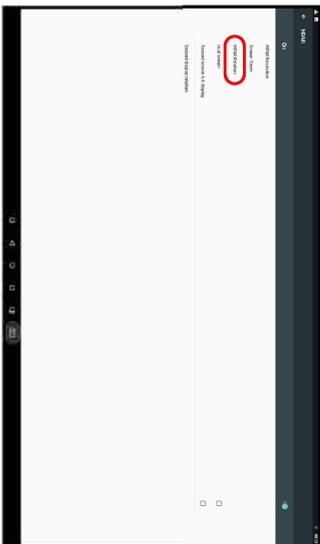

Step 5: CLICK on HDMI Rotation Setting

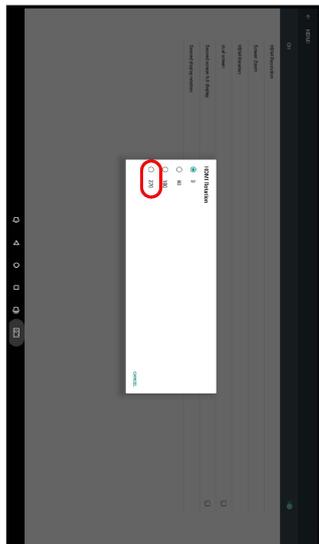

Step 6: CLICK on 270 Setting



Step 7: CLICK on HDMI Back Arrow



Return to the Home Screen

Note: Before using the product, please read the instructions carefully!
Do not attempt to disassemble this product. If product does not work properly please call our Customer Service Department at 1-844-221-3393.