 



SKU: SWH49EBW

V1.0


Components



Screws (x8)

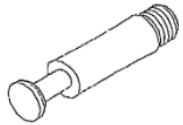

Cam Bolt (x24)

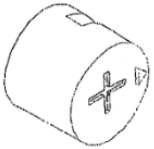

Cam Lock (x24)

⚠ Screwdriver required, not included.

⚠ 2 people recommended for assembly.

Scan the QR code to
visit the product page.




If you have any questions regarding our products,
please visit us at www.displays2go.com or contact
Displays2go customer service at 844-221-3388.




H-Unit Slatwall Gondola Display with 4-Sided Slatwalls

[Assembly Instructions](#)


How to Join 2 Boards with Cam Locks

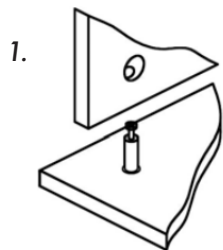

Insert the cam bolt into the board, then lower the hole of the joining board over the cam bolt.

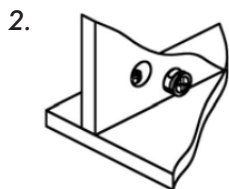

Each cam lock has an open section on the back. Insert the cam lock into the hole of the joining board, making sure the open section is placed over the head of the cam bolt.

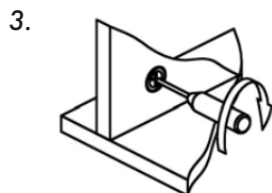


Turn the cam lock clockwise with a screwdriver to lock the cam lock to the cam bolt.

Do not over-tighten.

1


Assemble the toe kicks using cam locks and cam bolts.

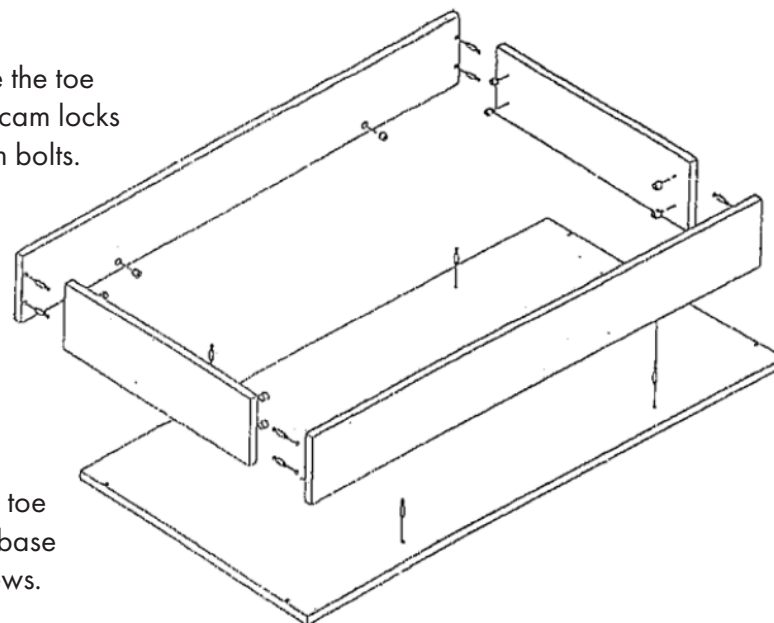

Attach the toe kick to the base using screws.

2

Assemble the center and side slatwall panels using cam locks and cam bolts.

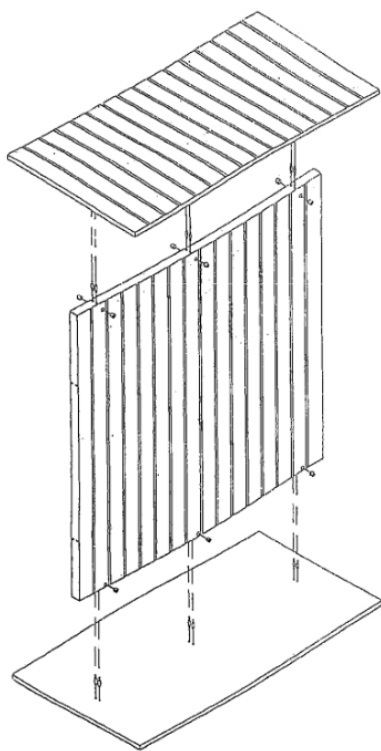


3

Attach the 4 corners of the gondola to the base with screws.

Attach the center of the gondola to the base with cam locks and cam bolts.

Lift the unit to a standing position.

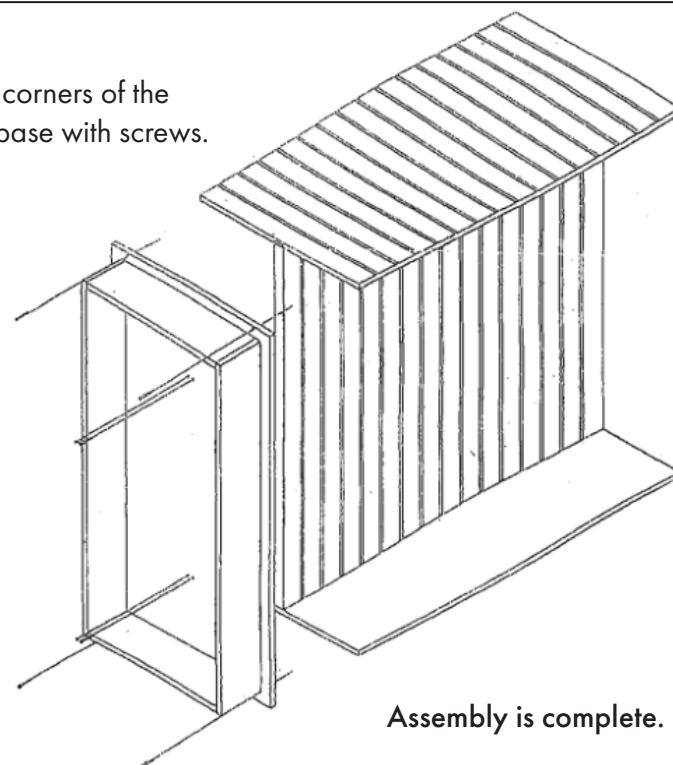

Assembly is complete.