

DISPLAYS2GO


QUICK REFERENCE GUIDE

How to Change the Screen Content from Landscape to Portrait?


Note: Screen content default is landscape orientation.



Step 1: CLICK on **Application** Icon

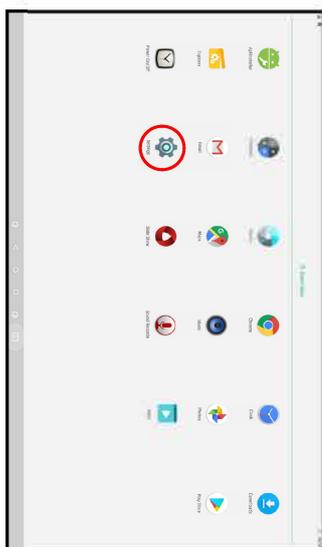


Step 2: CLICK on **Settings** Icon

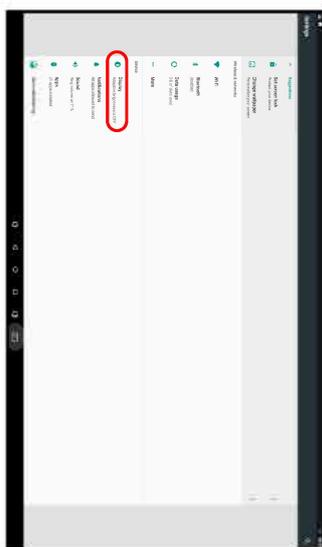


Step 3: CLICK on **Display** Setting




Step 4: CLICK on **HDMI** Setting

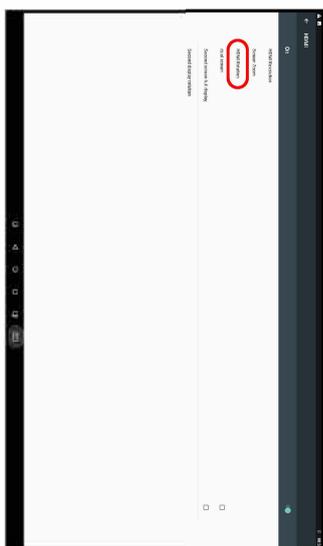

Step 5: CLICK on **HDMI Rotation** Setting

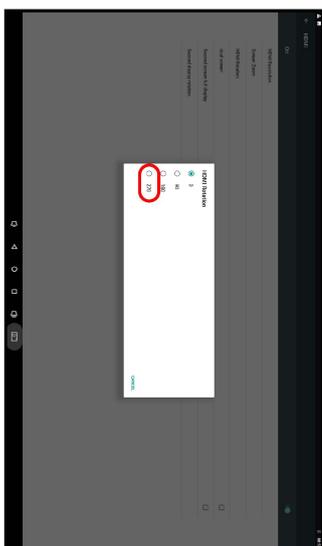

Step 6: CLICK on **270** Setting

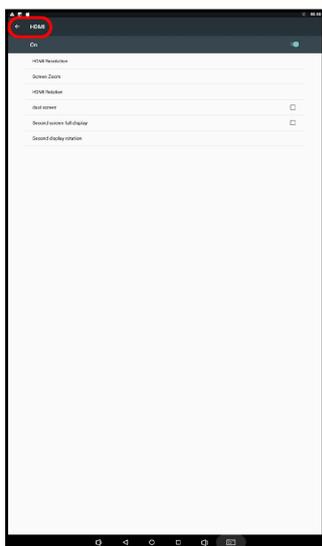

Step 7: CLICK on **HDMI** Back Arrow



Returned to the **Home** Screen

Note: Before using the product, please read the instructions carefully!
Do not attempt to disassemble this product. If product does not work properly please call our Customer Service Department at 1-844-221-3393.