 


Retractable Banner Stand with Custom Printed Graphics






ASSEMBLY INSTRUCTIONS


SKU: TSBNSR3190, TSBNSR3590, TSBNSR3990, TSBNSR4790

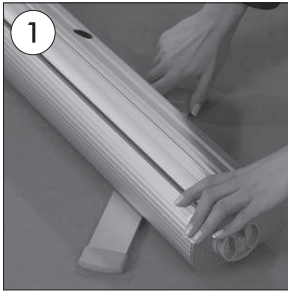


Rotate the feet 90 degrees, then open the cover of the base and remove the top clamp and telescoping pole.

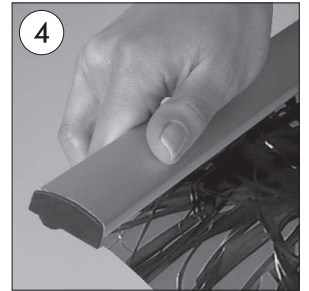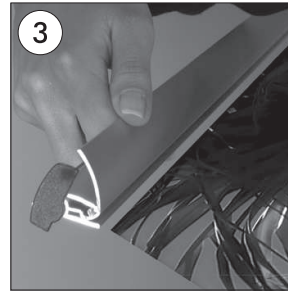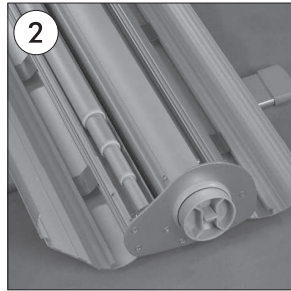


Open the top clamp and place in the poster.

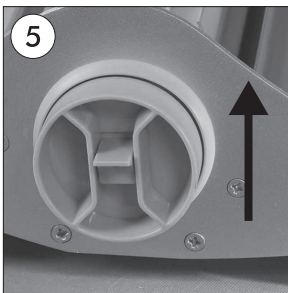

Flip the switch on the side of the base UP to loosen the rolling cylinder body.


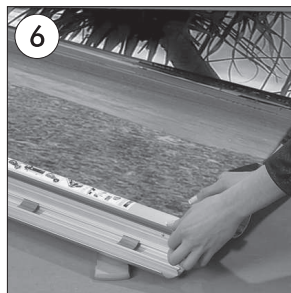


Open the cylinder clamp and insert the poster.

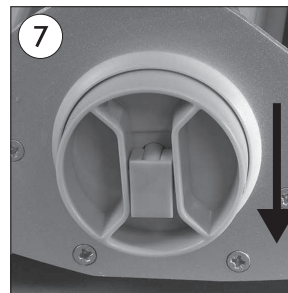


Flip the base switch DOWN to reset the rolling cylinder. Rotate the knob to wind the poster onto the cylinder.


NOTE: Install the poster STRAIGHT to prevent the sides from curling.

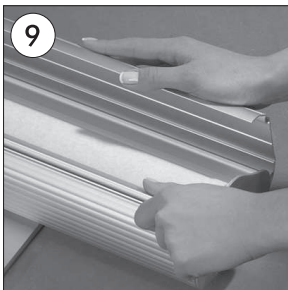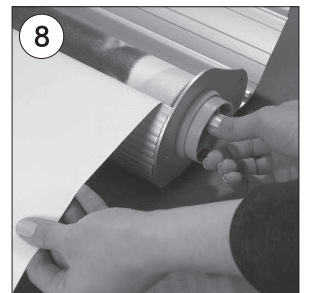


Close the base cover.

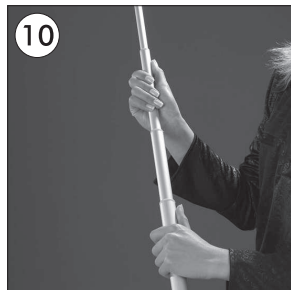

Insert the telescoping pole into the hole on the base and twist until it reaches the desired height.

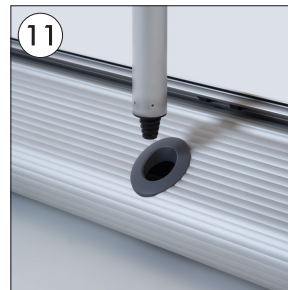

Lift up the top clamp and hang it on the pole.

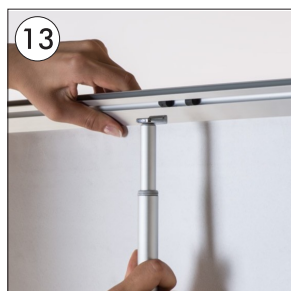

To retract the banner, remove the top clamp from the pole and slightly tug the poster upwards to engage the retraction mechanism. While holding the top clamp firmly, allow the banner to retract automatically into the base.

!!! CAUTION !!! Do NOT flip the base switch when the banner is fully extended.

Scan the QR code to visit the product page!

