

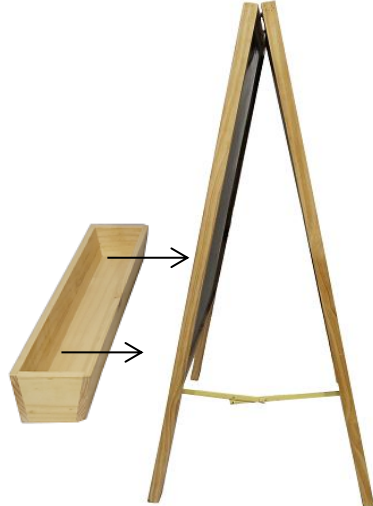
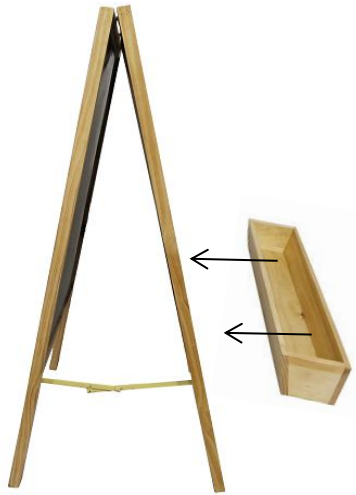


ASSEMBLY INSTRUCTIONS			
AF4930CHPL			Ver. 19.07
PARTS LIST			
A 	B 	C 	D 
WOOD FRAME x1	PLANTER WOOD BOX x2	HEX SCREW x4	WRENCH x1
Step 1.		Step 2.	
			
Unfold the Folding Wood Frame (A) on a level ground.		Attach 1 Planter Wood Box (B) to the Wood Frame with 2 Hex Screws (C) by using Wrench (D).	
Step 3.		Step 4.	
			
Attach the 2nd Planter Wood Box (B) to another side of the Wood Frame the same way.		Complete Set	

DISPLAYS2GO

If you have any questions regarding our products, please visit us at www.displays2go.com or contact D2G customer service 844-221-3388