

ILLUMINATED WINDPRO WITH LED

DISPLAYS2GO

USER MANUAL



Contents

Conponents and Functions..... 3

Important Safety Instructions and Warnings 4

Assembly Instructions 5

Remote Control 8

Charging Instructions 9

Operations 10

Specifications 10



For your safety, please read this manual carefully before using your product.
Please keep this manual in a easily accessible place for further reference.

IMPORTANT SAFETY INSTRUCTIONS AND WARNINGS

Carefully read the below safety instructions and precautions before using the product or charging the battery. Failure to do so may result in fire, personal injury and damage to property.

- DO NOT short circuit the battery. It may cause fire or injury.
- NEVER leave the battery unattended while being charged.
- When the battery is fully charged, disconnect it with the charger.
- DO NOT overcharge, it will decrease the battery lifespan. A full charge takes 5-6 hours.
- Before and after each use, inspect the battery for damages, such as swelling, broken cover, or other deformities. DO NOT use the battery if any damage is found.
- STOP using the battery immediately if the battery is extremely hot, emits unusual smells or smoke, changes shapes, or appears abnormal in any other way.
- The battery can ONLY be charged with the provided charger. DO NOT use the provided charger to charge other batteries.
- DO NOT let the battery expose to moisture or contact with any liquid at any time.
- If the unit won't be used for a long time, remove the battery from the base and store it in a dark, dry and fireproof place at room temperature.
- NEVER store the battery near an open fire.
- Store the battery fully charged. It should be re-charged once after 3 months not in use.
- DO NOT disassemble, modify, drop or damage the battery. This may result in damaging the battery or exposure of battery.
- DO NOT use the battery if you suspect it's damaged in any way.
- Battery and Charger cannot be repaired. In case of any damage, stop using immediately.

Charge	32 °F to 104 °F
Discharge	14 °F to 122 °F
Storage (less than 30 days)	-4 °F to 32 °F
Storage (less than 90 days)	74±4°F

Limited Warranty:
Please refer to full Term and Conditions at www.displays2go.com.

Assembly Instructions

1. Assemble the Waterbase with Frame. Insert the spring legs on the poster frame into the holes in the waterbase. Carefully lay down the poster frame and secure it with the base by using included metal plates and nuts.



Lift the unit to its upright position. Connect the power cable as shown:



2. Remove the cap on water base using the provided tool and fill up with water.
Tips: use a plastic funnel to easily fill the water.



3. Unlock the battery compartment with the key provided and open the cover on top.



4. Connect the battery with power supply inside the battery compartment.



To remove the battery, disconnect the power cable first, then use the handle to lift the battery out.



5. Insert/Replace a poster:

Unscrew 7 locks on each side of the poster frame to release the poster cover using the included tool.



Open the frame cover. The elastic rubbers will hold the cover in place.



Fix the poster with 2 plastic holders at the top, and adjust the poster as needed. Then close the frame cover and tighten all locks.



IMPORTANT!

DO NOT over tighten the locks on the poster frame.

DO NOT pull out the covers more than 45°.




7. Move the Product

WindPro with LED has carrying tool which is designed specially for this product. It can be moved easily with the tool.



Remote Control

Each LED WindPro comes with 2 remote controls. The one with a green sticker has been connected with the frame and ready to use.

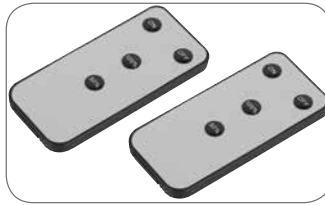

To pair the other remote control with the WindPro, follow the steps below:

- a. Turn on the unit by switching the power button to the "I" position next to the battery.
- b. Press "ON" button on the remote control for 5 seconds.
- c. Turn off the unit (switch the power button to "O") and wait for 5 seconds, then power it back on again. Then press "ON" button on the remote control.
- d. The frame will flash 3 times and light up constantly.


The brightness can be adjusted to either "100%" or "50%" with the remote control.

Charging Instructions

Product will be delivered with one fully charged battery.

How to charge your battery:

1. Remove the battery from the base and properly connect it with the provided charger.
2. Plug the charger into power outlet. The indicator light will turn red.
3. When the light on the charger turns green, battery is fully charged.
Unplug the charger from power outlet first then disconnect the battery.

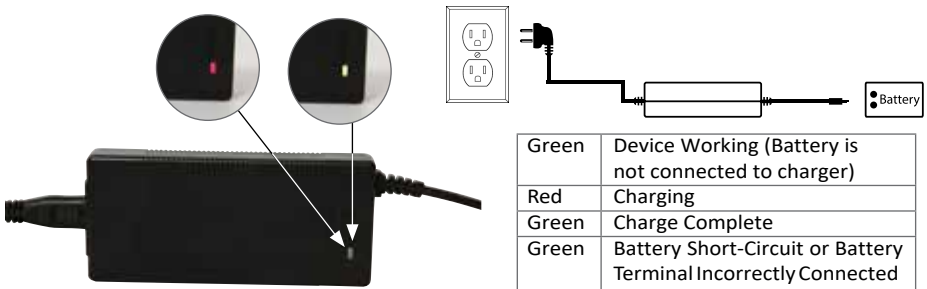

It takes 5~6 hours to charge the battery from empty to full.

The battery can be recharged about 1500 times.

IMPORTANT!

The charger can **ONLY** charge the provided battery of WindPro with LED. Charger must be used indoor and in dry condition.

Charger should be plug into regular power outlet. It can adjust to the input voltage.



NOTE: Battery cannot be recharged on the product. It has to be removed and recharged separately with charging unit.

If you need a replacement battery, please contact D2G customer service at 844-221-3388.



Operations

Weight of water filled base is about 88lbs (40kg).

WARNING!

Do not keep the base in water more than 4 inches as water may get into the battery compartment.



The unit can operate either with battery or with the charger as power supply.

NOTE: Using the product with the battery in below 32°F are not recommended as it will shorten the battery life.



Two levels of brightness can be adjusted by remote control.

The battery life when fully charged:
Bright Mode: approx. 12 hrs (1000 - 1200 Lux)

Energy Saving Mode: approx. 24 hrs (650 - 700 Lux)



*Base on average temperature of 68°F.

If you have any questions regarding our products, please contact D2G customer service 844-221-3388.

Visit Displays2go.com for the latest product information and User Manual updates.