

AVSH Assembly Instructions



Remove end caps & slide extrusion into center of the channel and back of base. Tighten with Allen key and replace end caps.



Slide AV Shelf through top into desired position.



When shelf is in desired position, tighten each screw with an Allen wrench.



If using a standard mount, place in desired location and tighten each screw.



If using tilting mount, twist rod until mount is in desired position and place mount down into pole.



Tilt mount to desired angle and tighten screws to secure.



Tighten top screw to secure rod in place.



After attaching bracket to television with provided screws, line up holes with mount and slide into place.