

DIGITAL PICTURE FRAME

DIGITAL PICTURE FRAME



User Guide

Table of Contents

Safety Information.....	3
Package Contents.....	3
Specification	4
Digital Photo Frame Introduction	4
Inserting Memory Cards.....	6
Main menu	6
Viewing Pictures.....	7
Watching video.....	8
Listening to MP3 music	9
Playing a slideshow with music	10
File Management	11
Copying and Deleting Files	11
Copy	11
Delete	11
Using the SETUP option	12
Calendar/Clock Display.....	12
Technical Support.....	13
Frequently asked questions	13
Troubleshooting.....	14

DIGITAL PICTURE FRAME

Safety Information

- Keep away from water, moisture and dusty areas.
- Working temperature 0-40℃. Never store in a hot or very cold place.
- Be careful not to drop or knock the photo frame.
- Never try to open the case yourself, always seek technical support.
- Connect the AC adaptor to both the DC IN jack and to the power outlet. (mains socket)
- Only use attachments / accessories approved by the manufacturer.
- When left unused for a long period of time, the unit should be unplugged from the household AC outlet.

Warning: To reduce the risk of fire or electric shock, do not expose to rain, moisture, dripping or splashing.

Package Contents



Digital Picture Frame



User Manual



AC/DC Adapter



Remote control



USB Cable (with memory)

DIGITAL PICTURE FRAME

Specification

Main Features:

- Plays digital photos as slide show
- Play Music and videos
- Display calendar and clock with alarm
- Rotate and zoom photos
- Brightness, contrast and saturation adjustable
- Easy to use on-screen menus & button controls

Memory Card Slots

- Secure Digital (SD)
- Multi Media Card (MMC)
- Memory Stick (MS)
- Secure Digital High Capacity (SDHC)

File Format Support

 
- Pictures: JPEG
- Video: MPEG-1, MPEG-2, MPEG-4, AVI
- Audio: MP3

Panel Resolution:

7" 800*480 pixels
12" 800*600 pixels
15" 1024*768 pixels

Digital Photo Frame Introduction

- DPF1210AAN / DPF1500AAN

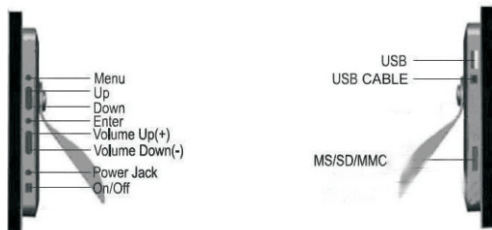


DIGITAL PICTURE FRAME

Button	Description
Power	Turn on/off
Photo	Access your photo files
Music	Access your music files
Video	Access your videos files
Combo	Start the slideshow
Time	Display the time/ Calendar
Mute	Mutes volume
Menu	Displays the main menu
Enter	Select highlighted item
VOL +/-	Adjusts volume
Arrows	Navigate on screen
▶/	Play/ pause



 ● DPF0700AAN

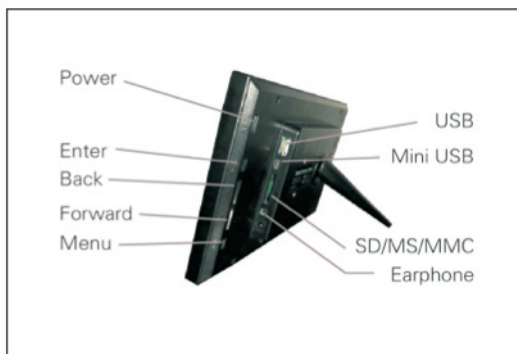

DIGITAL PICTURE FRAME

Button	Description
Power	Turn on/off
Exit	Go back a step
Enter	Select highlighted item
Arrows	Navigate on screen
Combo	Start the slideshow
VOL +/-	Adjusts volume
▶/	Play/ pause

 


Inserting Memory Cards

Insert the memory card with the front label facing AWAY from you. Do not force the memory card into the memory slot. If you are not able to easily insert the memory card completely, you may have inserted it the wrong way.

Main menu

Upon turning on the Digital Picture Frame, you will go straight to the MENU screen. To set the Auto Start feature Choose the SETUP screen. Use the left/right arrow to go to the "Set up". Press Enter button to enter the options screen. Use the Up / down arrows to choose your auto start option. Press the "MENU" button to show the following menu:

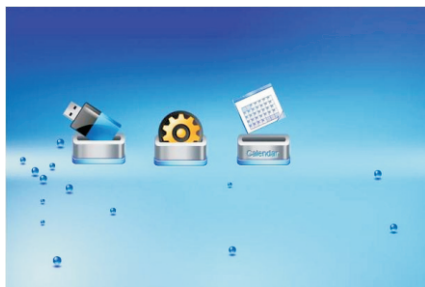

Use the left and right arrows to move inside the menu and then press "Enter" to continue

DIGITAL PICTURE FRAME

Note: In all menus, pressing the “Menu” button will bring you back to the main menu.


Function	Description
Setup	Set system menu
Calendar	Display calendar, clock, alarm
SD/MMC/MS	Play files on SD memory card
USB	Play files on USB flash drive

NOTE: Icons of above functions shall appear automatically on MENU screen when certain memory card is inserted. Icons shall disappear when correspondent card is removed from card slot.

Viewing Pictures

Make sure you have at least one picture on your memory card or your USB flash drive. When this is done:

 - Select the desired flash media on main menu. (SD/MMC/MS/USB)
- Select the “PHOTO” option from the menu and press “ENTER”
- A Photo thumbnail will appear. User UP/DOWN/LEFT/RIGHT arrows can move the highlight. If the highlighted is a folder, press Enter to enter the folder.

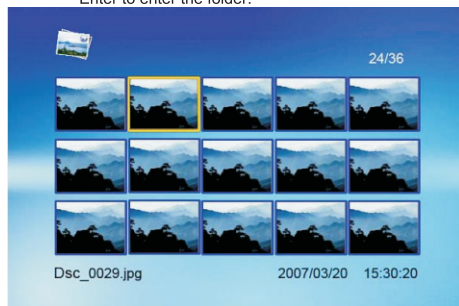

- Otherwise press Enter to enter the full screen photo (pause mode) and press Play to enter into slideshow mode.
- Once a slideshow is playing or a picture is being shown, press the OSD button. The following menu will appear:

DIGITAL PICTURE FRAME



【Previous】 Play previous photo in the photo list

【Play or Pause】 Play or pause the current slideshow.

【Next】 Play next photo in the photo list

 
【Rotate】 Use the rotate function to change the photo orientation to either portrait or landscape.

【Stop】 Stop slideshow and return to photo thumbnail.

【Zoom】 Increase the size of the photo by 2/4/8/16/1 times.

Watching video

- Select the desired flash media on main menu. (SD/MMC/MS/)
- Select the "MOVIE" option from the menu and press "ENTER"
- A list of all movie files will be listed on the left side of the screen. The right side consists of the movie preview window and information display of the current movie. Use Up/Down arrows to select the movie and press Enter to play.

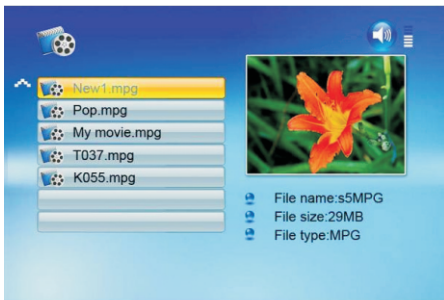

DIGITAL PICTURE FRAME

Once a movie is playing, press the ENTER button on the remote control. The following menu will appear:



【Previous】 Play previous movie in the play list

【Fast Forward】 Play forward the movie by 2/3/4 times speed.

【Play or Pause】 Play or Pause the movie.

【Fast Backward】 Play backward the movie by 2/3/4 times speed.

【Next】 Play next movie in the play list

【Stop】 Stop the movie and return to the playlist

【Zoom】 Increase the size of the photo by 2/3/4/1 times.

Listening to MP3 music

- Select the desired flash media on main menu. (SD/MMC/MS/USB)
- Select the "MUSIC" option from the menu and press "ENTER"
- A list of music files will be listed on the left side of the screen. The right side consists of the frequency chart and information status bar. The song information area is below the status bar. Use Up/Down arrows to select the music file and press Enter to play.



Press VOL+ to increase the volume or VOL- to decrease the volume.

Press Play/Pause button on remote control to play or pause the music file.

Press Stop button on the remote control to return to the list of music files.

Playing a slideshow with music

Ensure you have at least one picture on your memory card or your USB flash drive. Additionally, you must have one MP3 file saved on the selected memory card/USB/Internal Memory. When this is done:

- Select the desired flash media on main menu. (SD/MMC/MS/USB)
- Select the "FILE" option from the menu and press "ENTER"
- A list of all files on the selected memory card or internal memory will be listed on the left side of the screen. The right side consists of the file information. Use Up/Down arrows to select a picture file and press Enter to enter a full screen photo (pause mode). Press Play button on the remote control, an audio slideshow will begin automatically.
- Once an audio-slideshow is playing, press the ENTER button. The following menu will appear:



【Previous】 Play previous photo in the photo list

【Play or Pause】 Play or pause the current slideshow.

【Next】 Play next photo in the photo list

【Rotate】 Use the rotate function to change the photo orientation to either portrait or landscape.

【Stop】 Stop slideshow and return to photo thumbnail.

【Zoom】 Increase the size of the photo by 2/4/8/16/1 times.

【VOL】 Press VOL+ or VOL- on remote control to increase or decrease the volume

File Management

Copying and Deleting Files

To copy and delete files on your memory card or USB drive.

Copy

- Select the desired flash media on main menu. (SD/MMC/MS/USB)
- Select the "FILE" option from the menu and press "ENTER"
- A list of available files will be displayed. Use the up and down arrows to highlight your required file and press the right arrow to highlight the desired file. Repeat for all files that you want to copy
- Press the "Enter" button to display the Copy and Delete menu. Select Copy function and Enter.
- Use Up/Down arrows to select the file destination folder. Press Right button to confirm.
- Press Enter to start copying the file.

Delete

- Select the desired flash media on main menu. (SD/MMC/MS/USB)
- Select the "FILE" option from the menu and press "ENTER"
- A list of available files will be displayed. Use the up and down arrows to highlight your required file and press the right arrow to highlight the desired file.
- Press the "Enter" button to display the Copy and Delete menu. Select Delete function and press Enter. File will be deleted.

Using the SETUP option

The following options can be changed by using the "SETUP" option from the main menu:

Function	Description
Language	Includes English, French, Spanish, Deutsch, Italian
Slideshow time	Slideshow duration: 3s/5s/15s/1mins/15mins/1hr
Slideshow mode	Off, Random, Fading, Bottom_to_top, Top_to_bottom, Left_to_right, Right_to_left, Door_close, Door_open, Hori_cross, Verti_cross
Music Repeat Mode	Repeat one, Repeat all, Repeat off
Movie Repeat Mode	Repeat one, Repeat all, Repeat off
Display mode	Crop, Stretch, Cinema
Time	Year/Month/Date/Time setup
Alarm	Alarm Time/Alarm Music/Alarm On/off setup
Brightness	Set brightness of screen
Contrast	Set contrast of screen
Saturation	Set colour saturation of screen
Auto Power On	Set time to turn digital picture frame on
Auto Power Off	Set time to turn digital picture frame off
Start Mode Select	Select function preferred to auto-start when power is turned on.
Default	Recover the factory default setup

Calendar/Clock Display

Upon turning on the Digital Picture Frame, you will go straight to the MENU screen. If you select Calendar/Clock and press Enter, you will go to Calendar/Clock screen. If the Alarm is turned on, it will also show the alarm time. A picture slideshow will begin at the picture preview window at the right part of the screen.

DIGITAL PICTURE FRAME



Technical Support

Frequently asked questions

- Q: If I keep showing the same photo for a long time, will it damage the LCD screen?
- A: No. The Digital Picture Frame can display the same photo continuously for a long time. But it is recommended not to show the same picture continuously for more than 1 month.
- Q: How do I store music files?
- A: First, use a personal computer and popular audio editing software to convert your music to MP3 format. The Digital Picture Frame will only play MP3 files so all Windows Media Player™ and/or iTunes™ files will have to be converted first. You can use a card reader or your digital camera to transfer those files to your memory card.
- Q: What is the maximum picture size?
- A: The Digital Picture Frame is able to display pictures up to 12 Mega Pixels.
- Q: Why doesn't the Digital Picture Frame show some of my photos?
- A: The Digital Picture Frame is designed to show photos following the same camera industry standards format as digital cameras. This format is a JPEG format. Images, such as web images, scanned images, or photos in RAW format, are not stored according to camera industry standards and therefore cannot be displayed correctly on the Digital Picture Frame. Please use your PC applications to convert such images into standard JPEG format before viewing them on the Digital Picture Frame.

Troubleshooting

Symptom	Cause	Corrective Actions
Digital Picture Frame doesn't power on.	The Power connector to the unit is not securely inserted.	Be sure that the AC adaptor is properly connected to the frame.
Unable to insert memory card	Memory card inserted in the incorrect slot or in the incorrect direction.	Insert the correct card in the correct slot and direction.
Power is on but the Start-Up screen is not displayed.	System does not work normally	Restart the Digital Picture Frame.
No photo, videos, or music files on memory card.	Memory card is not inserted correctly.	Insert a supported memory card.
No sound from the speakers.	The volume may be in the lowest level; it may be in mute mode.	Confirm the volume is properly adjusted or press MUTE button to exit mute mode.
No background music when slideshow pictures	Background music is off	Press BACK MUSIC button or enter COMBO mode to slideshow pictures.
The files do not play.	Incompatible File Formats.	Make sure there is at least one supported file format on the memory card.
Can not copy or delete files.	The files or memory card are locked.	Unlock the files or memory card.
Remote control does not work.	No battery or weak battery in the remote control.	Insert or change the battery in the remote control.