 


USER MANUAL

Digital Screen

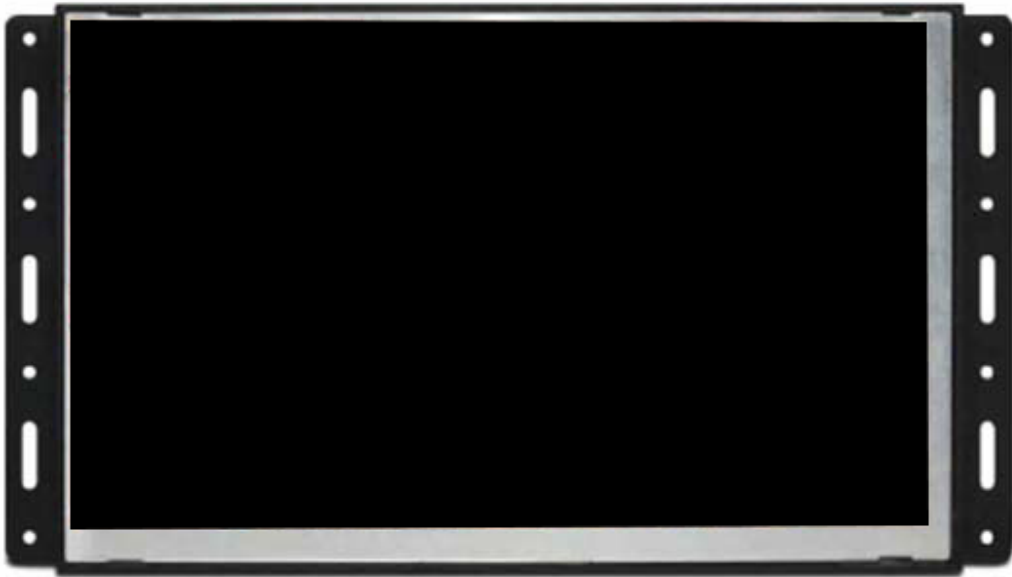

DISPLAYS2GO

Cautions

Precautions and Maintenance

- For indoor use only
- To avoid risk of fire or electric shock, do not expose the unit to moisture or condensation.
- To avoid overheating, do not block the ventilation holes on the back of the LCD Screen.
- Keep the LCD Screen out of direct sunlight.
- Always use the eject buttons on the memory storage card slots to remove the storage cards.
- Do not dismantle the LCD Screen. There is a risk of electric shock and there are no user-serviceable parts inside. Dismantling the LCD Screen will void your warranty.

Cleaning the LCD Screen

- Treat the screen carefully because the screen of the LCD Screen is made of glass and it would easily be broken or scratched.
- If fingerprints or dust accumulate on the LCD screen, we recommend using a soft, non-abrasive cloth such as a camera lens cloth to clean the LCD screen.
- Moisten the cleaning cloth with the cleaning solution and apply the cloth to the screen.

WARNING:

Please power off the unit before inserting or removing a card or USB device.

Failure to do so may cause damage to the card/USB and the unit.

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

This device is designed for private use only!

Introduction:

Thank you for your purchase of the LCD Screen. It is designed to allow quick and easy view of photos taken from your digital camera, mobile phone, or from a memory storage card. Please read this User Manual carefully to learn the correct way to use the LCD Screen.

Features:

1. Support picture format: JPEG ,BMP,PNG
2. Support audio format: Mp3
3. Support video format:
MPEG1,MPEG2,MPEG4,H264,RM,RMVB,MOV,MJPEG,DivX,
AVI, MPG,DAT, VOB, MKV,MP4 (Support (720P,1080i,1080P))
4. Support memory card: SD/SDHC/MMC
5. Built-in memory: optional for 4GB ,8GB SD card
6. USB connection: USB 2.0
7. HDMI interface: Support HDMI-IN function
8. Slideshow with background music
9. Support Scroll Subtitle when playing photo ,Music ,Movie
10. Support Standby Mode function
11. Built-in clock, schedule auto on/off.
12. Support copy files from USB to built-in memory
13. Adjustable brightness, contrast, saturation
14. OSD languages: English and other languages selectable

Packaging Check List:


- | | |
|-------------------|---------|
| 1. LCD Screen | 1 piece |
| 2. AC/DC adapter | 1 piece |
| 3. Remote control | 1 piece |
| 4. User manual | 1 piece |

CONTENTS

1 Product Diagram	4
1.1 Remote Control	4
1.2 Rear and Left Side of Frame	5
2. Installing & Replacing the Battery	6
3. Getting Started.....	6
4. Operating Instruction.....	6
4.1 Main Menu.....	6
4.2 Picture Mode/Delete Function	7
4.3 Music Mode/Delete Function	8
4.4 VideoMode /Delete Function	9
4.5 Copy function for picture/music/video files	10
5. Time Bar function.....	10
6. Scroll Subtitle function	11
7. Calendar	11
8.HDMI-IN Function	12
9. Setup Menu.....	12
10. Technical Specifications	14
11. Troubleshooting Guide.....	14

1 Product Diagram

 
1.1 Remote Control

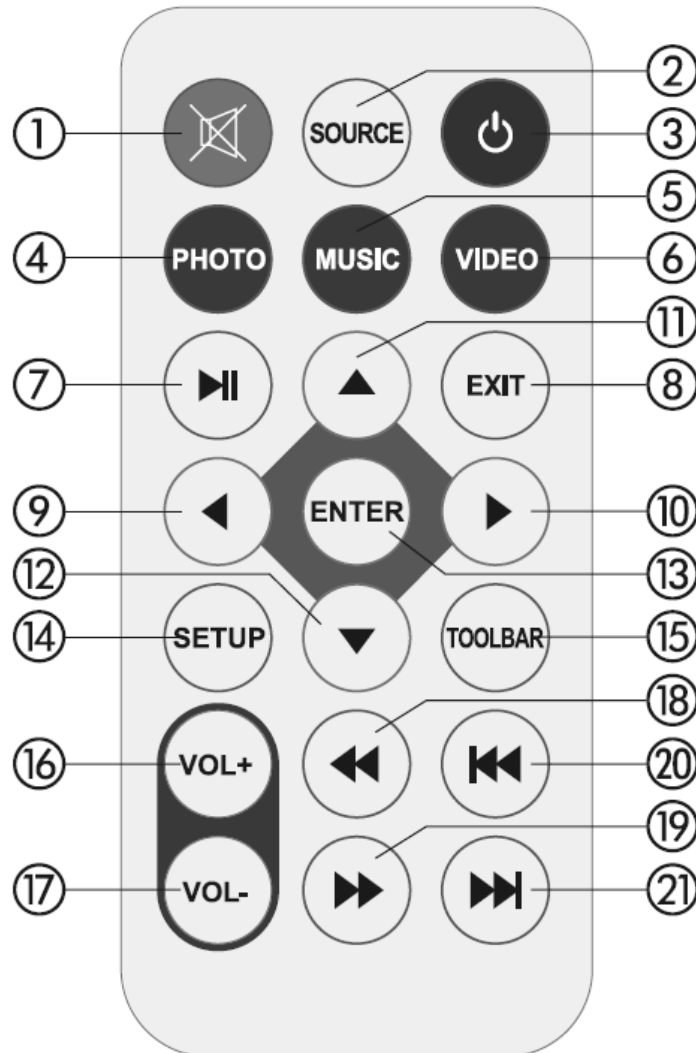


- 1) **Mute**— Silence the voice temporarily
- 2) **SOURCE**— Press it to choose the input Source (HDMI-IN / AV/DMP)
- 3) **POWER** — Switch On/Off.
- 4) **Photo** —Press directly to play Photo
- 5) **Music** —Press directly to play Music
- 6) **Movie**— Press directly to play Movie
- 7) **►||** — **Play/pause**: Press directly to begin playback under stop or pause status, and repress it, it will pause again.
- 9) **Exit**— Return to upper page
- 9) **◀**— Functional selection button from right to left cursor
- 10) **▶**— Functional selection button from right to left cursor

- 9) ▲— Functional selection button from down to up cursor
- 12) ▼— Functional selection button from up to down cursor
- 13) **Enter**— Press to confirm
- 14) **Setup**— Go directly to Setup mode.
- 15) **Toolbar**— Go directly to info bar or delete Photo, Music ,Video
- 16) **VOL +** —Turn up the volume
- 17) **VOL-** — Turn down the volume.
- 91) ◀◀— Back Forward when playing Music or video file
- 19) ▶▶—Fast Forward when playing Music or video file
- 20) ◀◀ — Move back to previous music or video file
- 21) ▶▶ — Move forward to next music or video file

 1.2 Rear and Left Side of Frame

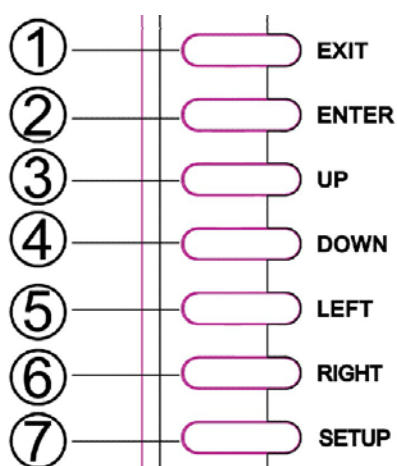

 - 1. Exit
- 2. Play/Pause/OK
- 3. PREVIOUS/UP
- 4. NEXT/DOWN
- 5. Left/ Fast backward
- 6. Right / Fast Forward
- 7. Set Up

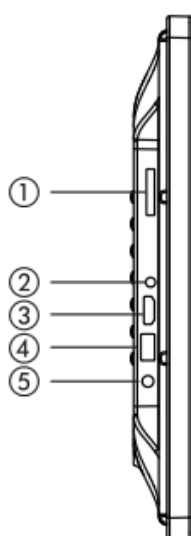

- 1. SD/MMC/SDHC CARD
- 2. AV IN
- 3. Micro-HDMI IN
- 4. USB 2.0
- 5. DC IN

2. Installing & Replacing the Battery

Place the upside of the remote control down, press down on the ridged area of the battery cover and pull towards you to remove the tray. Place one CR2025 lithium button-cell battery on the tray with the positive “+” side facing you. Reinsert the tray.



3. Getting Started

3.1 Plug one end of the included AC adapter into a standard 90-240V AC electrical outlet and the other end into the DC in of the frame.

3.2. Remove the protective film covering the LCD.

 
3.3. Remove the plastic battery insulator from the battery compartment and make sure the remote control has a battery inside. Please refer to “Installing & Replacing Battery” if you need a new battery.

4. Operating Instruction

After turning the units on, it will show the start-up logo, and then show the main interface after 3~5 seconds. If there are Movie in the built-in SD memory , it will Auto-play Movie

4.1 Main Menu

It supports SD/ SDHC/ MMC and USB 2.0 . then press **RETURN** twice to access photo, music, video, calendar and settings. Press **ENTER** to confirm the item you want.

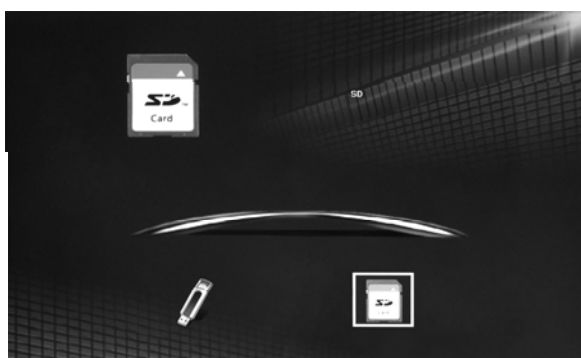


English

Note: 1) Make sure there are supported picture, music and video files in the Card or USB device.


2) you can also select Auto-play Photo, Music, Movie or Photo + Music, off in the **Setup** Menu

 4.2 Picture Mode/Delete Function

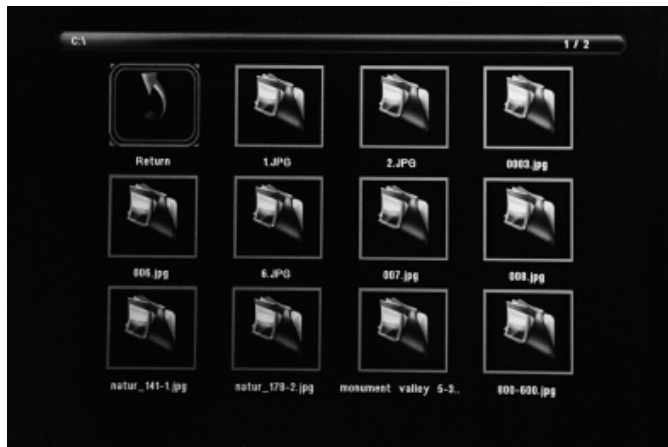


Highlight **Photo** from the main menu, Press **ENTER** to Select USB or memory card you want to play , then press **ENTER** again to access thumbnail mode, press ▲▼◀▶ to select the picture you want to play and press **ENTER** to confirm

 Delete function:

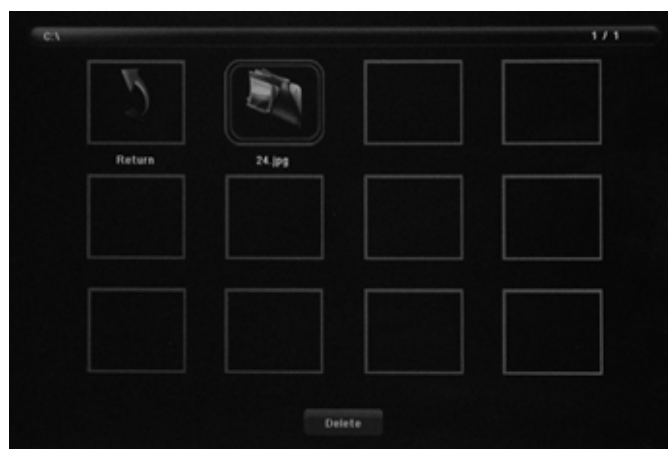

 In thumbnail mode , Use ▲▼◀▶ to select the picture you want to delete , press **TOOLBAR** to enter into Delete interface and then press **ENTER** to confirm

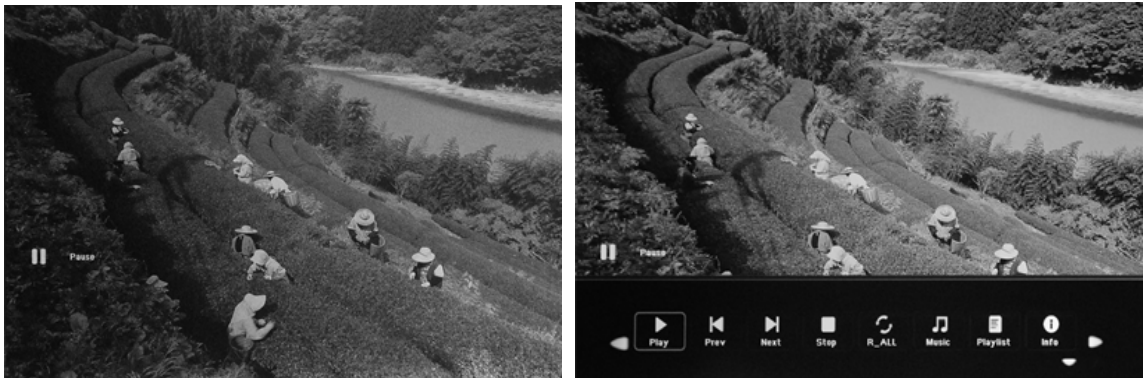


When the single picture is playing, press **SETUP** to enter information Bar, and select following items by **◀ ▶**: **Play/Pause**, **Prev**, **Next**, **Stop**, **R_All**, **Music**, **Playlist**, **Info**, **Rotate**, **Zoom**, **Move**, than press **OK** to confirm.

4.3 Music Mode/Delete Function



Highlight **Music** from the main menu, Press **ENTER** to Select USB 2.0 or memory card you want to play, then press **ENTER** again to access to thumbnail mode, press **▲▼◀▶** to select the music you want to play and press **ENTER** to confirm

 Delete Function :

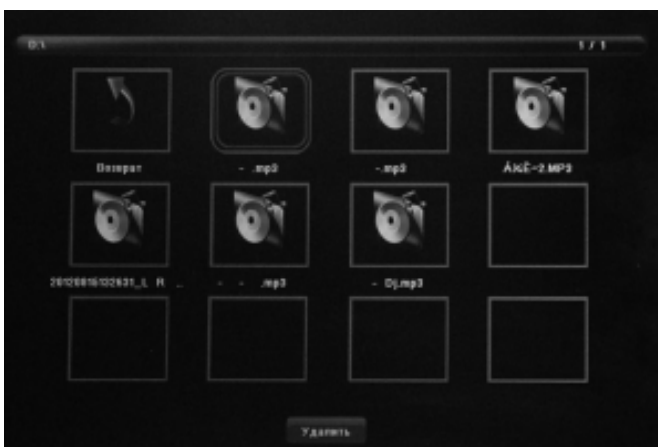


In thumbnail mode , Use **▲▼◀▶** to select the Music you want to delete, press **TOOLBAR** to enter into Delete interface and then press **ENTER** to confirm

Music Play




When the music is playing , press **TOOLBAR** to enter music information bar and select following itmes by ◀▶: Pause/Play, FB, FF, Prev, Next, Stop, R_ALL, Mute, Playlist, Info, Goto Time, then press **ENTER** to operate.

 4.4 Video Mode /Delete Function

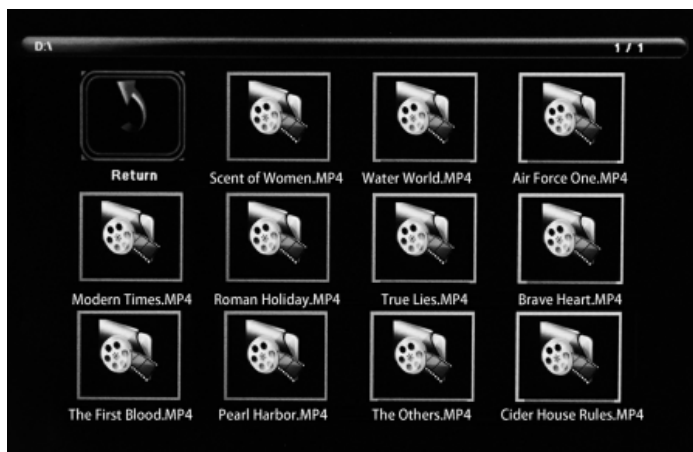

Highlight **Video** from the main menu, Press **ENTER** to Select the RAID, USB 2.0 or memory card you want to play , then press **ENTER** again to access to thumbnail mode, press ▲▼◀▶ to select the video you want to play and press **ENTER** to confirm

 Delete Function:

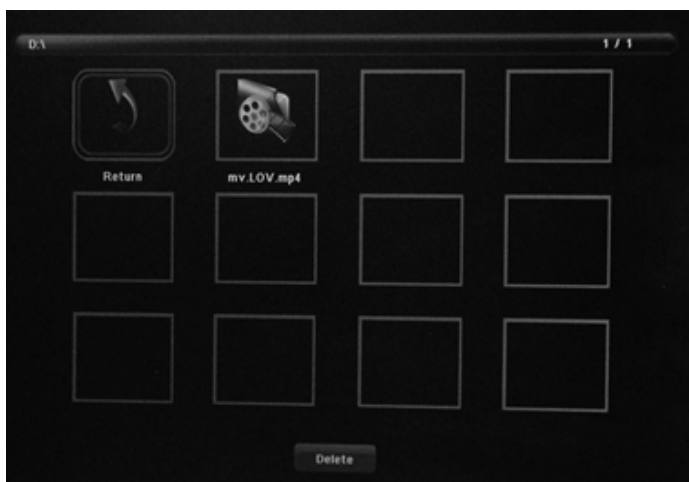



In thumbnail mode , Use ▲▼◀▶ to select the Video you want to delete, press **MENU** to enter into Delete interface and then press **OK** to confirm

Video Play



When the video is playing, press **TOOLBAR** to enter video, and select following items by ◀▶: **Pause/Play, FB, FF, Prev, Next, Stop, R_ALL, Set A, Playlist, Info, SlowF, StepF, Goto Time, Zoom, Move** and then press **ENTER** to confirm.

 
 
4.5 Copy function for picture/music/video files

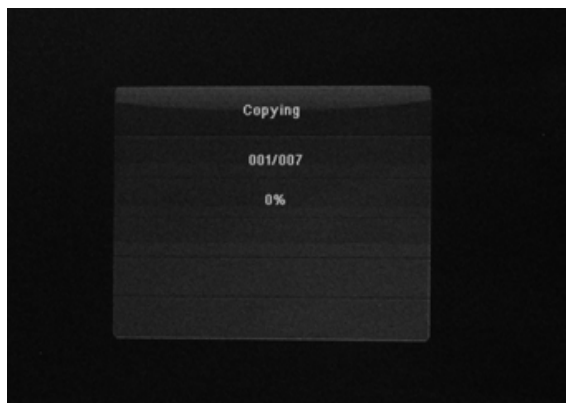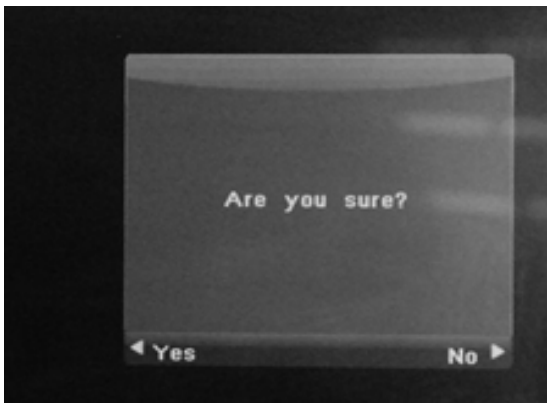

It supports copy all the files from USB device to SD card memory. Enter into Setting interface, select “copy” in the list, and press “**ENTER**” to enter confirming interface, select “Yes” by ◀ or OK button. It will show a progress bar. After copy successfully, the LCD Screen will auto start slideshow.

Remark: Make sure the photo/music/videos files existed in the sub menu of **USB/SD**, not under any folder of **USB/SD**. Or the copy function will be failed.

  5. Time Bar function

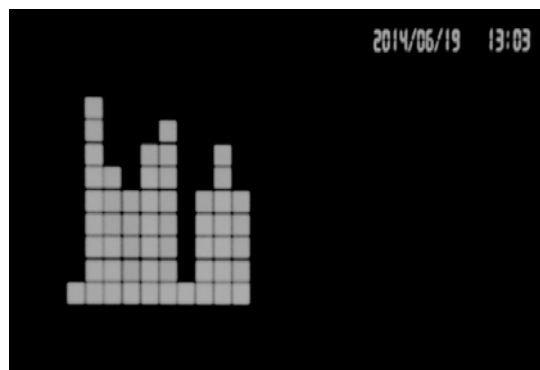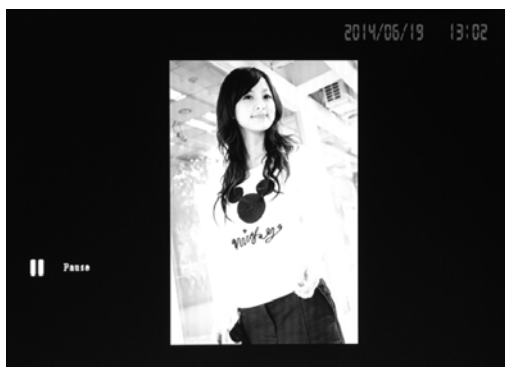

It support **Time Bar function** when playing Pictures/music/Video.
 Enter into Setting interface , select “Time Style” in the list .Use ◀▶ to
 Select “HHMM or HHMMSS or YYMMDD_HHMM or YYMMDD_HMS” you
 want to setup .when playing Photo, Music, Video , Press **TOOLBAR** to show the
 time bar .

6. Scroll Subtitle function



It support Scroll Subtitle function when playing Photo ,Music and video. The
 setting steps of Scroll Subtitle as following

- a) Create a TXT file
- b) Then Save as the TXT file with the code format “Unicode” and named
 “SCROLL.TXT”
- c) Copy this TXT file to USB disk or Memory card you want
- d) Insert the USB disk or Memory card , it will show the Subtitle when
 playing Photo or Music or videos

Remark: 1.Make sure there are some pictures/music/videos existed in USB/SD,
 not under any folder of USB/SD. Or the scrolling function will be failed.

 
2. If you want to display new subtitle , please unplug the adapter to
 power off to clear the memory ,otherwise the DPF still display the previous
 scroll subtitle .

7. Calendar




Enter into **Calendar** from the main menu, Browse the calendar by ▲▼◀▶.

8. Micro-HDMI-IN Function

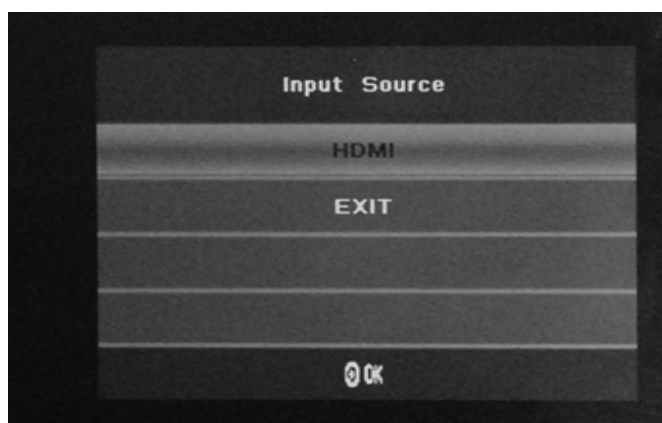

Connect the Micro-HDMI-out device with the Micro-HDMI-IN interface of the frames. Press **SOURCE** then select "HDMI" to change the input source.

 9. Setup Menu

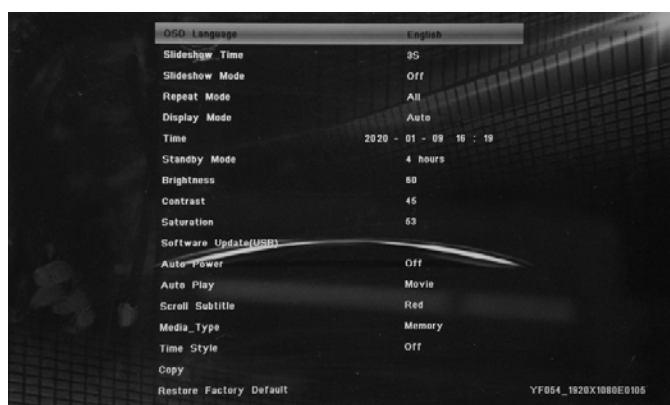

Highlight **Setup** in the main Menu, press **ENTER** to access, press ▲▼ to select the item you want ,Press◀▶ to select the sub-item you want to setup (Note : **EXIT** is to exit to Main Menu but **SETUP** is exit to upper page)

9.1 Language: German, English and other languages selectable

9.2 Slideshow Time: 3S/5S/10S/30S/60S/120S/300S

9.3 Slideshow Mode : Off/On

9.4 Repeat Mode : All/One/Off

- 9.5 Display Mode: Auto, Fit, Panorama ,
- 9.6 Time: Press **ENTER** to enter, and then press ▲▼ ◀▶ to adjust the time you want to set: Date, Month, Year, Hour, Minute, Sec
- 9.7 Brightness: Use ◀▶ to select from 0 (lowest) to 100 (highest)
- 9.8 Contrast: Use ◀▶ to select from 0 (lowest) to 100 (highest)
- 9.9 Saturation: Use ◀▶ to select from 0 (lowest) to 100 (highest)
- 9.10 Software Update(USB): Upgrade software by USB disk
- 9.11 Auto Power: Press **ENTER**, then use ▲▼◀▶ to set the frequency of Power on/off as following: Once Times, Every Day, off
 Use ▲▼◀▶ to enter to select Alarm ID you want
 Use ▲▼◀▶ to choose off /on, When select "on" ,then you can setup Hour ,Min, you want to Auto power on/off
- 9.12 Auto Play: Press **ENTER**, then then use ▲▼◀▶ to select the auto play type as following: Photo, Music , Movie ,Photo+ Music ,off
- 9.13 Scroll Subtitle: Black ,White ,Red, Blue, Green , Off
- 9.14 Copy : Support Copy files from USB to SD card memory
- 9.15 Time Style:Off,HHMM,HHMMSS,YYMMDD_HHMM,,YYMMDD_HMS
 Use ◀▶ to select Time Style when playing Photo, Music, Video
- 9.17 Restore Factory Default: Press **ENTER** to confirm.

10. Technical Specifications

- **Adapter:** Input: AC 90-240V 50/60HZ Output: DC 5V /1.5A
- **Picture Formats:** JPEG ,BMP,PNG
- **Audio Formats:** Mp3
- **Video Formats:** MPEG1,MPEG2,MPEG4,H264,RM,RMVB,MOV,MJPEG, DivX, AVI, MPG,DAT, VOB, MKV,MP4 (Support (720P,1080i,1080P))
- **Screen Parameter:**
 - Screen Size: 7 inch TFT
 - Resolution: 1024*600Pixel
 - Aspect Ratio: 4:3
 - Brightness:200- 250cd/m2
 - Contrast:700:1
 - Response Time: 20ms
 - Viewing Angle: 60°(left/right/vertical), 40°(horizontal)
 - Working Temperature: 0℃~40℃, Humidity: 10-95%

11. Troubleshooting Guide

If you are having problems with your player, please consult both this guide and manual.If you need further assistance, please contact Technical Support.

- **No power:**
 - Please check whether the plug is inserted correctly.
- **Remote control no function:**
 - Please check whether the battery has power (the battery can be used for half a year in normal conditions). Replace with new battery if necessary.
- **Can not read the CARD or USB:**
 - Please confirm whether there is storage in the card or USB device.
 - Empty devices cannot be read.
- **Can not play the file:**
 - Please confirm if the file format is compatible with the player.
- **Display too bright or too dark:**
 - Please adjust the brightness or contrast in the setup menu.
- **The color is light or no color:**
 - Please adjust the color and contrast setup.
- **No sound:**
 - Please check whether the volume is correct and the player is not in Mute mode.