 


Display Stand

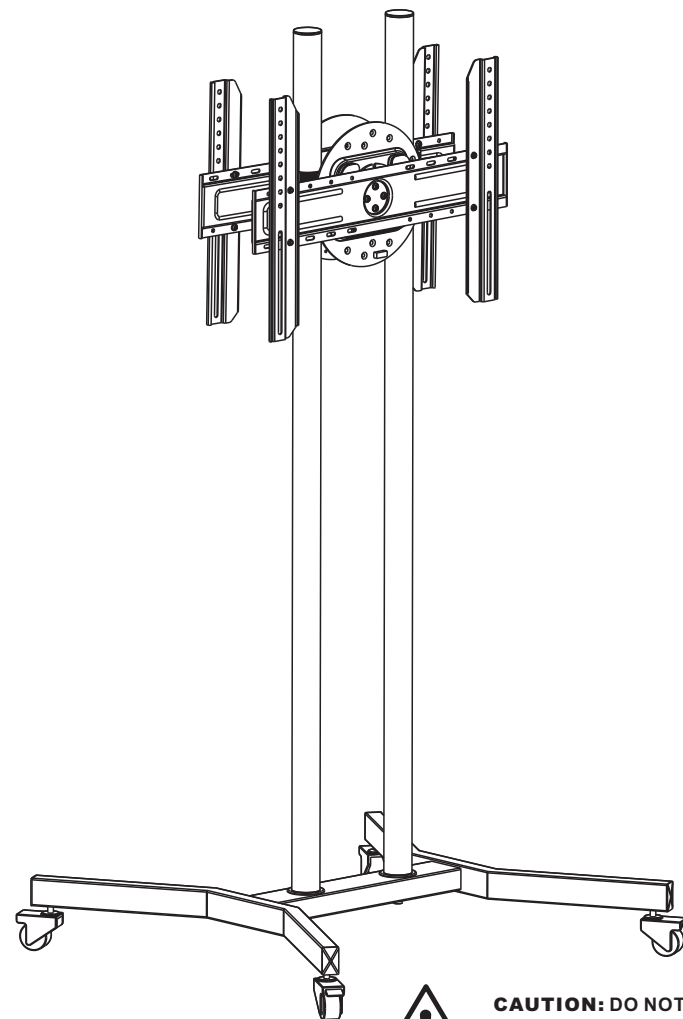

CAUTION: DO NOT EXCEED MAXIMUM LISTED WEIGHT CAPACITY. SERIOUS INJURY OR PROPERTY DAMAGE MAY OCCUR!



200X200/300X300/400x200
400x400/600x400



40kgx2
(88lbs)x2
MAX

 
NOTE: Read the entire instruction manual before you start installation and assembly.

⚠ WARNING


- Do not begin the installation until you have read and understood the instructions and warnings contained in this installation sheet. If you have any questions regarding any of the instruction or warning, please contact your local distributor.
- This mounting bracket was designed to be installed and utilized **ONLY** as specified in this manual. Improper installation of this product may cause damage or serious injury.
- Make sure that the supporting surface will safely support the combined load of the equipment and all attached hardware and components.
- Never exceed the maximum load capacity.
- Always use an assistant or mechanical lifting equipment to safely lift and position equipment.
- Tighten screws firmly, but do not over tighten. Over tightening can damage the items, greatly reducing their holding power.
- This product intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.
- The display stand is not affixed or secured to the floor and may therefore tip over or fall if screen or stand is shaken or hit. Do not let children play alone around stand as they could get hurt by a falling screen. Not recommended for use in areas with heavy traffic.

Component Checklist

IMPORTANT: Ensure that you have received all parts according to the component checklist prior to installing. If any parts are missing or faulty, telephone your local distributor for a replacement.

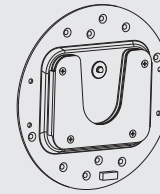

top plate (x2)
A

 


adapter plate (x2)
B




left adapter bracket (x2)
C



 right adapter bracket (x2)
D



base (x1)
E

 

pillar (x2)
F



wheel caster
with brake block (x2)
G



wheel caster (x2)
H

 
Package M




M5x14 (x8)
M-A




M6x14 (x8)
M-B




M6x30 (x8)
M-C

 

M8x30 (x8)
M-D

 

M8x50 (x8)
M-E

 

washer (x8)
M-F



small spacer (x16)
M-G



big spacer (x16)
M-H

Package P



M6x10 (x16)
P-A



M10x25 (x2)
P-B



 
ø10.5xø28x2
washer (x2)
P-C



ø6.6xø12x1.5
washer (x8)
P-D



Allen key 8mm (x1)
P-E




Allen key 5mm (x1)
P-F



Allen key 4mm (x1)
P-G

 
1. Installing Wheel Casters

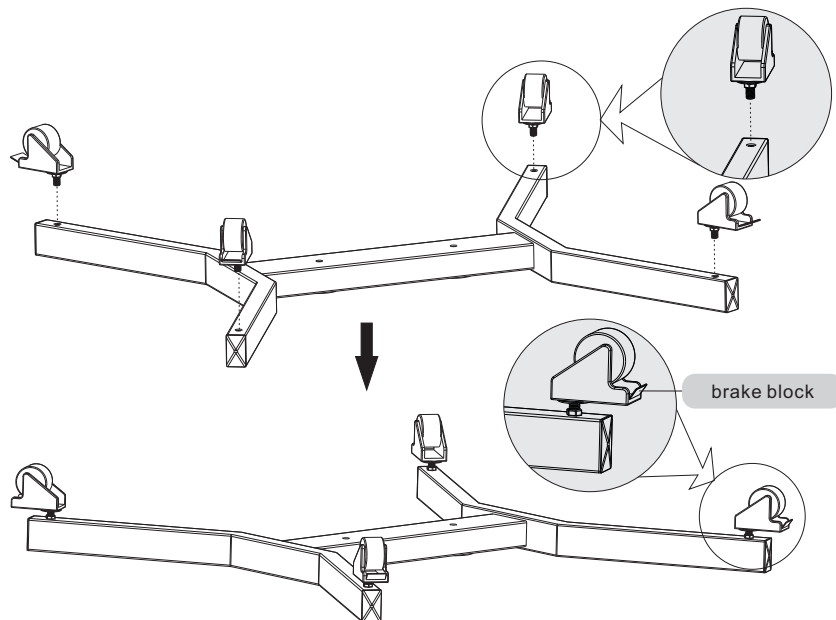


Insert four wheel casters into holes of base and tighten the nuts of wheel casters to secure.

Note: Lock brakes on casters to avoid sudden movements during installation.

 
2. Installing Pillars

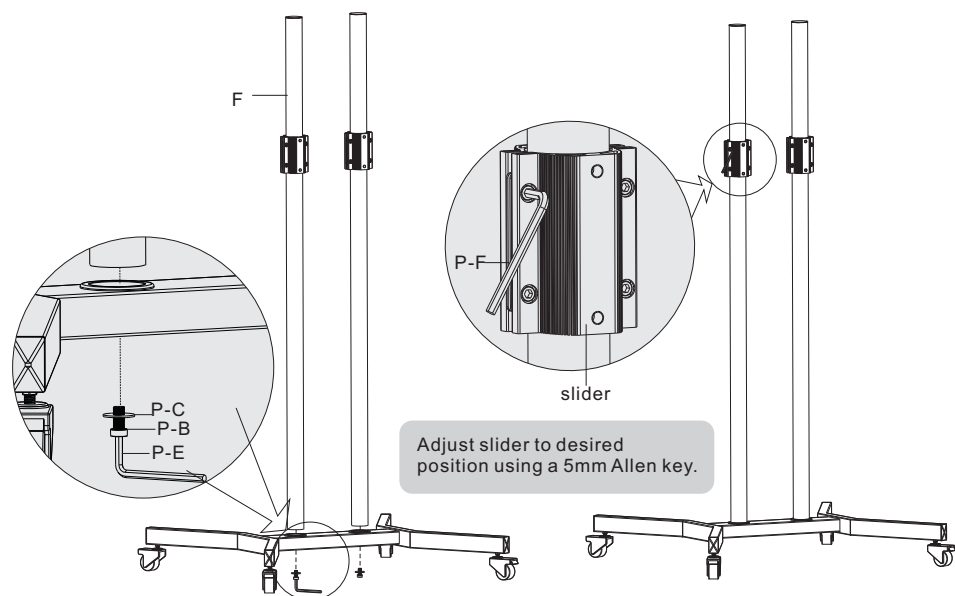


 
3. Installing Wall Plates

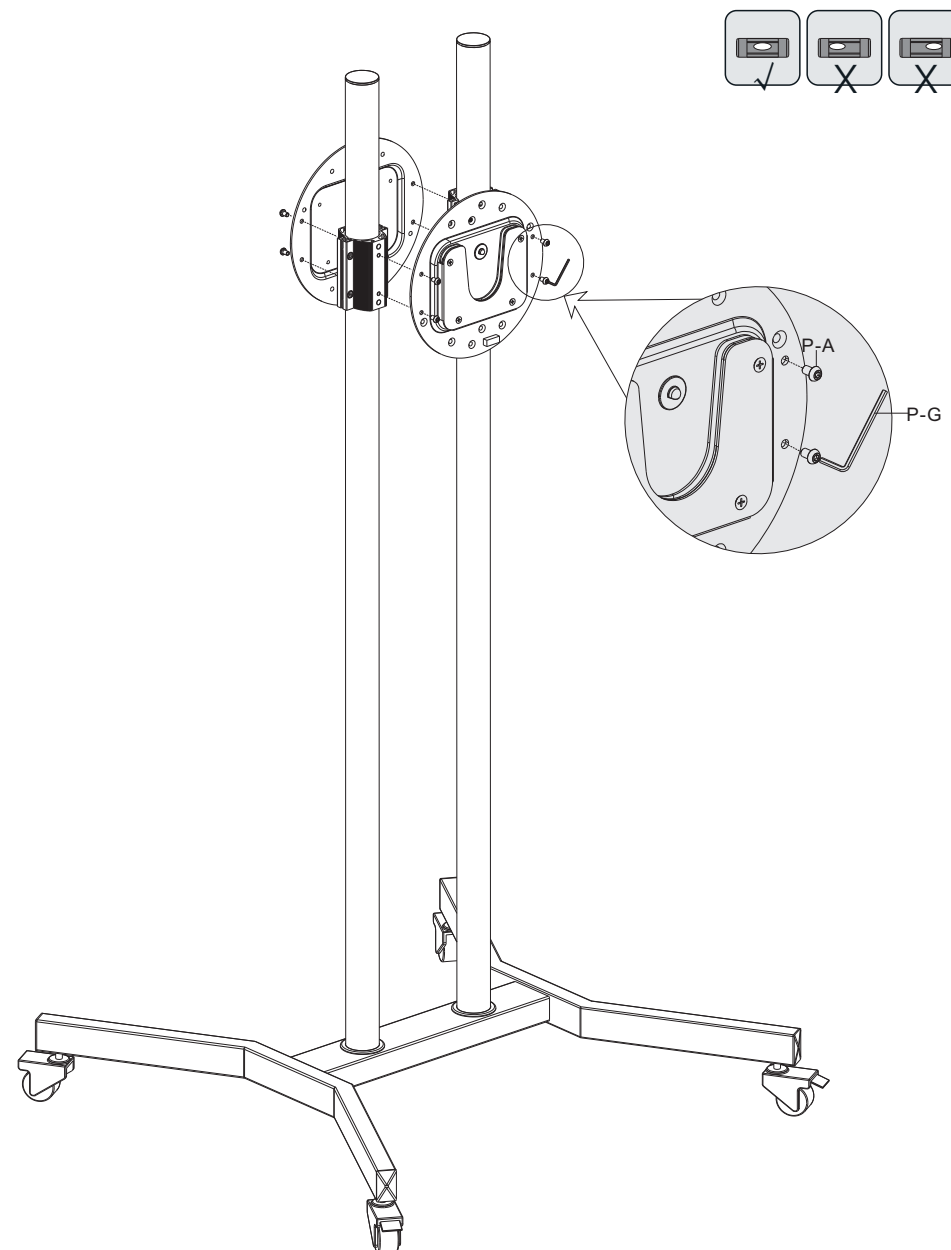






 
2. Install the Adapter Brackets

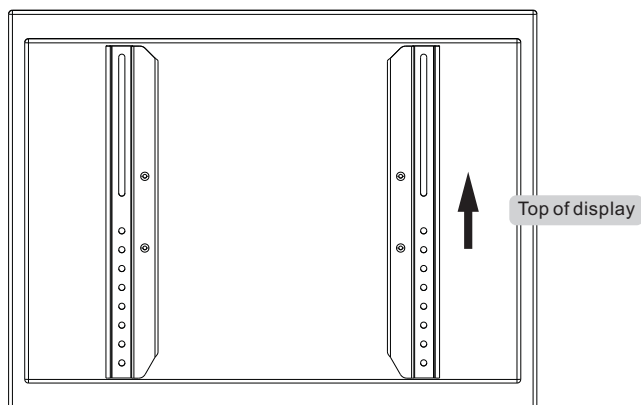

2-1 For Flat Back Screen


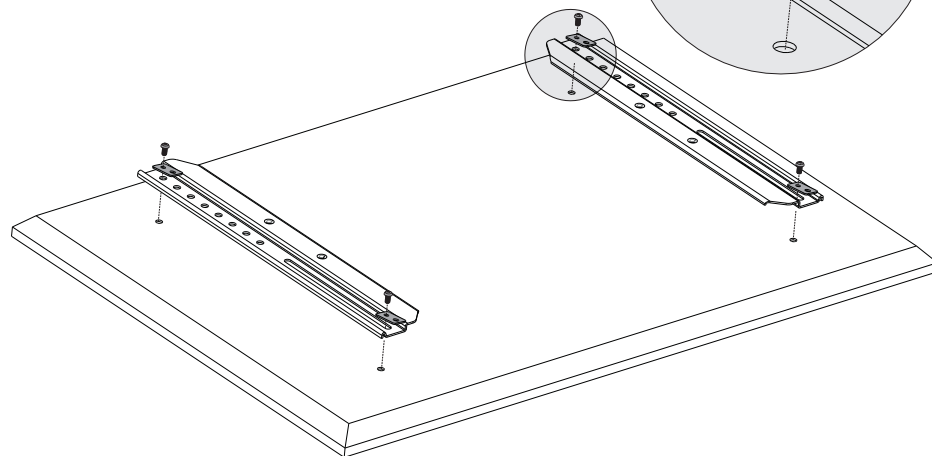 
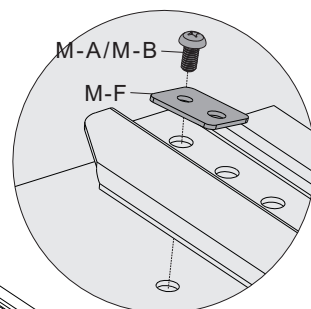 


      2-2 For Recessed Back Screen or to Access A/V Inputs

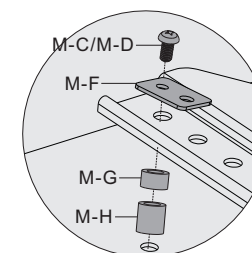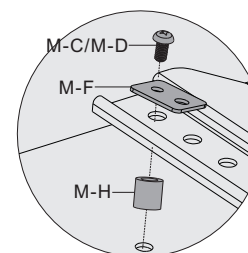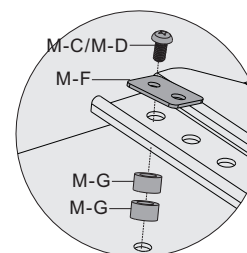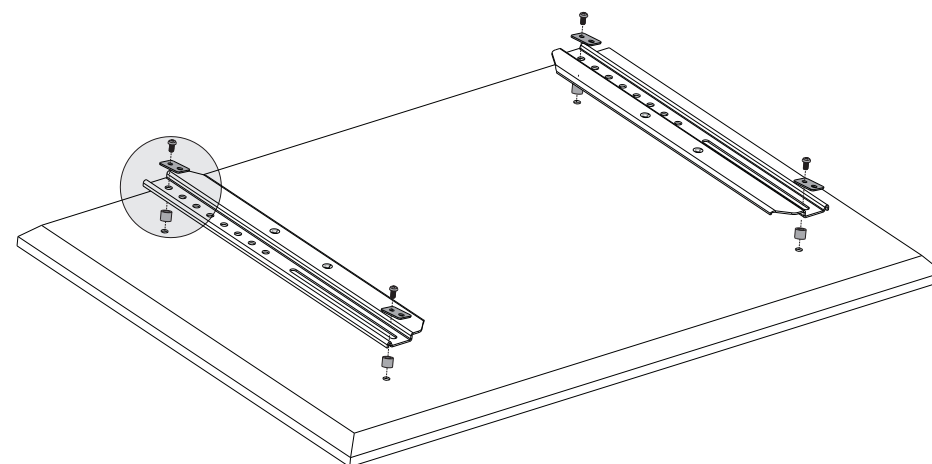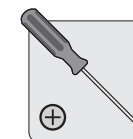

or

   or

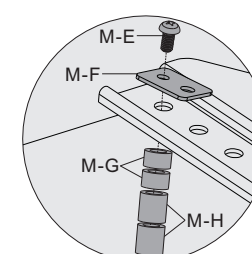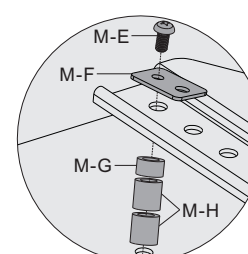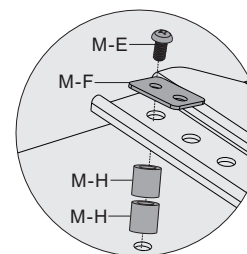


Note: Choose appropriate screws, washers and spacers (if necessary) according to the type of screen.


- Position the adapter brackets as close as possible to the center of the display.
- Screw the adapter brackets onto the display.

Tighten all screws but do not over tighten.

 
5. Installing Adapter Plates

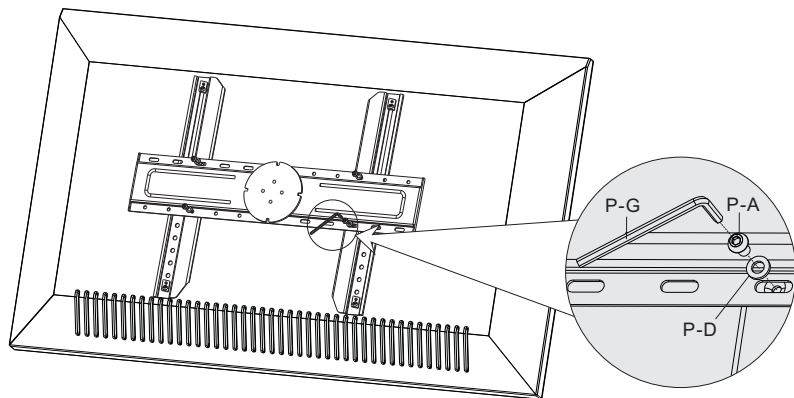

 6. Hang the Brackets onto the Top Plates

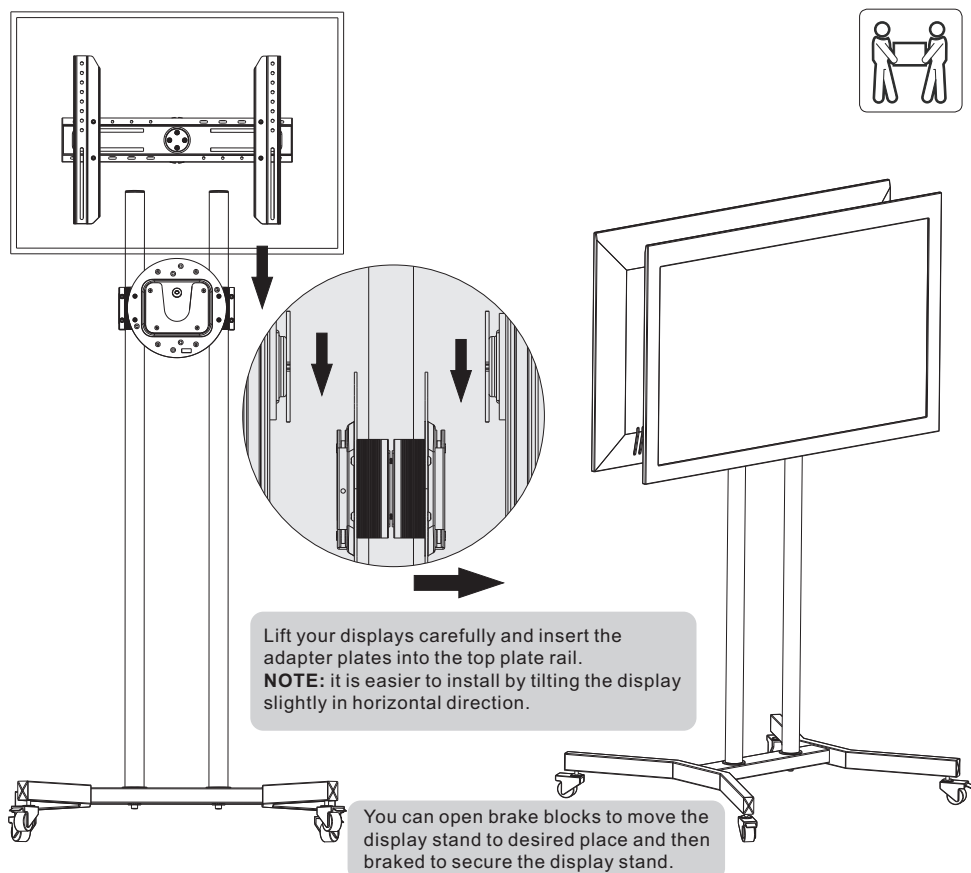


 7. Angle Adjustment

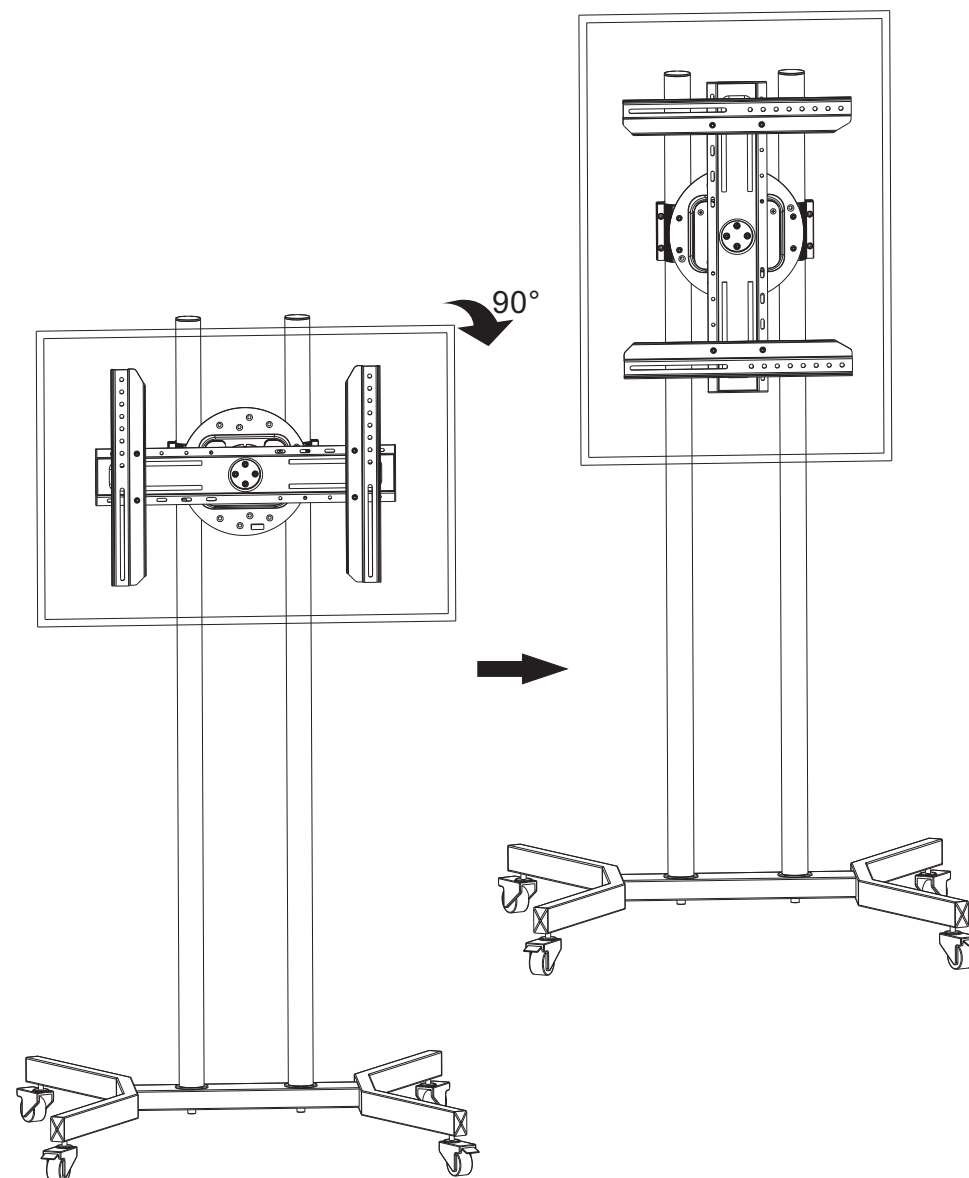

Firmly hold two edges of the displays and turn then into the desired angle. the pitching angle can be adjusted in a position of 0°, 90°, 180° and 270°.

 8. Removing Displays

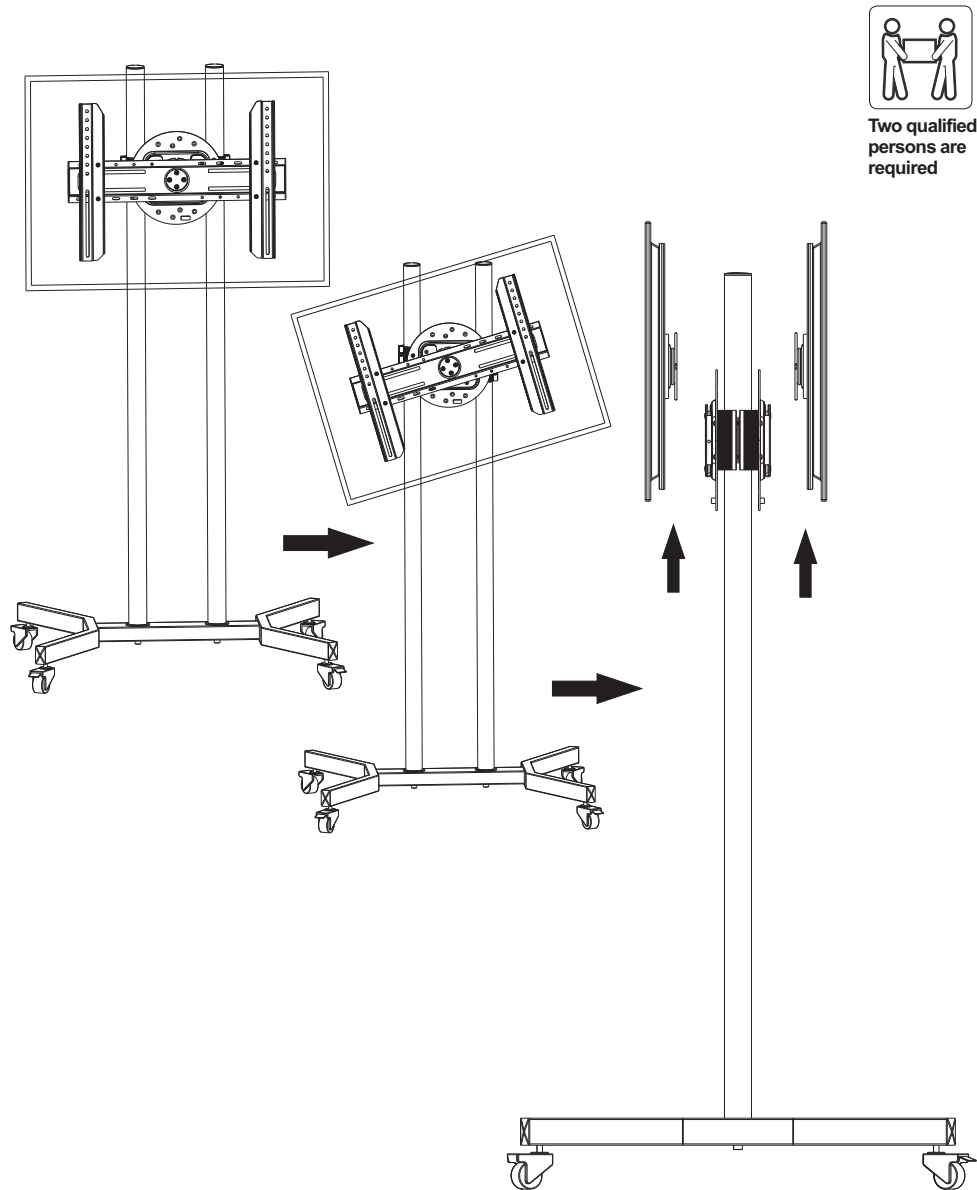

To remove the displays from mount, turn the display into an inclined position, and then lift the display off.
Note: Make sure the rotation angle of display is not in a horizontal and vertical position, but in an inclined position.