

INSTRUCTIONS

FDIFCRCH - Inflatable Chair Core

DISPLAYS2GO



1. Remove the packing materials and lay out the inflatable chair and the cover on a clean surface.



2. Unfold the air chair, locate the valve.



3. Open the valve and connect with the pump to inflate.



4. Inflate 1/3 of the air chair from the valve, place the air chair inside the cover.



5. Close the 1st valve tightly. (See image on the right)



6. Inflate another 1/3 of the air chair through the 2nd valve.



7. Adjust the cover, then fully inflate the the air chair.



8. Pull the zipper to close the cover.



9. Place the air chair at its upright position. The assembly is finished.



Scan QR code to visit the product page:



If you have any questions regarding our products, please visit us at www.displays2go.com or contact D2G customer service at 844-221-3388.