FDIFCRLS - Inflatable Loveseat



1. Remove the packing materials and lay out the inflatable sofa and the cover on a clean surface.



2. Unfold the air sofa, and locate the valves.



3. Open the valve and connect with the pump to inflate.



4. Inflate 1/3 of the air sofa, from the valves.



5. Close the 1st valve tightly. (see image on the right)



7. Inflate another 1/3 of the air sofa.



8. Adjust the outside cover.



6. Place the air sofa inside the cover.

9. Pull the zipper to close the cover,

with only the valve exposed.

Inflate the whole air sofa.



10. Push the valve inside the cover and zip up the cover completely. Place the sofa in its upright position. The assembly is finished.



Scan QR code to visit the product page:



If you have any questions regarding our products, please visit us at www.displays2go.com or contact D2G customer service at 844-221-3388.