FDIFCRST - Inflatable Table

DISPLAYS2GO



1. Remove the packing materials. Lay out the inflatable table and the fabric cover on a clean surface.



2. Place the top plate and the table inside the cover. Keep the valve facing the opening of the fabric cover.



3. Expose the valve and connect it with the pump to inflate.



4. Inflate 3/4 of the table through the main valve.



5. Close the 1st valve tightly. (see the image on the right)





6. Place the bottom plate inside and inflate the whole table with the 2nd valve.



7. Close the 2nd valve and pull the zipper to close the cover. The assembly is completed.



Scan QR code to visit the product page:



If you have any questions regarding our products, please visit us at www.displays2go.com or contact D2G customer service at 844-221-3388.