

GCH5724WT / GCH5724BK Series Assembly Instructions:

* PLEASE CONFIRM ALL PARTS SHOWN OR NOTED ARE PRESENT BEFORE STARTING. DO NOT DISCARD PACKING.

- Parts:** (1) Base
(1) Wire Frame
(1) Pin
(1) Washer
(1) Bearing
(1) Header Clip
(2) Poles (1 having a male end)

Assembly:

Step 1: Place the base on the floor and insert pole into the base until completely seated. *** Male end should be facing up and pinhole side should be on the bottom facing the base.



Step 2: Place washer and ball bearing assembly onto the flange top washer is attached to the card display.



Step 3: Slide 2nd pole onto the male end of the 1st pole.



Step 5: Place header clip on top of the assembled poles.



Step 4: Slide wire frame onto the assembled poles

