



# Mini TV BOX

## User Manual

### Chapter 1 System Connection

- 1.1 AV Connection
- 1.2 HDMI Connection



### Chapter 2 Remote Control

#### 2.1 Introduction of Remote



- POWER:** Press to turn/off.
- MEDIA:** MEDIA: You can browse the file inserted in the TV U disk
- APP:** APP: Fast key to go to android application
- VOL+ VOL-:** VOL: Press to increase/decrease the volume.
- HOME:** Home: Fast key to go back to main menu.
- RETURN:** Press to return back to previous menu.
- Navigation:** Press to navigate left/right/up/down. Press OK to confirm your choice.
- MENU:** Press to choose fuction menu of corresponding application in video,music,photo and website.
- Mouse:** Fast key to go back to mouse.
- Number keypad 0-9:** Press to input Arabic number.
- Mute:** Press to turn down the volume.
- Backspace:** Press to back.
- 1/a** Switch

### Chapter 3 Network and My Apps

#### 1.Wi-Fi

Check "Wi-Fi",System will start scanning available wireless access points around you automatically.

Choose an access point and enter the password.

After Authenticating IP address will be given to the box and "connected" is shown,wireless connection is available now.

Notice: Wi-Fi connection and Ethernet connection are mutually excluded

#### 2.Ethernet

Click "Ethernet",box will start DHCP process automatically.

Box will automatically stop Wi-Fi connection and Up Ethernet connection at the moment when Ethernet jack is plugged in.

When the IP address appears,the network connection is available.

Notice: As the TV BOX without RJ45 port,an USB to RJ45 converter is needed for Ethernet connection

#### 3.My Apps

Move to "Apps",press to enter into system apps working interface

You can find the apps working situation from here.

You can download app from Google Play Store,and install it on the device.



### Chapter 4 Trouble Shooting

#### Warning

Under no circumstances should you try to repair the TV BOX by yourself,as this will invalidate the warranty.Do not open the TV BOX as there is a risk of electric shock.If a fault occurs,first check the with the points listed below before taking the TV BOX for repair.If you are unable to remedy a problem by following hints,consult your dealer for help.

Problems	Solutions
No power	-Check if the power adapter is properly connected to the power and the TV box -Press the power on the remote control to turn on the power
No picture	-Reconnect with HD cable or AV cable -Check if the TV is switched on
No sound or distorted sound	-Adjust the Volume -Check that the speakers are connected correctly
No audio or digital output	-Check the digital connections -Check if your amplifier is set correctly
The player does not respond to the remote control	-Aim the remote directly at the sensor on the front of the TV box -Reduce the distance to the TV box -Replace the batteries in the remote control
Player does not respond to some operating commands	-Operations may not be permitted.Refer to the user manual -Possibility of system halted,re-insert with power adaptor to restart the TV box
No sound during movies playback	-The audio code may not be supported by the TV box.You can change the supported audio on playing menu -Check the volume
The contents of the USB flash drive cannot be read	-The USB flash drive format is not compatible with the TV box. -If one of the USB cannot be read.Please turn off the TV box for 30 seconds and restart the TV box
Slow operation of the USB flash drive	-Big file size or high resolution USB flash drive takes longer time to read and display on the TV screen
No sounds with HDMI cable	-Check the connection between the TV and the HD jack of box -Check your system setup -Check the Volume
The TV screen is blank and the player LED is blinking	-Turn off your TV box,wait for 30 seconds,turn it on again -If under HD status,check if HD connection is correct or change another HD cable set the output resolution of this TV box into 720P

### Chapter 5 Maintenance Notice

To protect the normal use of all accessories,please make sure you understand and pay attention to the following points.

Only use power adapters with power input AC100~240V,output DC 5V/2A.Using power adapters of any other specification may result in the device being damaged beyond repair.

Under normal working conditions,the power adapter will be warm.Please keep the Mini TV BOX Player and its power adapter in a well ventilated area.

Do not place the device on the bed,sofa or similar surface as this may inhibit the device's ventilation.

Do not attempt to repair the device yourself or disassemble it. Even when the device is unplugged from the mains power, it may still hold enough charge to cause serious harm.

If the power cord is broken or has become stripped of its protective layer,it is highly advised to switch off the device and remove the power cord immediately.

If the device has come into contact with any liquid,it is highly advised to switch off the device immediately and remove the power cord from the mains power.

Do not place any foreign objects on top of the device as this may cause interference with the Mini HD Player.



This marking shown on the product, accessories or literature,indicates that the product and its electronic accessories(e.g.charger,headset,USB cable)should not be disposed of with other household waste at the end of their working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal,please separate these items from other types of wastes and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product,or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

All rights reserved.

All other brand names or trademarks are the properties of their respective owners.