HVAWM3260S

INSTRUCTIONS

PLEASE READ THESE INSTRUCTIONS CAREFULLY AND KEEP FOR FUTURE REFERENCE! IF YOU DO NOT UNDERSTAND THE INSTRUCTIONS, OR DO NOT FEEL THAT YOU CAN FOLLOW THEM SAFELY, CONTACT A QUALIFIED CONTRACTOR. THE WARRANTY WILL BE HONOURED IF ACCOMPANIED BY AN ORIGINAL SALES RECEIPT, AND ONLY IF THE INSTRUCTIONS HAVE BEEN FOLLOWED EXACTLY.

- The HVAWM3260S is designed to mount a panel onto a vertical wall. Hardware for mounting to a wood stud is included. For mounting to any other surface, it is recommended you contact a qualified contractor.
- The wall or mounting surface must be capable of supporting the combined weight of the mount and the display, otherwise the structure must be reinforced.
- Safety gear and proper tools must be used. A minimum of two people are required for this installation. Failure to use safety gear and/or attempting this installation alone can result in property damage, serious injury, or death.
- Follow all instructions and recommendations regarding adequate ventilation and suitable locations for mounting your flat panel. Consult the owner 's manual for your flat panel for more information.

0

0 A

- This product will hold flat panels up to 60["] and weighing up to 150 lbs.
- VESA 200mm x 200mm-600mmx400mm.

Tools Required

- Stud finder ("edge to edge" stud finder is recommended)
- Phillips screwdriver
- Pencil
- · Hammer Drill (Concrete installation only)
- 1/4" drill bit for wood studs, 3/8" drill bit for concrete
- 7/16" socket wrench or bit driver for wood screws
- Level
- Tape measure

Parts List



Step 1A - Mounting the wall plate to wooden studs (Fig. 1) The HVAWM3260S can be mounted onto two wooden studs, with center to center distances between 16" (406mm).

Using an electronic stud finder, locate the center of the two wooden studs at the desired mounting location. Mark the stud center positions directly on the wall. Connect the stud marks with a horizontal line and find the center between them to represent where you wish the center of the screen to be located. Be sure to measure and mark the center of this horizontal line.

Place the wall plate on the wall. Pin the wall plate to the center mark on the wall.

Using a level (bubble or laser), level the guide, and then press the adhesive backing against the wall to hold the guide in place. Using a 1/4" (6mm) drill bit, drill 4 pilot holes into the center of the studs, down to a depth of 3" (76mm).

NOTE: It is not recommended to use a drill driver or impact wrench to tighten bolts. Tighten lag bolts so that wall plate is firmly attached to wall, but DO NOT over-tighten. The lag bolts can be damaged by over-tightening which will strip their threading. Final tightening of lag bolts should be done by hand using a ratchet wrench and socket.

> CAUTION: Two people recommended for lifting

Step 1B - Mounting the wall plate to concrete (Fig. 2)

Place the wall plate on the wall. Pin the wall plate to the center mark on the wall. Using a level (bubble or laser), level the guide, and then press the adhesive backing against the wall to hold the guide in place. Using a 3/8" (10mm) masonry drill bit, drill 4 mounting holes 3-1/8" (80mm) deep into the concrete/masonry surface.

NOTE: It is not recommended to use a drill driver or impact wrench to tighten bolts. Tighten lag bolts so that wall plate is firmly attached to wall, but DO NOT over-tighten. The lag bolts can be damaged by over-tightening which will strip their threading. Final tightening of lag bolts should be done by hand using a ratchet wrench and socket.





Wood Stud

6mm (1/4")

Hole

Lag Bolt With Washer M8*70mm--(M)

Fig. 3

Step 2 - Assembling the Adaptor Plate (Fig.3)

Insert slider plates (x4) into the adaptor rails, then insert the adaptor brackets into the adaptor rails. Attach the adaptor bracket and slider plates with four M6*12mm screws and four ϕ 6mm metal washers using a Phillips screw driver.

Attach the adaptor bracket onto the panel using the provided M5, M6, M8 screws.

NOTE: Determine the correct diameter of screw to use by checking your panel's user manual, or by testing the screws provided. Make sure not to force any of the screws into the panel.

NOTE: If the back of your panel is flat and the mounting holes are flush with the surface, use the shorter panel screws. If the back of your panel is curved, protruded, or recessed, use the longer screws. You may also need to use spacers (J) with the longer screws.

Now slide the opposite mounting rail into position, align it with the mounting holes, and secure using the mounting hardware.



Step 3 - Attaching the flat panel to the mount

By hand, insert two M8*12mm screws and $_{\varphi}$ 8 mm metal washers into threaded holes on the adaptor panel as shown in Fig.4. Leave approximately 3/8" of exposed thread.

With the help of an assistant, carefully lift the ^w panel and attach it to the mount head cautiously. Tighten the screws as shown in Fig.5.

> CAUTION: Two people recommended for lifting

Step 4 - Using cable management (Fig. 6)

The HVAWM3260S includes a cable management system where cable can be routed along the length of the arm assembly.

Route the panel cable along the entrance of the cable management slot.

NOTE: For optimal performance, route the AC power cable separately from the audio and video cables

With all cables in place, pull the panel in and out to be certain that the arm assembly moves freely, without stretching or damaging the cables.



Step 5 - Adjusting the flat panel

The HVAWM3260S provides a wide range of adjustment possibilities to suit your environment.

Roll Control - Horizontal levelling of the flat panel display. Grasp the edge of the panel and roll it up or down into a level position (Fig.7.1).

Loosen the screws as shown in Fig. 7.2 to allow roll control adjustment. Tighten screws by hand when finished.

Tilt Adjustment - Raising or lowering the screen to improve viewing angle. First release completely the tilt knob as shown (Fig.9) Next, grasp the upper and lower edges of the panel, and then turn it to the desired tilt angle (Fig.8).

Fig. 8

To lock the tilt angle, tighten the tilt knob (Fig.10) securely.

NOTE : For heavier panels, never fully release the tilt knob without fully supporting the panel. The tilt lever includes a ratchet function, so that it can be lifted and repositioned for the next turn. To operate the ratchet, pull the lever straight out, rotate it to an unobstructed position, release the lever, and then turn it in the desired direction. Repeat as necessary until the tilt tension is set properly (Fig.10)







Tilt knob Fig. 9

Release tilt knob



Swivel - Adjust the flat panel display for off-center viewing positions. Grasp the side edges of the panel and then swivel it into its desired position (Fig.11).

Panning - Position the flat panel display at an angle to the wall for viewing from opposite sides of the room. Grasp the side edges of the panel and then swivel and pull the panel into desired position (Fig.12).

Portrait and Landscape-Before portrait and landscape viewing, Fig. 12 make sure the adaptor bracket have already tightened with adaptor rail by 4 pcs slider plates, M6x12 screws and washers(Fig.13-1). Loose the level screws (Fig.10-b), and rotate 90 degrees for portrait and landscape viewing, then tighten the level screws. NOTE: Do not fully loose the level screws for heavier panels.



back towards the wall into the retracted position (Fig.15).

small amount of slack in cables to allow for easy movement without

Fig. 13-2 Retracting the flat panel - Position the panel against the wall. Grasp the side edge of the panel, swivel and pull it into the center position (Fig.14). Then gently push the panel straight NOTE : Use care when moving the panel to ensure that cables do not Fig. 14 become stretched or pinched. It is recommended that you allow a

Fig. 11



Maintaining the HVAWM3260S

The arm assembly and wall plate may be cleaned with a soft sponge and mild solution of soap and water.

Caution: Be sure not to get moisture on the electrical connections or the panel.

pinching.