## DISPLAYS2GO



STEP 1. Lay the cardboard flat on a flat and clean surface.

STEP 2. Fold Side C up, then fold Flap D on both sides to the middle. Be sure 2 Flap D3 lay above Side E. (Do NOT fold down D1)

STEP 3. Fold Flap G up on both sides. Raise up Back F, and be sure Flap G laying inside against Flap D2.

STEP 4. Fold Flap D1 inward and insert the tabs into the cutouts at the bottom of D3 so Flap D1 firmly attached to the sides. Fold down Header H over to attach with F.

STEP 5. Fold down Flap A and then Flap B. Flap A should be tucked in the box to create the top. The ballot box is ready to use.

