


ASSEMBLY INSTRUCTIONS

DCNGPEDL - Pedestal Display Case with LED Light

Rev. 21.04


Parts List:	Qty:
A. Wooden Top	1
B. Acrylic Display	1
C. Wooden Base	1
D. Acrylic Light Box	1
E. M4 Screw	8
F. Screw Driver	1
G. AC Adapter	1

Scan QR code to visit
the product page:

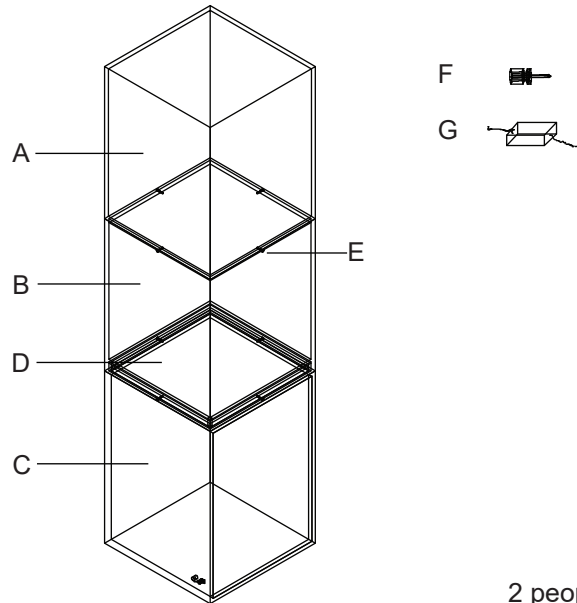

2 people are required

STEP 1. Remove the packing materials and place the Wooden Base (C) on a flat and level ground. With the open side facing up, place the Acrylic Display Case (B) on top of the base. Insert 1 M4 Screw (E) into the pre-drilled hole on each side and use the provided Screw Driver (F) to fix it. Repeat this on all 4 sides to secure the display case.

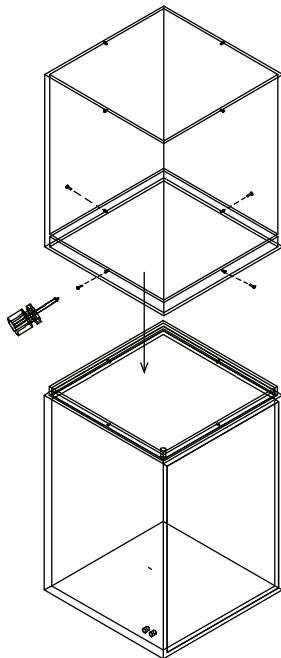

STEP 2. Place your displaying items inside the acrylic case as desired. Carefully lift up the Wooden Top (A) above the display case, then slowly lower it onto the top of the display case. With pre-drilled holes aligned on each side, use the remaining M4 screws and screw driver to fix the top portion securely. Connect the AC Adapter (G) with the power inlet and plug the other end into the power outlet. The assembly is finished.

