DXVWALL2X2 - Deluxe Video Wall Stand 2X2

PARTS LIST

- A. Side Frame
- B. Framing Rail (Upper, Rectangle)
- C. Framing Rail (Lower, Square)
- D. Screw and Insert Nut
- E. Corner Bracket
- F. End Cap
- G. Caster
- H. TV Mounting Bracket
- I. Allen Wrench



Scan QR code to visit the product page:



Remove all parts from the package at the location where the video wall will be used.

Lay all parts on a flat and level ground, identify each part and group the same part

Attach 2 screws and 2 nuts at each end of the Framing Rail (B). NOTE: Do not tighten the screws with the nuts. Repeat the step for all the Framing Rails B.





together as shown.

Hold 2 Side Frames (A) at the standing position. Insert nuts on Frame Rail (C) into the T-slot on the bottom rectangle of the side frame, see Image 5. Tighten screws on the corner brackets to fix the Framing Rail (C). Assemble 1 Framing Rail at each corner of the bottom rectangle to connect 2 Side Frames.

NOTE: The corner bracket must be at the inside as shown in Image 6. Repeat the step to connect the 3rd Side Frame with assembled Side Frames securely.





Slowly lay the assembled frame onto the ground on its side. Insert nuts into T-slots at the bottom and then attach the Casters (G) by threading the post of the casters into the bottom of the frame. See Image 10. Secure all 6 casters at the bottom close to the side frames.





Assemble 1 Corner Bracket (E) by sliding the nut into T-slot of the Framing Rail (C). Make sure the side of the bracket is flush with the end of the framing rail, then tighten the screw to fix the bracket at the position. Repeat the step to attach 1 corner bracket at each end on all Framing Rail C.





Insert the nuts on Framing Rail (B) into T-slot on the assembled side frames from the top. Slide it down and align the edge with marked line on the side frame. Tighten screws on both sides to secure the framing rail. See Image 7.

Repeat the step to assemble all the Framing Rails (B) in between the side frames.

Connect the top of the side frames with the remaining 4 framing rails C. See Image 8.





Place the End Caps (F) at the opening ends of the frames to finish the assembly.

Securely attach TV Brackets (H) to the back of your digital screens (not included) and carefully hang them onto the assembled stand.

Cable/Wire Management: Attach power cords and cables to the frame tubing with Velcro® or zip tie (not included) to keep them organized.





Optional: To apply the video wall cover (VWSCPBK, sold separately), expand each panel fully. Align the hook and loop fastener on the edge of each panel with the corresponding piece on the stand, press firmly to fix. Attach the remaining panels to finish the assembly.

If you have any questions regarding our products, please visit us at www.displays2go.com or contact D2G customer service 844-221-3388.

