

 
MYSTIGLO™

LED Swivel Open Sign Instructions

Model No. VH-01-RC • Item No. 514400

How to Swivel


Rotate **ONE letter at a time** in exact **SEQUENCE** shown below.

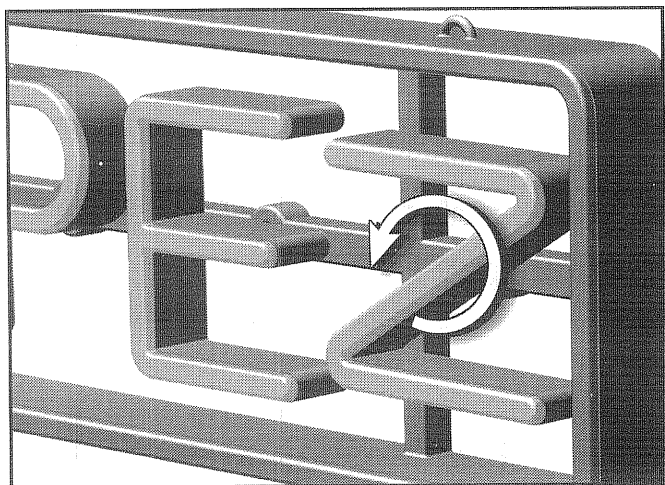

Turn letter until it clicks into position

To make VERTICAL:

 rotate letters in this sequence 1-N 2-E 3-P




vertical

To make HORIZONTAL:

rotate letters in this sequence 1-P 2-E 3-N




 horizontal

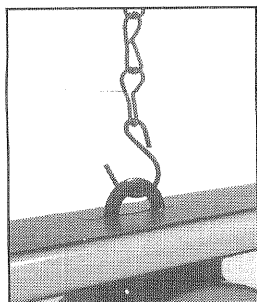

Hanging & Installation

 1. Remove "S" hooks and chains from the parts-bag located within the packaging.
2. Install the two "S" hooks through the hanger tabs located on the top of the open sign.
3. Attach the chains to the "S" hooks.
4. Attach the two chains to the ceiling using the appropriate hanging hardware.
5. Insert barrel plug into power input and plug adaptor into the electrical outlet.

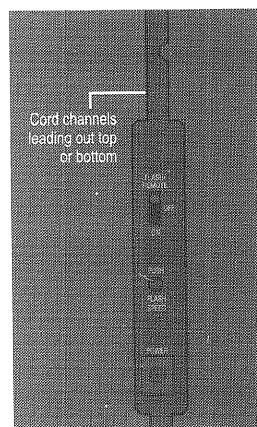

Control Panel

on back of sign

Power/Flash Switch: Switch **MUST** be positioned to Flash/Remote for optional remote to function

Flash Speed Control: Push to change speeds (eight speed options)

Power:

Input Volts: 120VAC
Hertz: 60Hz
Output Amps: 1500mA
Output Volts: 18VDC

Wireless Add-On Remote

Bring wireless control to your MystiGlo LED Swivel Open Sign with our *special order* remote controls. Easily program up to 3 remotes for one sign.

Controls: ON / OFF • FLASH / STATIC • FLASH SPEED
Range: up to 50 feet

