 


Counterbalance Full Motion LCD Wall Mount

Maintenance

- Check that the bracket is secure and safe to use at regular intervals(at least every three months).
- Please contact your distributor if you have any questions.

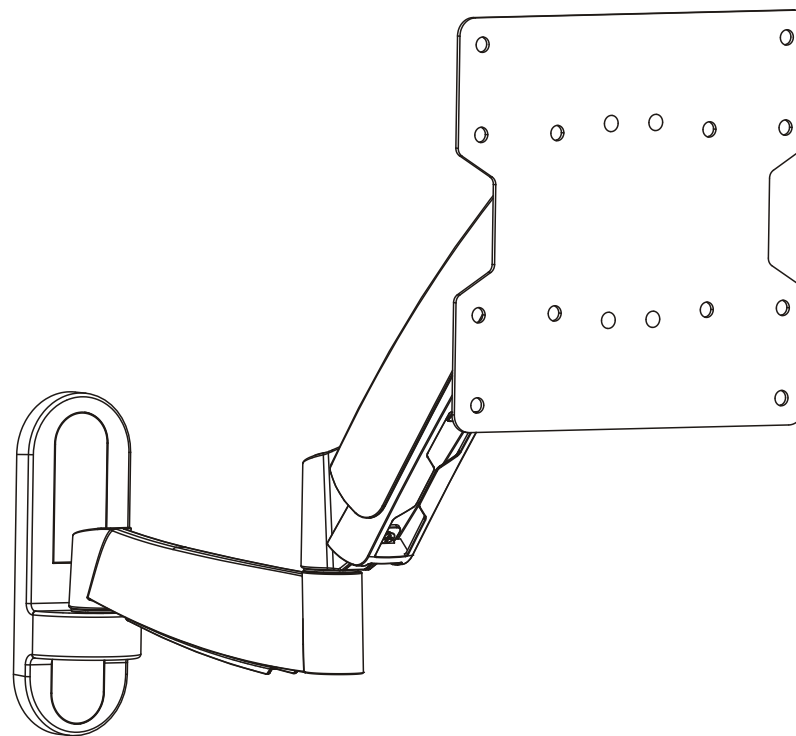

CAUTION: DO NOT EXCEED
RATED LISTED WEIGHT. SERIOUS
INJURY OR PROPERTY DAMAGE
MAY OCCUR!



100x100
200x100
200x200



2.5~20kg
(5.5~44lbs)

 
NOTE: Read the entire instruction manual before you start installation and assembly.

⚠ WARNING


- Do not begin the installation until you have read and understood all the instructions and warnings contained in this installation sheet. If you have any questions regarding any of the instructions or warnings, please contact your local distributor.
- This mounting bracket was designed to be installed and utilised **ONLY** as specified in this manual. Improper installation of this product may cause damage or serious injury.
- This product should only be installed by someone with good mechanical ability who has basic building experience and fully understands this manual.
- Make sure that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.
- If mounting to wood wall studs, make sure that mounting screws are anchored into the center of the studs. The use of a stud finder is highly recommended.
- Always use an assistant or mechanical lifting equipment to safely lift and position the equipment.
- Tighten screws firmly, but do not over tighten. Over tightening can cause damage to the items, This greatly reduces their holding power.
- This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.

Component Checklist


IMPORTANT: Ensure that you have received all parts according to the component checklist prior to installation. If any parts are missing or faulty, telephone your local distributor for a replacement.

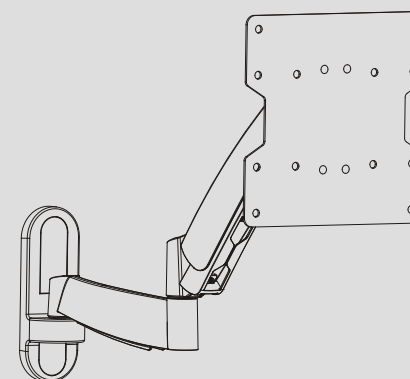

articulated arm assembly
A

 

4mm Allen key (x1)
B

 

6mm Allen key (x1)
C



wrench (x1)
D

Package M



M4x14 (x4)
M-A



M5x14 (x4)
M-B



M6x14 (x4)
M-C



M8x20 (x4)
M-D



D5 washer (x4)
M-E



D8 washer (x4)
M-F




small spacer (x8)
M-G

Package W




 ST6.3x55 (x3)
W-A



concrete anchor (x3)
W-B

 
1. Separating the VESA Plate from the Wall Mount

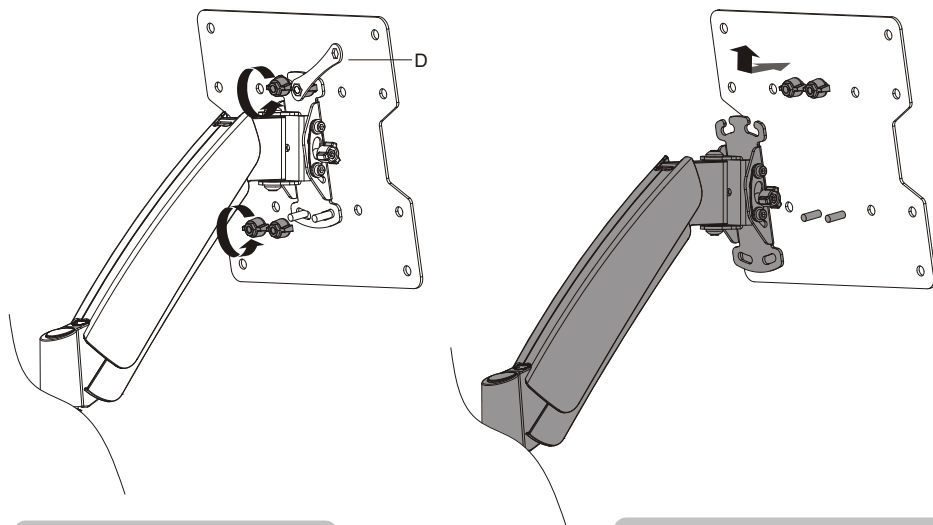




- Loosen the upper knobs.
- Then remove the lower knobs.

Remove the VESA plate.

 
2. Removing the Decorative Covers

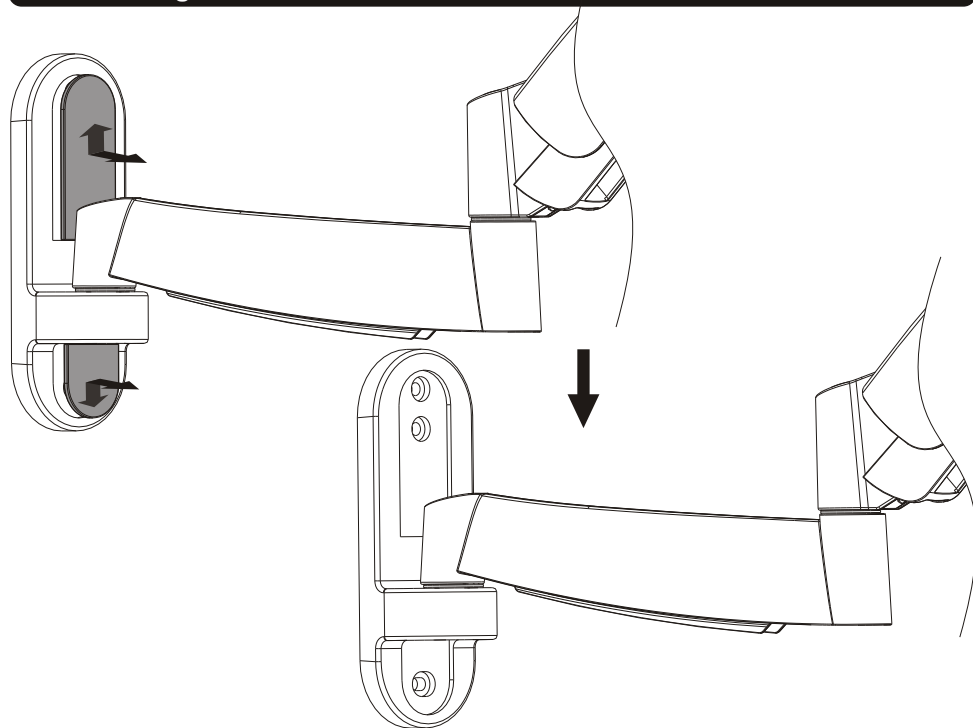





3a. For Wood Stud Wall Mounting

   

 Find and mark the exact location of mounting holes



Drill pilot holes

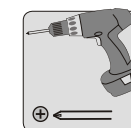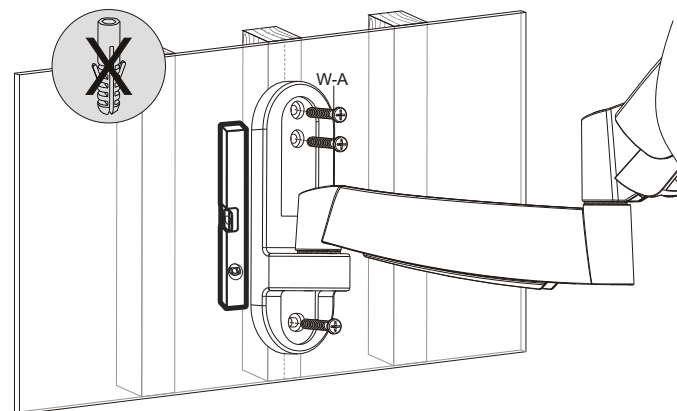  
 
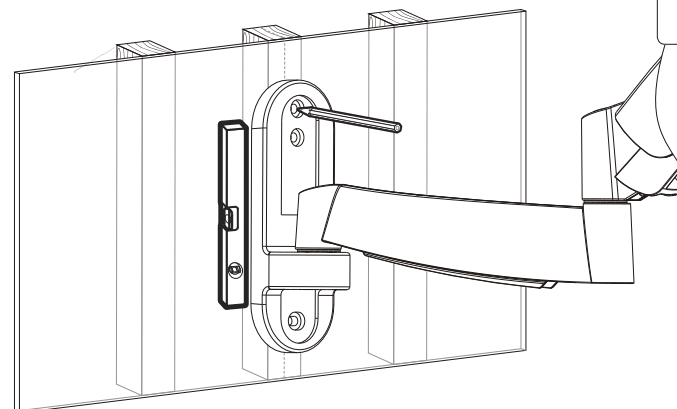 


Screw the wall mount onto the wall


⚠ WARNING

- Make sure that mounting screws are anchored into the center of the studs. The use of a stud finder is highly recommended.
- Installers are responsible to provide hardware for other types of mounting situations.
- Installers must verify that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.

  
 
3b. For Solid Brick and Concrete Mounting

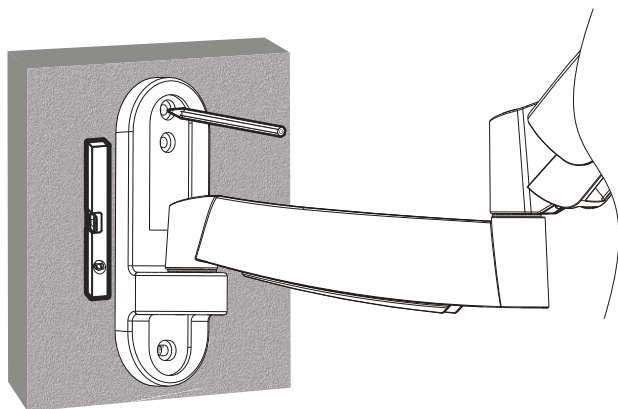

 
1
Mark the exact
location of
mounting holes



2
Drill pilot holes

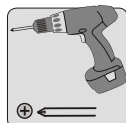  


Screw the wall
mount onto
the wall

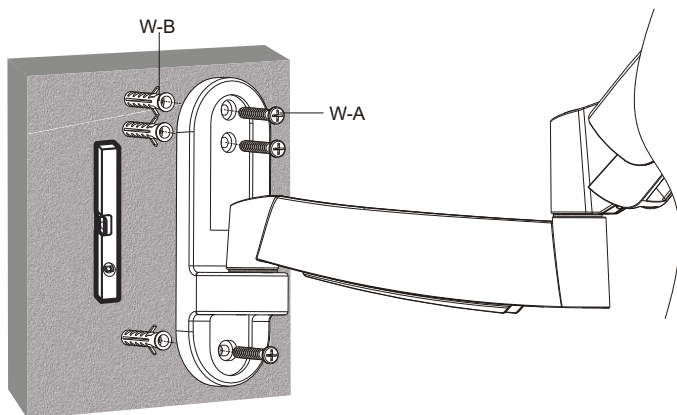 


⚠ WARNING



Installers must verify that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.

 4. Installing the Decorative Covers

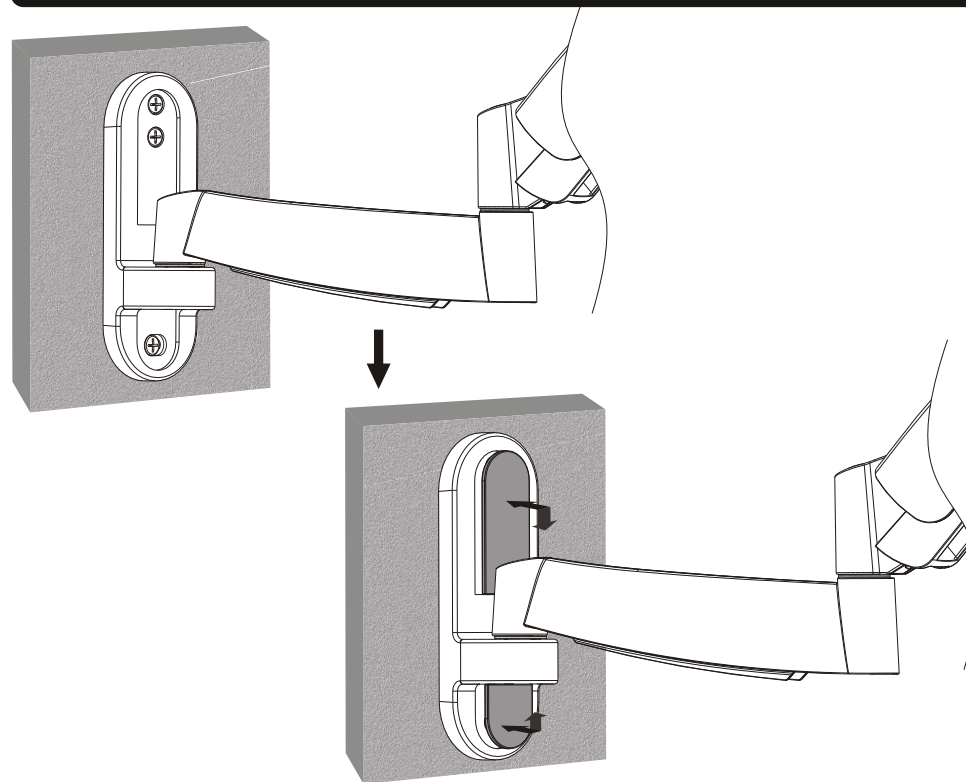


   5. Installing the VESA Plate

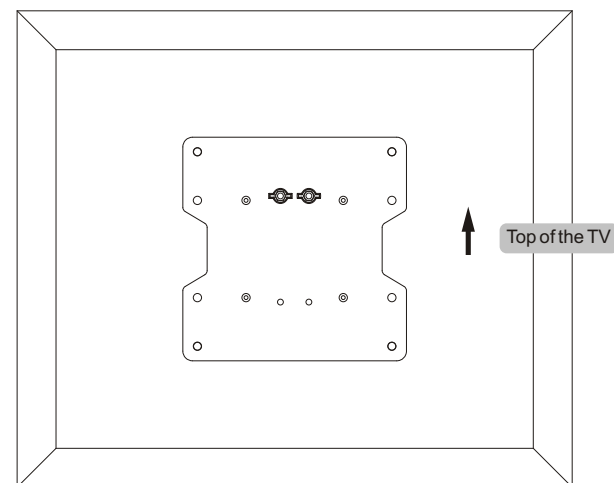

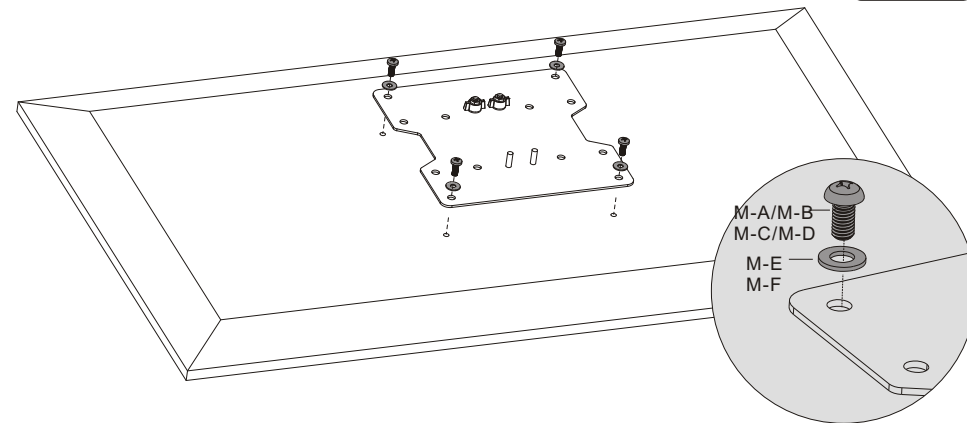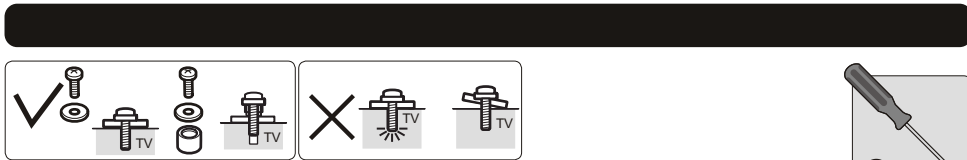


or

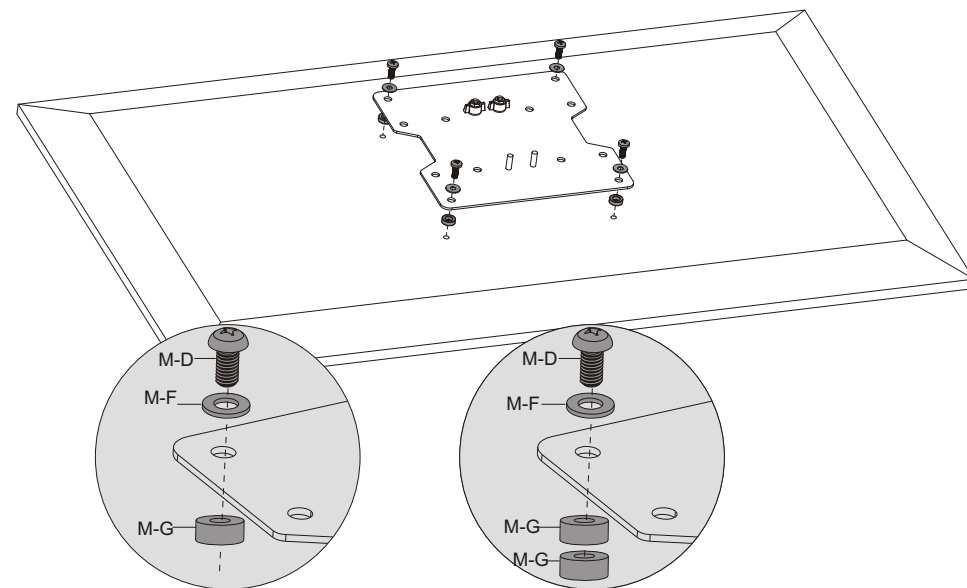 

Screw the VESA plate onto the TV.


! Tighten all screws but do not over tighten.

 6. Hooking the TV onto the Wall Mount

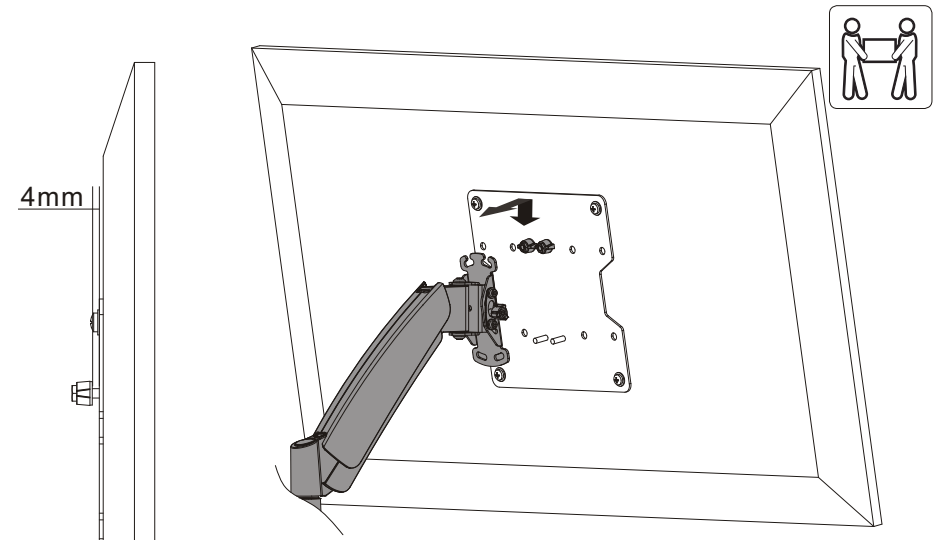


Loosen the upper knobs leaving a 4mm space to the VESA plate.

 Hooking the TV onto the wall mount

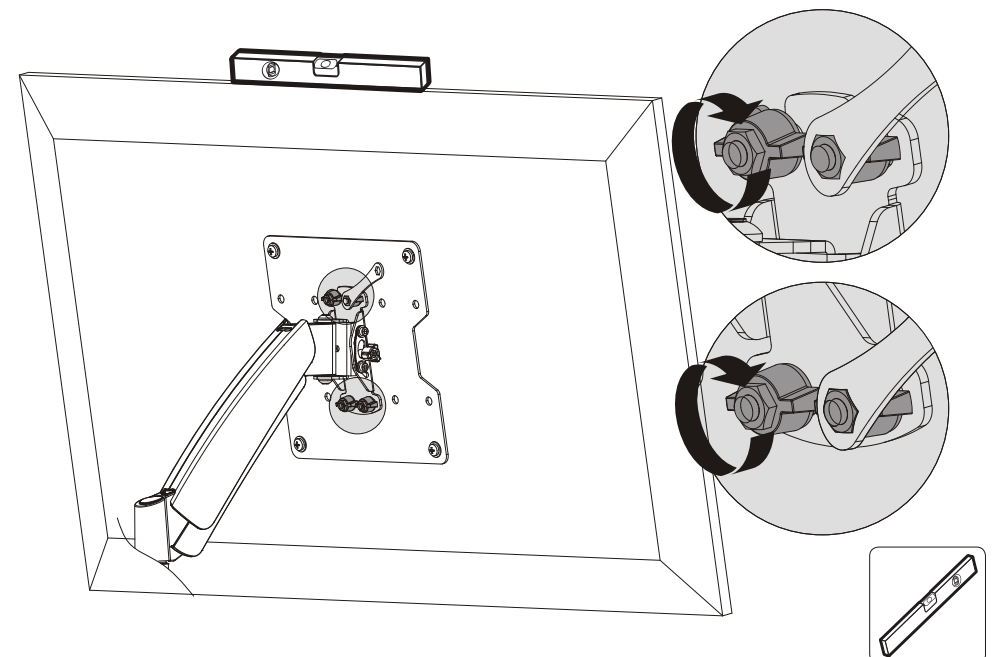

- Level the TV.
- Place the lower knobs and tighten all knobs.

 
7. Tension Adjust

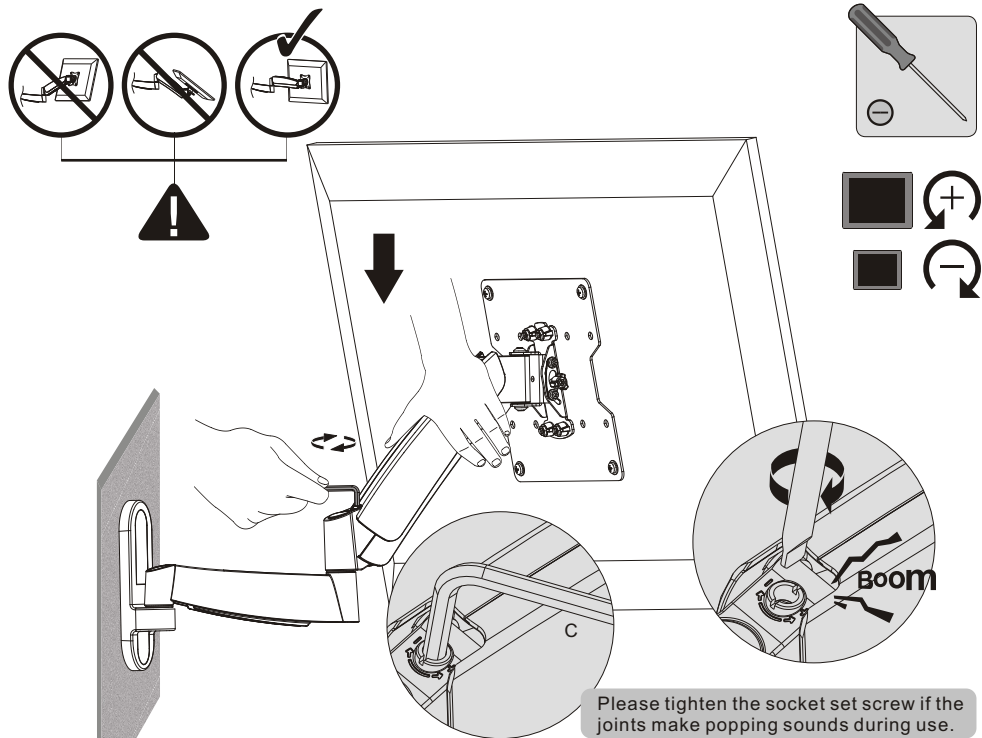


Please keep the arm level during tension adjustment. Use a proper Allen key to slightly loosen or tighten the adjustment screw according to the TV weight.

If TV settles on its own, rotate adjustment screw towards the "+" symbol.
If TV rises on its own, rotate adjustment screw towards the "-" symbol.

 8. Cable Management

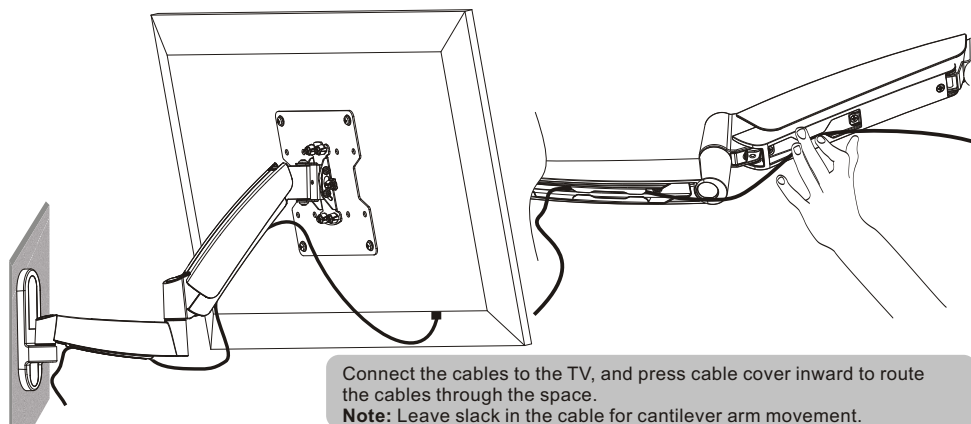

 9. Adjustment

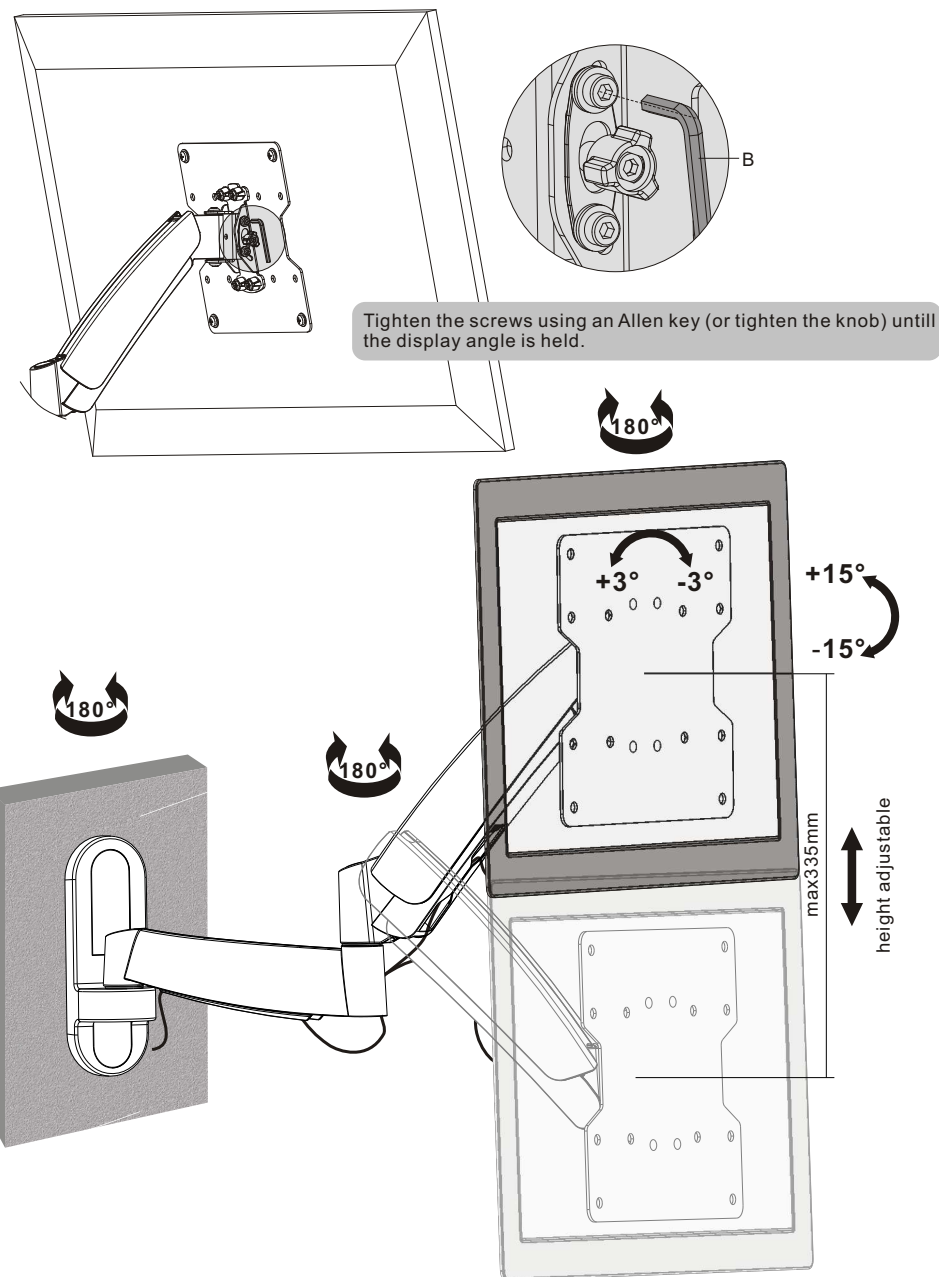

Adjust to the desired position or tilt.