 
 


Full Motion LED,LCD TV Wall Mount

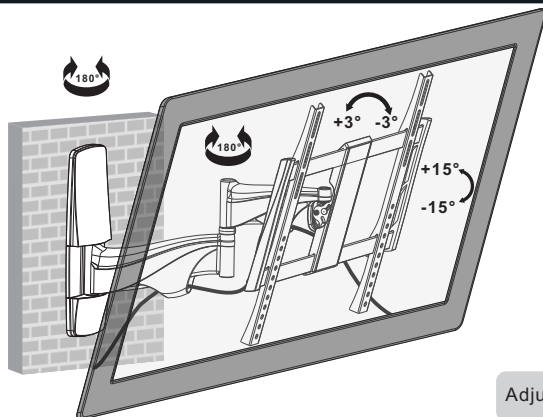

Adjust to the desired position or tilt.

9. Install curved TV

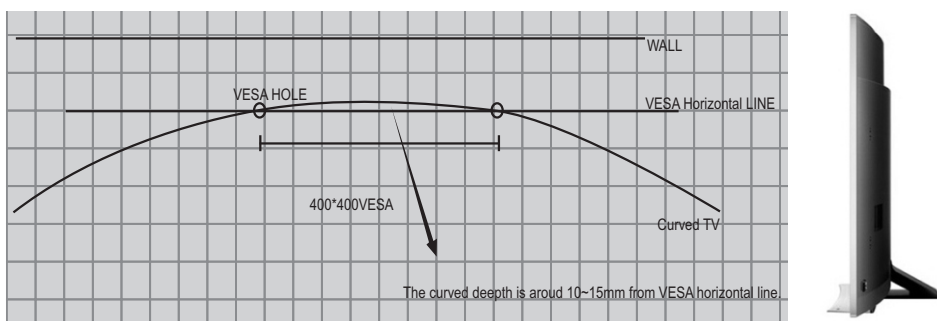 


NOTE: To install curved TV, please use "M8*30 screw+big spacer(15mm) or big&small(20mm) Spacer together"

NOTE: To install curved TV, please use "M8*50 screw+big&big spacer(30mm) or big&big&small spacer(35mm) or big&big&small&small(40mm) Spacer together"


M8x30MM Screw+ M8x15MM Spacer or M8x20MM Spacer

M8x50MM Screw+ M8x30MM Spacer or M8x35MM Spacer or M8x40MM Spacer

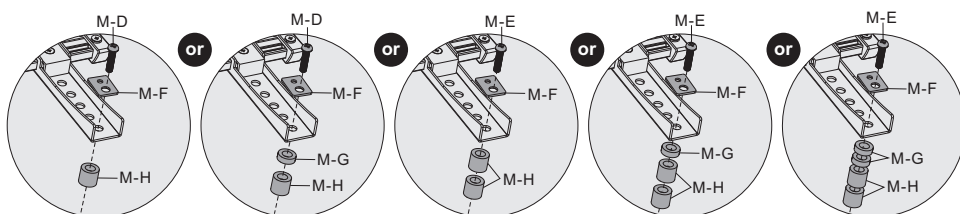

Maintenance

 - Check that the bracket is secure and safe to use at regular intervals(at least every three months).
- Please contact your distributor if you have any questions.

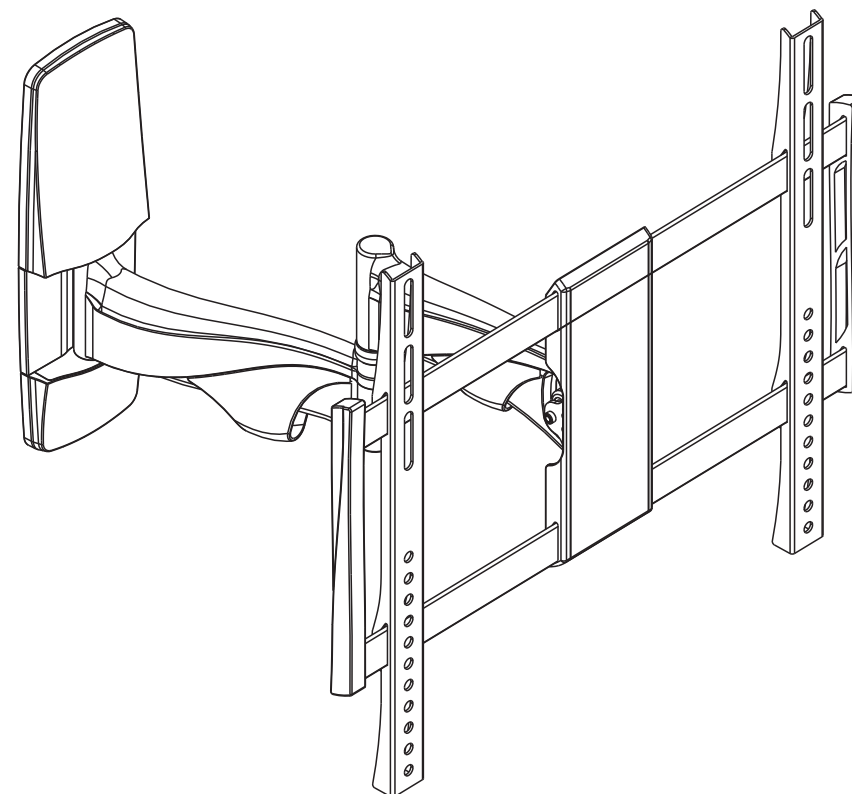

CAUTION: DO NOT EXCEED RATED LISTED WEIGHT CAPACITY. SERIOUS INJURY OR PROPERTY DAMAGE MAY OCCUR!



200x200
300x300
400x200
400x400



 
NOTE: Read the entire instruction manual before you start installation and assembly.

⚠ WARNING


- Do not begin the installation until you have read and understood all the instructions and warnings contained in this installation sheet. If you have any questions regarding any of the instructions or warnings, please contact your local distributor.
- This mounting bracket was designed to be installed and utilised **ONLY** as specified in this manual. Improper installation of this product may cause damage or serious injury.
- This product should only be installed by someone with good mechanical ability who has basic building experience and fully understands this manual.
- Make sure that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.
- If mounting to wood wall studs, make sure that mounting screws are anchored into the center of the studs. The use of a stud finder is highly recommended.
- Always use an assistant or mechanical lifting equipment to safely lift and position the equipment.
- Tighten screws firmly, but do not over tighten. Over tightening can cause damage to the items, This greatly reduces their holding power.
- This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.

Component Checklist


IMPORTANT: Ensure that you have received all parts according to the component checklist prior to installation. If any parts are missing or faulty, telephone your local distributor for a replacement.

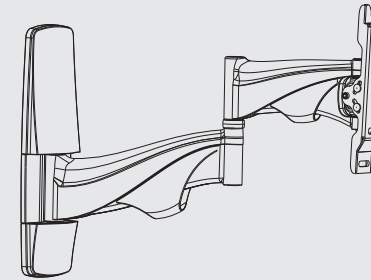

articulated arm assembly (x1)
A

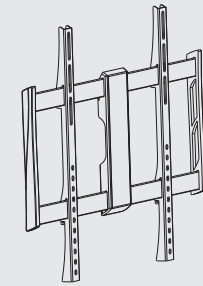 

universal adapter plate (x1)
B

 

wall template (x1)
C



Allen key (x1)
D

 
Package M




M5x14 (x4)
M-A




M6x14 (x4)
M-B



M6x30 (x4)
M-C

 

M8x30 (x4)
M-D

 

M8x50 (x4)
M-E



washer (x4)
M-F

 


small spacer (x8)
M-G




big spacer (x8)
M-H

Package W



ST6.3x55 (x5)
W-A

 


concrete anchor (x5)
W-B






D6 washer (x5)
W-C

 
1. Removing the Decorative Covers

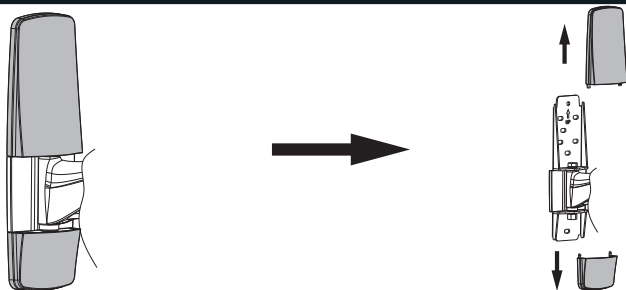



2a. For Wood Stud Wall Mounting

   

 Find and mark the exact location of mounting holes



Drill pilot holes

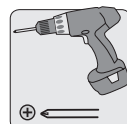  

Screw the wall mount onto the wall

 
 
 
With the arrow pointing up.




WARNING

- Make sure that mounting screws are anchored into the center of the studs. The use of a stud finder is highly recommended.
- Installers are responsible to provide hardware for other types of mounting situations.
- Installers must verify that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.



2b. For Solid Brick and Concrete Mounting

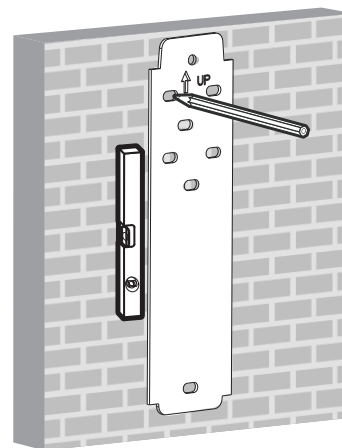

 Mark the exact location of mounting holes



Drill pilot holes

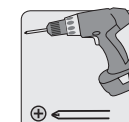  

Screw the wall mount onto the wall

 
With the arrow pointing up.




WARNING

Installers must verify that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.


3. Installing the Decorative Covers

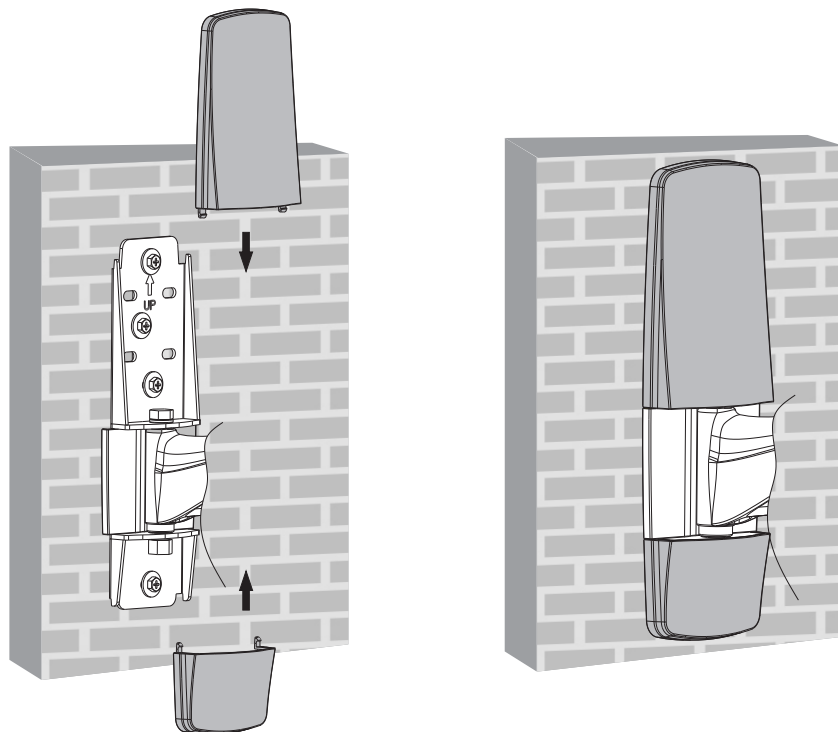

 4. Removing the lower thumbscrew


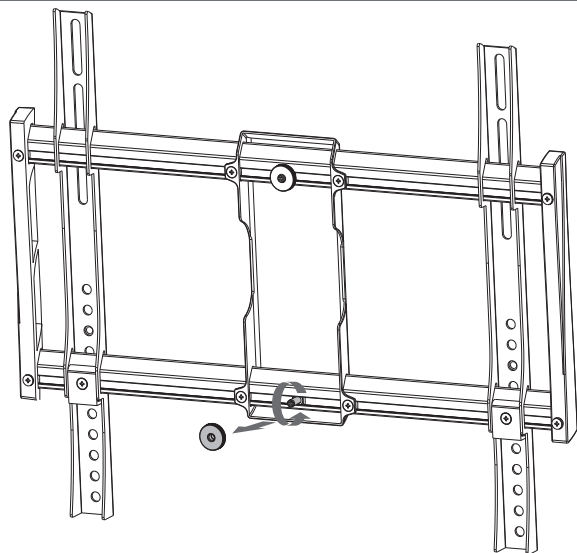


 5. Installing the Universal Adapter Plate



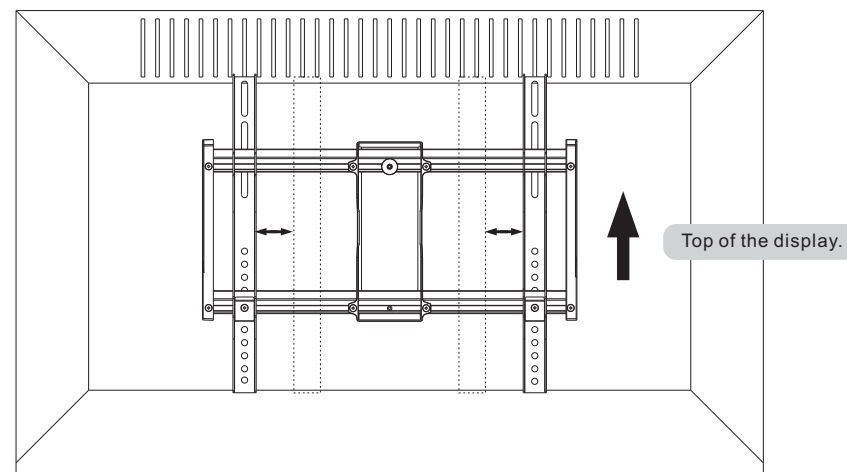


Adjust the brackets to align mounting holes, using a philips screwdriver to tighten screws on the brackets.

  5-1 For Flat Back Screens

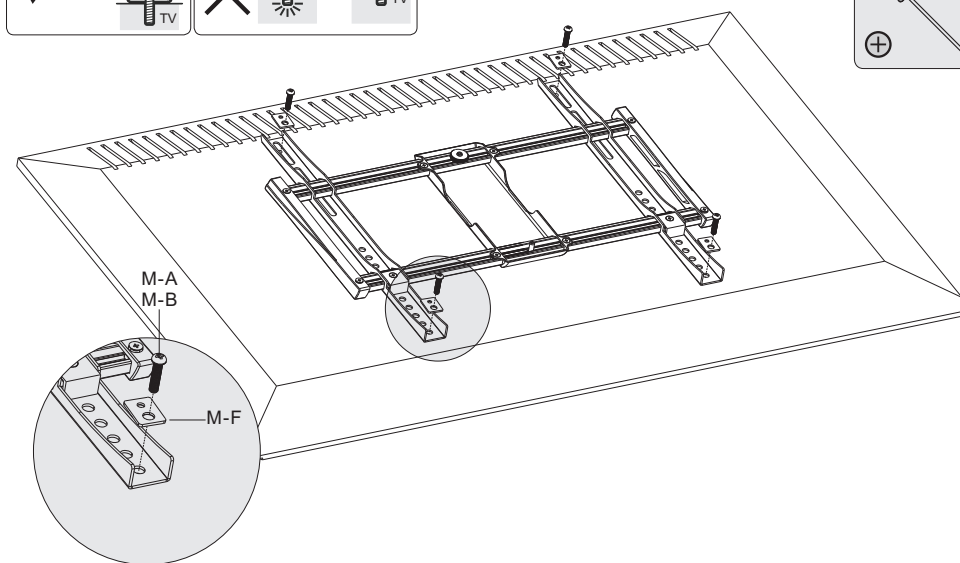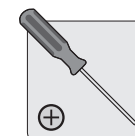

   5-2 For Recessed Back Screens or to Access A/V Inputs

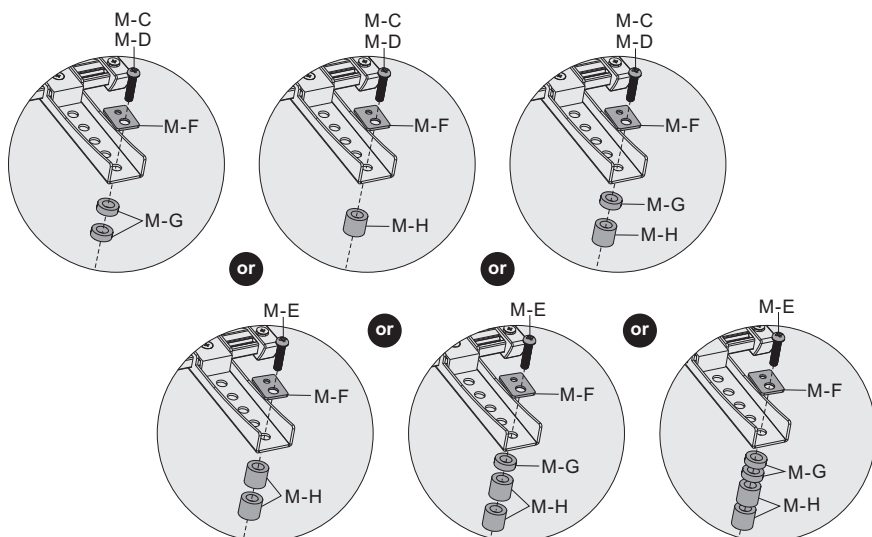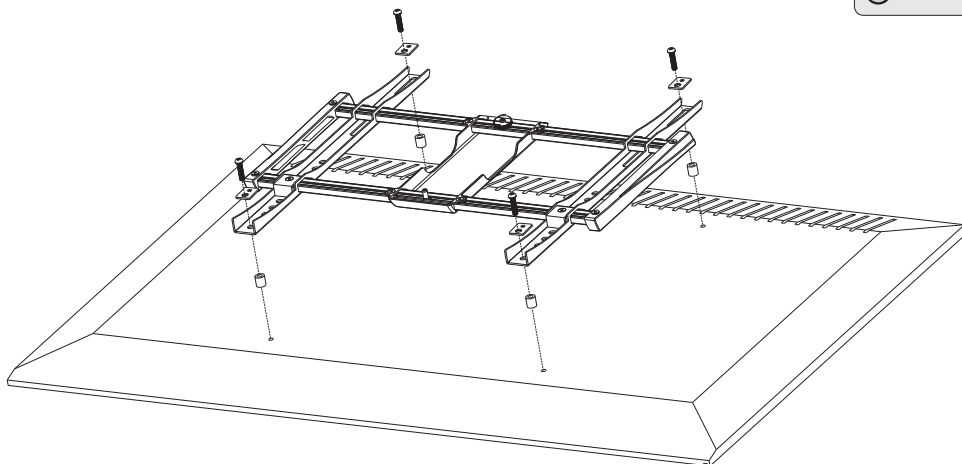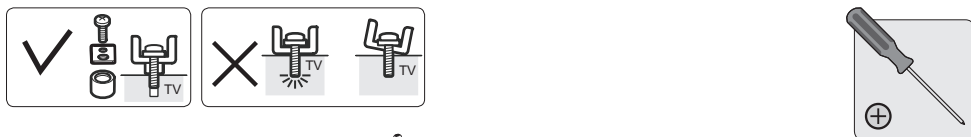

Note: Choose the appropriate screws, washers and spacers (if necessary) according to the type of screen.

- Position the universal adapter plate as close as possible to the center of the display.
- Screw the universal adapter plate onto the display.

⚠ Tighten all screws but do not over tighten.

 
6. Hooking the TV onto the Wall Mount



4mm


Loosen the upper thumbscrew leaving a 4mm space to adapter bracket.

Hook the TV onto the wall mount

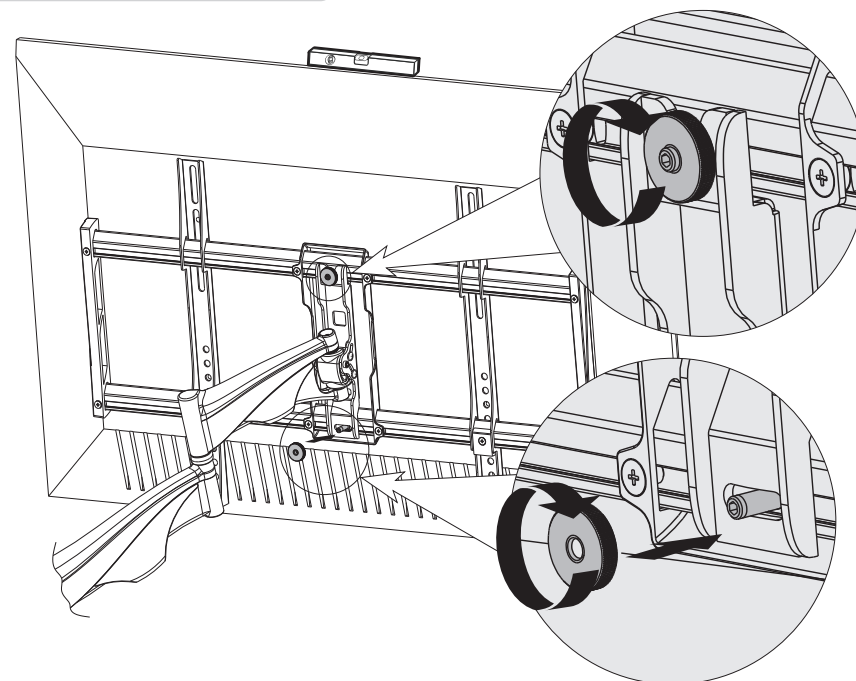

- Level the TV.
- Place the lower thumbscrew; Tighten both thumbscrews.

 
7. Cable Management

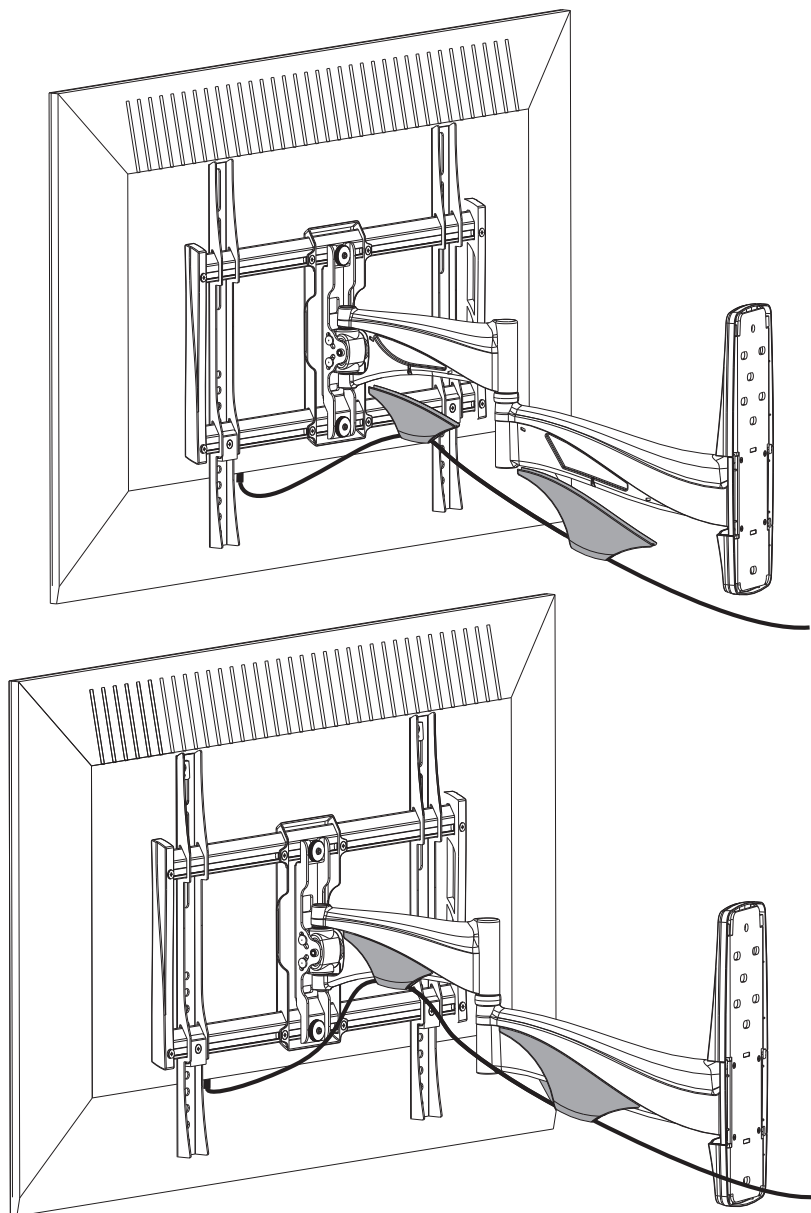

- Remove the cable covers as required, Connect cables to your TV and route along the arms.
- Re-attach the cable covers to hold the cables in place .

Note: Leave slack in cables to allow for cantilever arm movement.

 8. Adjustment

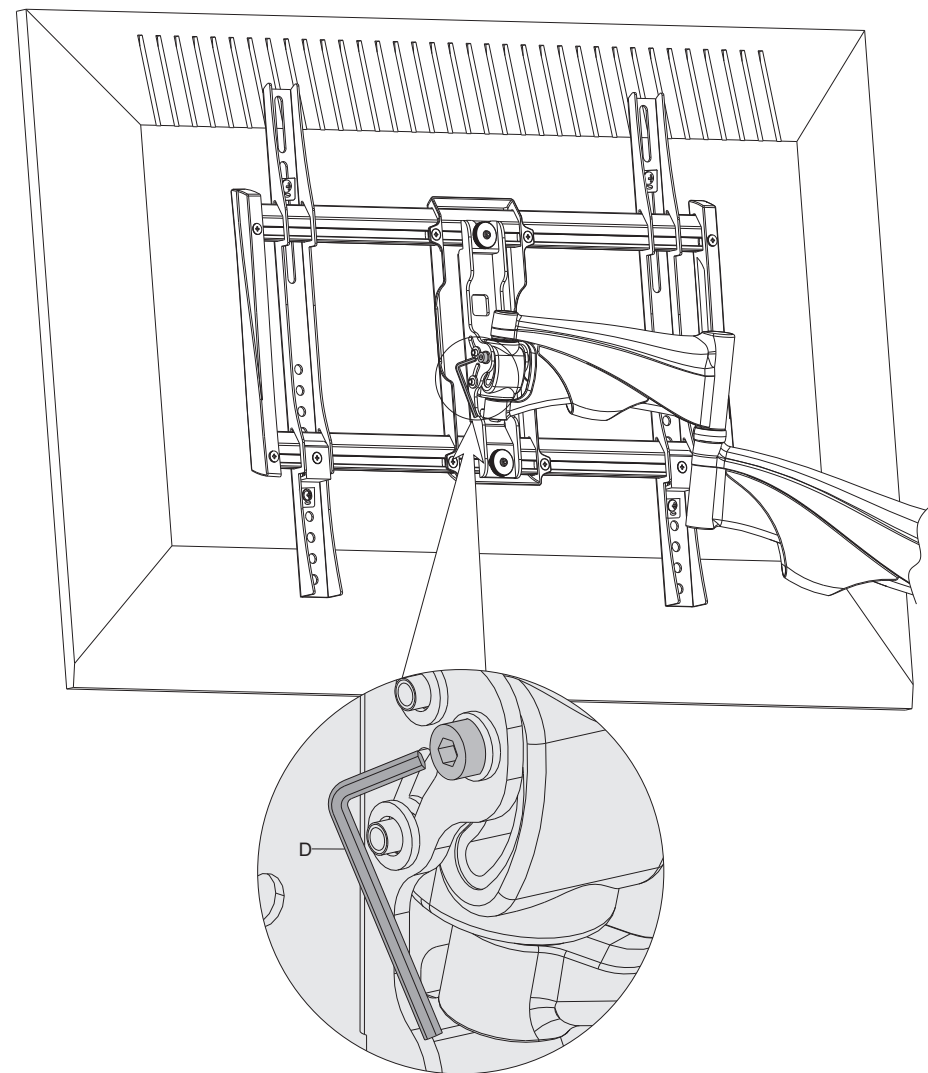

Depending on the weight of the display, it is necessary to slightly loosen or tighten the adjustment screws using an Allen key.