

Valued Customer

Please open all boxes immediately and inspect for breakage that may have occurred during shipping. Notification of breakage must be made within seven (7) working days in order for us to process a claim with the shipping company.

- Returns on stock items are accepted within 30 days of delivery.
- All returns are subject to a 20% inspection, re-boxing and re-stocking fee.
- All returned items must be repacked and returned in their original packaging for protection.
- The customer is responsible for any damage that occurs during return shipment. Packages being returned should be insured by you for your protection.
- Return merchandise received damaged will not be credited.
- Customers are responsible for the initial shipping cost and all return shipping costs. No credits are issued on shipping costs.

Important Safety Information
For Your Protection, Read Carefully

Read all instructions before installation - Save these instructions as reference

1. Do not use the ALite Easel in damp or wet locations.
2. Disconnect electrical power before adding to or changing the configuration of the lighting.
3. Do not attempt to energize anything other than the track lighting fixtures included with the ALite Easel.

Note: Turn off electrical power to the track system.

WARNING: Do not remove or install a lamp with the fixture energized.

Fixture Installation (as shown in Figure 1):

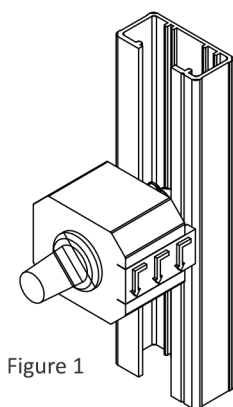


Figure 1

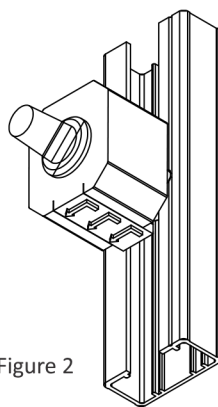


Figure 2



Figure 3

CAUTION: These fixtures can be used only with the ALite Easel.

Attempted use on any other track could cause fire and electrical hazard.

1. Push the contact portion of the head adapter in to the slot of the track section. When looking at the track from the rear, the tab should be facing to the right (see figure 1).
2. Pull up the tab to allow easy movement of the fixture connector.
3. Turn the adapter 90° in a clockwise direction to allow the tab to lock in to place toward the bottom of the rail (see figure 2).
4. Adapter can move to any positions along the track section. Lighting fixture will adjust to any position.
5. When installing the fixture, make sure the flex is on the outside of the rail and that it is positioned as shown in Figure 3 for best functionality.

Removal:

1. Pull up on the tab on the adapter.
2. At the same time, rotate the adapter 90° counter clockwise and remove from track.

Installing New bulb

1. Turn the power off. Make sure that the bulb is cool before re-lamping the fixture.
2. Remove old bulb and push pins from replacement bulb into the socket.

FOR ADDITIONAL INFORMATION PLEASE VISIT WWW.ALITEEASELS.COM FOR VIDEO INSTRUCTIONS

DISPLAYS2GO
LUPEASEL BK