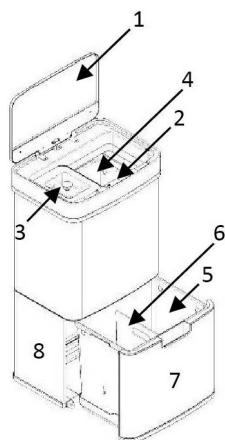


IMPORTANT

Please take time to read all instructions before start installing the unit. Be sure you fully understand all the steps needed to finish the installation.

CAUTION

- 1 - DO NOT wash with water because the electric and electronic components in the product. Surface can be cleaned with wet wipers.
- 2 – Avoid direct sunlight on the induction receiver window.
- 3 – DO NOT press the cover with force, during the open-up process of the cover.
- 4 – Dismantling, repair and alteration of the product are absolutely banned.
- 5 – When replacing the batteries, replace all the batteries at the same time. Do not mix battery brands and old and new batteries. Always insert batteries correctly with regard to polarity (+ and -) marked on the battery and equipment.
- 6 – Don't place anything on top of the dustbin cover.

TRASH BIN

| | Components | Description |
|---|--|--|
| 1 | Cover | Automatic or semi-automatic induction opening |
| 2 | Induction window and lid opening/closing buttons | Automatic or manual open / close function |
| 3 | Removable inner bin 4 liters(Optional) | Provided with a lid + bag attachment ring, fits in the visible opening support of the lid, used for household wastes, inside as outside from the bin |
| 4 | Removable inner top bin 37/42/47 liters | Cover access |
| 5 | Removable inner bottom bin 25 liters | Manual access, with handle |
| 6 | Removable tray separator | Choice to fix it into the top or the bottom 30 liters inner bin. |
| 7 | Bin body | |
| 8 | Sliding drawer on wheels | |

Scan QR code to visit the product page:



| | Dimensions L x W x H (cm, +/-1cm) | Capacity (L) | Power |
|----|-----------------------------------|--------------|-------------------------|
| 01 | 42 x 31.5 x 74.5 | 62 | 6 LR6 size AA batteries |
| 01 | 42 x 31.5 x 78.5 | 67 | 6 LR6 size AA batteries |
| 01 | 42 x 31.5 x 82.5 | 72 | 6 LR6 size AA batteries |

OPERATING INSTRUCTIONS

- 1 – Open the battery cover at the bottom of the lid and insert 6 size AA batteries according to the correct polarities, then close the battery cover.
- 2 – Turn on the power switch on the rear cover.
- 3 – When you need to throw the garbage out, simply hover your hand above the lid within 15 cm and it will open. The lid will soft-close after 5 seconds of inactivity. The cover will keep open, if your hand or object stays in the induction area.
- 4 – To deal with the frequent switch of the dustbin, press the Open button at the induction window to keep the lid open. Press the Close button to close the lid and then the circuit resumes its automatic induction function.
- 5 – Pull the inner bottom bin to deposit the recyclable materials there. The inner top bin is used for non-recyclable households wastes.
- 6 – We advise the use of 50 liters bin liners regarding health issue and bad smell.

If you have any questions regarding our products, please visit us at www.displays2go.com or contact D2G customer service 844-221-3388.