 



Presentation Station Instructions

07/28/14


Parts List

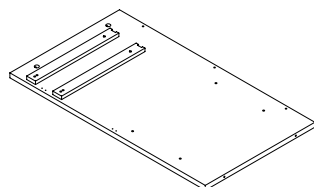

 
A x1

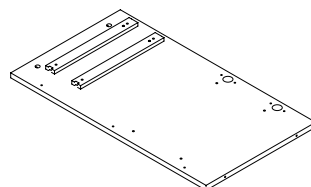


B x1

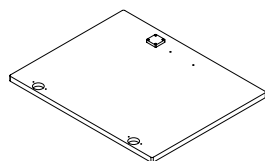 


C x1

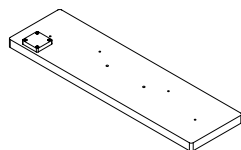 


D x1

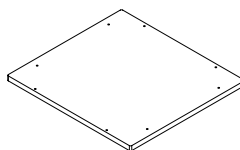 


E x1

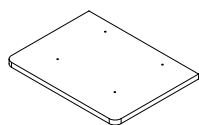 


F x2

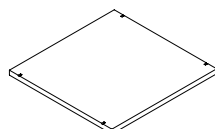 


G x1

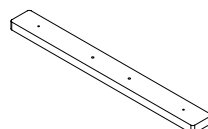 


H x1

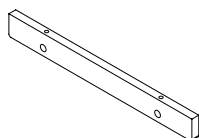 


J x1

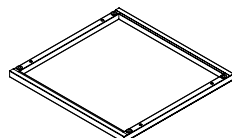 


K x1

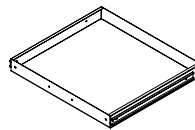 


L x1

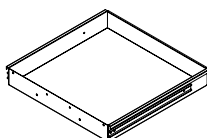 

M x1

 


N x4

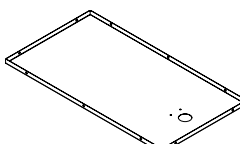 

P x1

Tools Required

 - Phillips Screwdriver



15 x1

 


16 x1



1 x34

M6x12



2 x4

M6x36



3 x14

M4x16



4 x6



5 x4

 
M3x15



6 x6



7 x6



8 x3



9 x6



 
10 x4




11 x2



12 x2




13 x2

 


14 x2

 
1

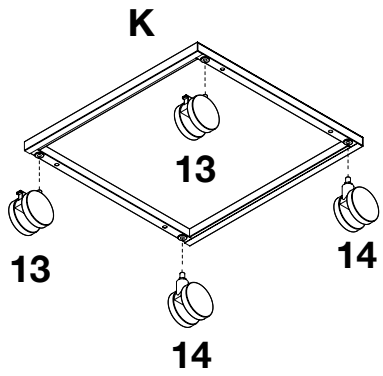


2

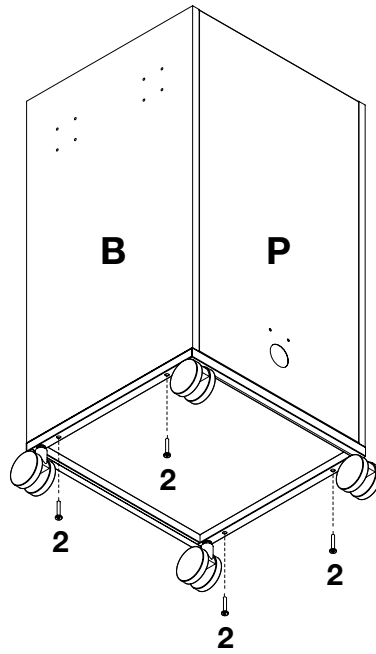 


3

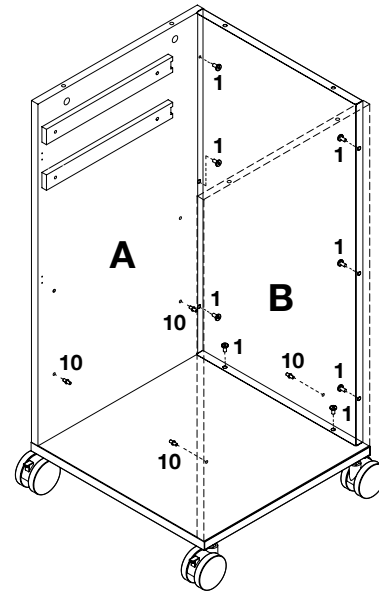 


4

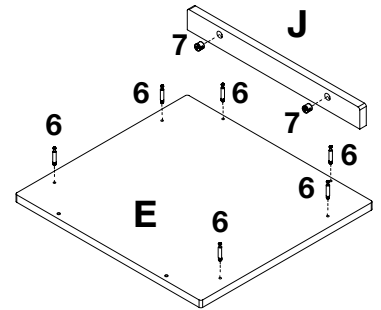 


5

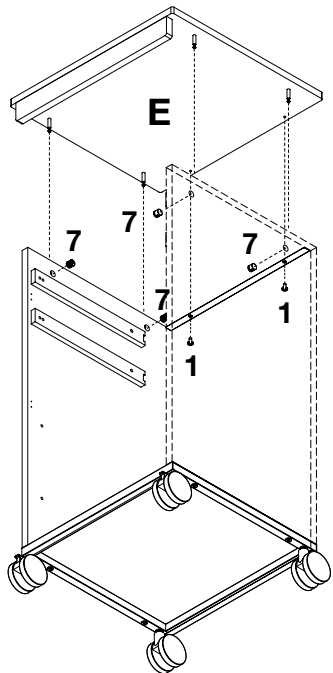 


6

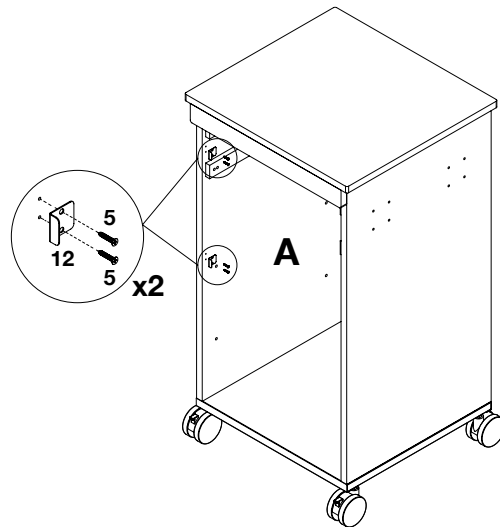 


7

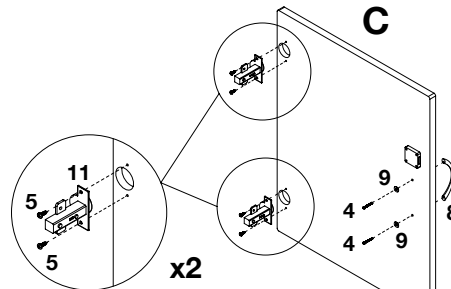 


8

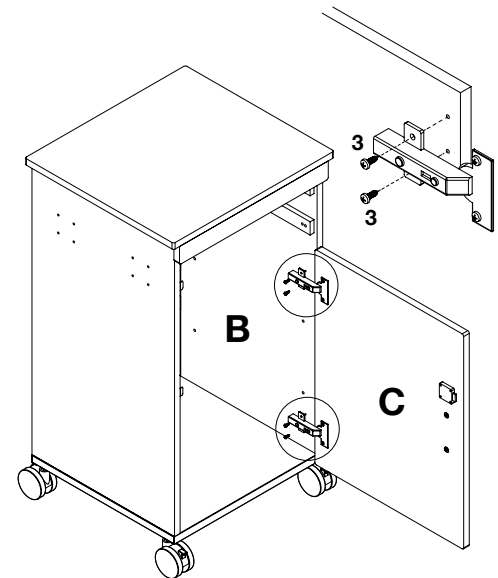 


9

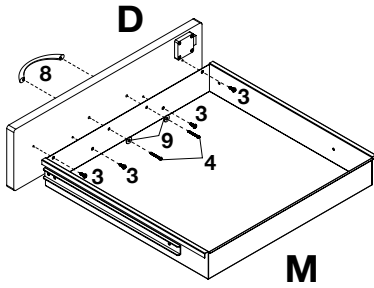 


10

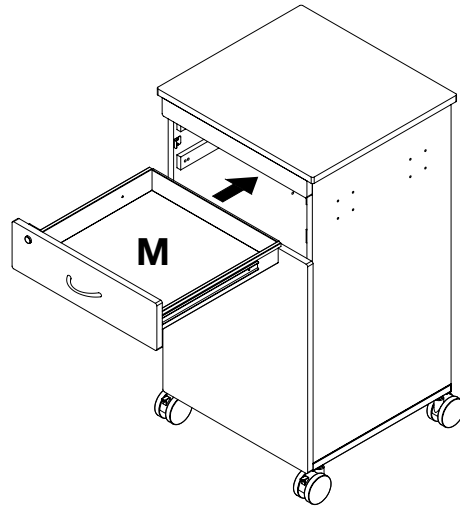 


11

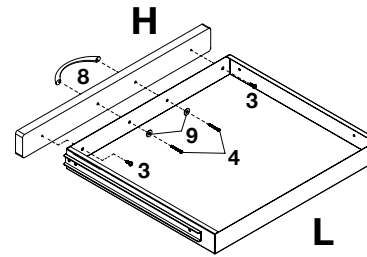 

12

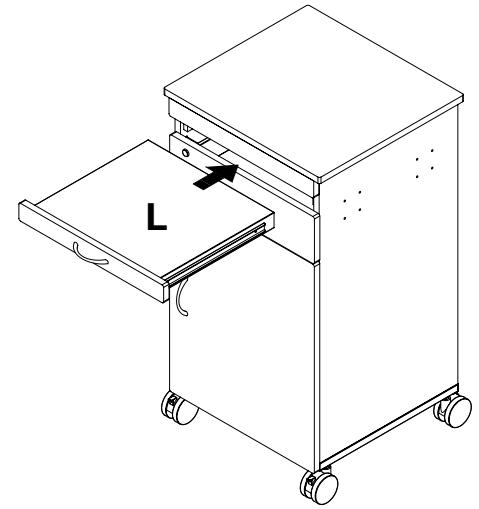 

13

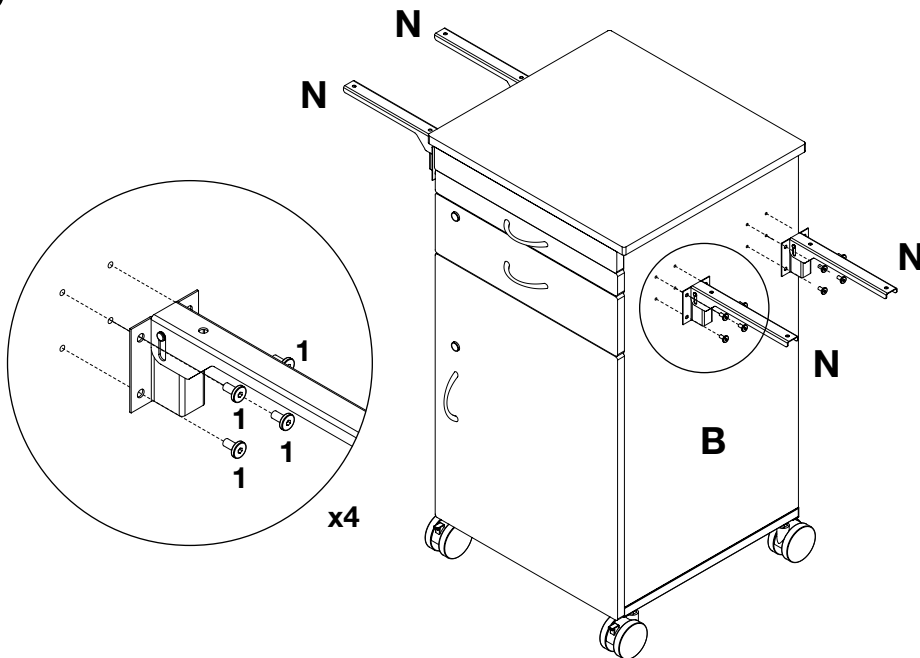 

14

