

# NSTSF SPL Rotating Retail Table



## Assembly Instructions

### Components:

4 Tabletops: 1 extra small, 1 small, 1 medium, 1 large

8 Legs: 1 extra small, 2 small, 2 medium, 3 large

4 Caster Wheels

3 Floor Levelers




3 Bearing Rings

8 Bearing Ring Spacers

2 Collars

1 Clamp Ring

Hex Screws & Hex Key

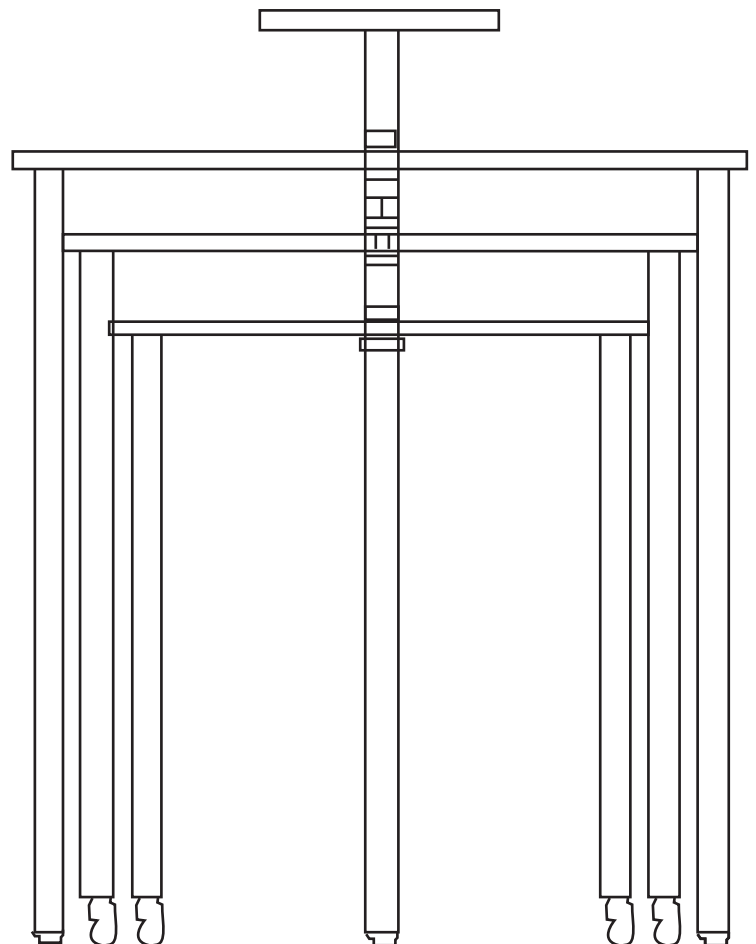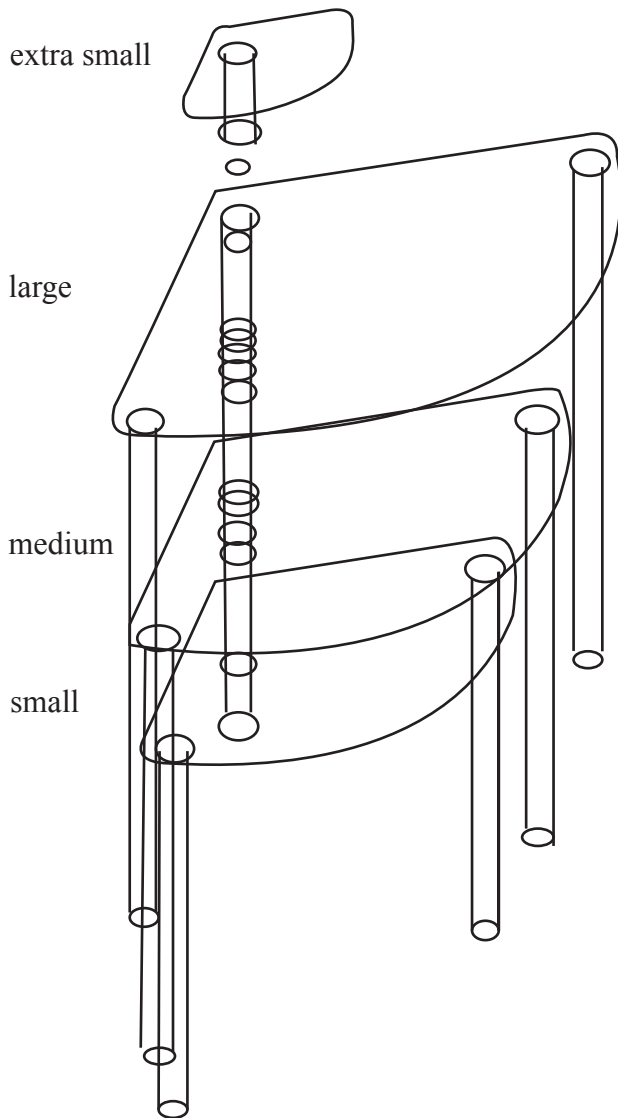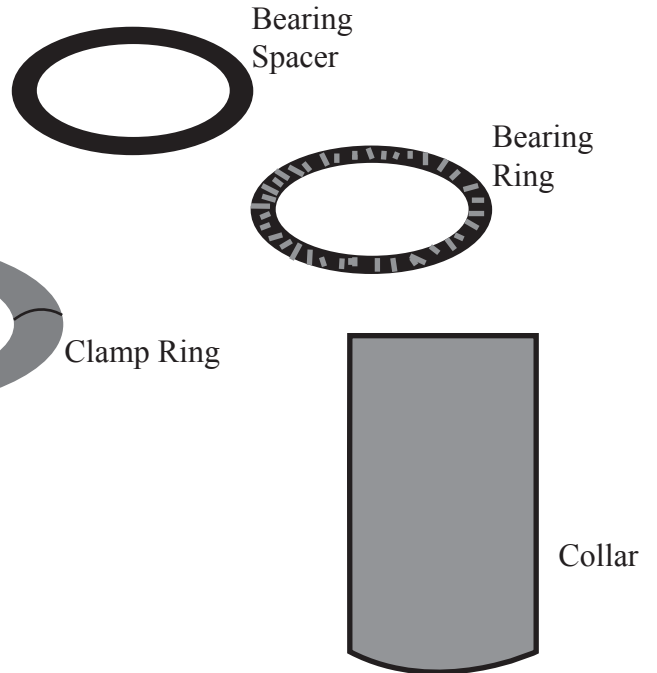

## Steps:

1. Lay out & account for all components
2. Place legs next to corresponding sized table tops. Ie. Large Tabletop with 3 Large Legs, Medium Tabletop with 2 Medium Legs.
3. Attach the legs to the tabletops using Hex Screws & Hex Key
4. Start with the Large Tabletop/Legs upside down so the legs are sticking up into the air. Lower 1 Collar onto the middle leg of the large table, following by 1 Bearing Spacer, 1 Bearing Ring, and 1 more Bearing Spacer.
5. Lower the Medium Tabletop/Legs onto the large table - with the middle leg of the large table sliding through the hole in the middle of the medium tabletop
6. Place 1 Bearing Spacer, 1 Bearing Ring, and 1 more Bearing Spacer on the same center leg. Next, lower 1 Collar onto the leg, followed by 1 Bearing Spacer, 1 Bearing Ring, and 1 more Bearing Spacer.
7. Lower the Small Tabletop/Legs over the center leg.
8. Open and attach the Clamp Ring directly under the bottom of the small tabletop. Secure it in order to keep all the layers on the center leg in place.
9. Attached Floor Levelers and Wheels
10. Flip the assembly over and place the extra Small Leg/Tabletop to the top of the Large Table.

***\*Please Note:***

**Two person assembly is recommended.  
The Bearing Rings are oiled for mobility.**

