

Assembly Instructions



Parts Include:

4	Bins	12	Insert Nuts
2	Legs	12	Bolts
2	Feet	1	Allen Wrench

The bolts and nuts used to assemble these units may have oil on them. Please handle all parts as little as possible during assembly and wash your hands.

1. In one end of each leg there are two holes that are 1" and 4 1/2" from the end. These two holes correspond to the holes in the two feet. Attach one foot to each leg using the enclosed bolts and insert nuts.

The easiest way to complete the following steps is to stand the four bins on the floor with one of the holes in each bin facing up. Spread the bins apart the same distance as the hole pattern in the legs. Also, the opening of all four bins should be turned the same way.

2. Lay one of the legs on top of the four bins and attach each bin to the leg using four of the bolts and insert nuts enclosed. **The foot must be on the opposite side of the bins.** Tighten the bolts snug, but do not tighten them as tight as possible yet.

3. Flip the display over so that the holes on the other side of the bins are facing up and repeat step 2 on the other leg. **Again, the foot must be on the opposite side of the bins.**

4. Stand the unit in it's correct position and adjust the angle of the bins. Tighten all bolts.