
Robot Dog Security Display Stand User Guide Functional Specification: World's leading standalone security alarm stand with internal straight cable. Strong steel cable inside, anti-cutting. Simulation of the puppy appearance design modelling, more attractive to customers. Adjustable clamp, adapt to different mobile phones. Alarm device on the goods more secure. **Picture Demo:** Clamp Strong steel cable inside. anti-cutting Screw fixation **Installation Steps:** Tear off the bottom adhesive tape and Use screws to Loosen two The upper cap fix the host on install the host screws shown is separated on the desk. the desk. in the picture. now. If you need to show the tablet tighten two screws to fix the sensor Connect the Tighten two phone charge screws to cable, and install Cover the upper fix the the clamp as shown below. upper cap Connect the power cable to power adaptor. Tear off the film of الله الله الله adhesive tapeand stick the cellphone Adjust the clamp so on sensor head. that it fits the cellphone. Pug into electricity.

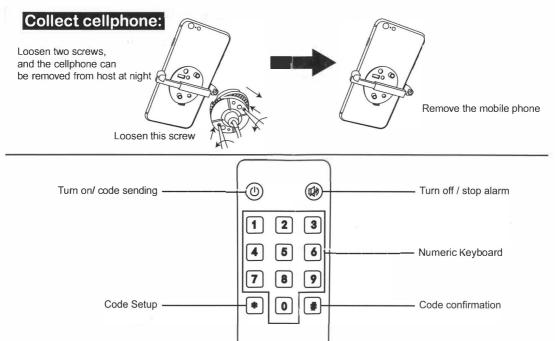

How to set password for Remote control

- 1. Original password of remote control is "0000".
- 2. Press "**", then start to set a four-digit password such as "1234", and press "#" to confirm the password.
 The password setting should be finished within 10 seconds. Now the password is stored inside Remote control.
- 3. Press "o" to activate the standalone display stand, the password signal is sent to the standalone display stand at the same time.

How to change password to Standalone Security Stand

- 1. Let the Standalone Security Stand alarm.
- 2. Press" ## "and, then insert the original password such as "1234", press "#", the Standalone Security stand alarm is stopped. This means that the password inserted is correct.
- 3. Press" \star ", insert new password such as "5678", then press "#", the password is changed.
- 4. Press "o" to activate the standalone display stand, the password signal is sent to the standalone display stand at the same time.

Accessories:

Item	Quantity
Host	1pcs
Charging adapter set	1unit
Manual	1pcs
Wireless coding remote control(optional)	1pcs
Clamp	1pcs
Charge cable	1pcs
Screwdriver	1pcs
Screws	2pcs



