



UNLOCK INSTRUCTIONS FOR LK SERIES MERCHANDISE/SECURITY HOOKS

Fixture Lock
(Back)

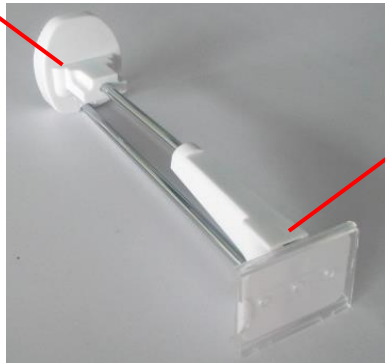

Unlock Key

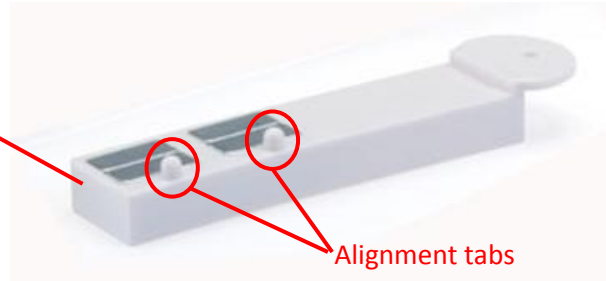

Merchandise Lock (Front)



To unlock the slatwall or peg
hook 's Fixture Lock, place key
as shown in image and slide
the cover toward the front of
the merchandise hook.

To unlock the slatwall or peg
hook 's Merchandise Lock,
place key as shown in image
and slide the cover away
from the back of the
merchandise hook.

