



1. Release and press this lock to make the center rise up and down
2. Release and press this lock to either extend or collapse the legs.
3. To hang the cross rail, place it on the 2 nuts found on the front of the legs