

ASSEMBLY INSTRUCTIONS

WXNTVGB01 - TV STAND WITH GLASS SHELF

PLEASE READ THESE INSTRUCTIONS COMPLETELY AND MAKE SURE YOU ARE COMFORTABLE WITH THE INSTALLATION PROCESS. ALSO CHECK YOUR TV'S USER MANUAL TO SEE IF THERE ARE ANY SPECIAL REQUIREMENTS FOR MOUNTING YOUR TV.






 

















⚠ WARNING:

1. Max Weight: 110 lbs. It is the installer's responsibility to make sure that the weight of the display monitor does not exceed 110 lbs.
2. Use this TV stand only for its intended use as described in these instructions. Displays2go is not responsible for damage or injury caused by incorrect assembly or use.
3. A remote control or toys placed on the glass shelf may encourage children to climb onto the TV stand and as a result the TV stand may tip over and fall onto the children. Serious injury or death may occur.


Two people are recommended to assemble the product.

If you do not understand these instructions or have questions about the safety of the installation, assembly or use of this product, please contact **DISPLAYS2GO** Customer Service at 1-800-572-2194.


COMPONENT AND HARDWARE

A. Screw M8X33mm		X4	M. Hex Key M5		X1
B. Washer_L ID=8.4mm		X4	N. Washer_S ID=8.4mm		X8
C. Hex Key M6		X1	O. Square Plate		X1
D. End Plate		X2	P. TV Plate		X1
E. Pointed Foot		X6	Q. Cup Nut		X4
F. Bracket_shelf		X1	R. Rubber Washer		X8
G. Bracket_1_shelf		X1	S. Screw M8X14mm		X4
H. Bracket_2_shelf		X1	T. Adapter Bracket		X1
I. Extrusion		X1	T1. Adapter Bracket		X1
J. Hex Key M4		X1	U. Base		X1
K. Slide-in T-nut		X1	V. Glass Shelf		X1
L. Screw M8X16mm		X6			


1. Install (6) pointed feet (E) into the base (U) from the bottom.

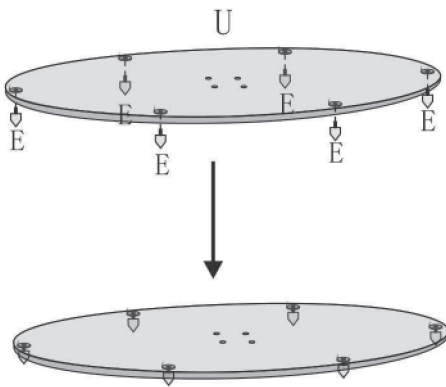


2. Align tapped holes in the extrusion (I) with pre-drilled holes in the base (U), with an end plate (D) in between these 2 parts. Secure the extrusion by using (4) screws (A), (4) washers (B) and (4) rubber washers (R). See part numbers shown below. A second person may be required to help with the assembly.

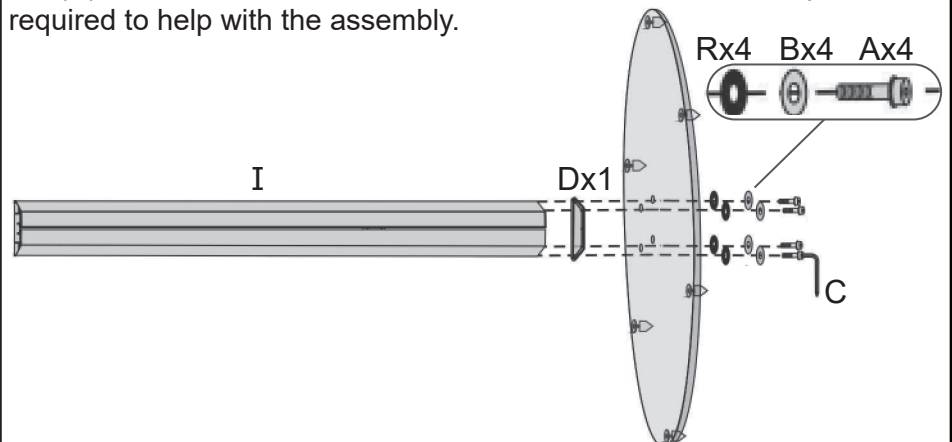


3. Assemble both supporting brackets (G) and (H) with center bracket (F) by using hex key (J). Slide the T-nut (K) down the T-slot from the top of the extrusion (I). Align corresponding holes on both parts, and affix the assembled shelf bracket securely to the desired height with (2) screws (L).

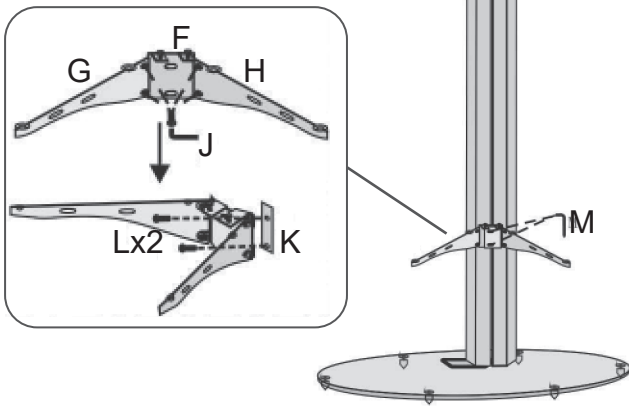


4. Attach the square plate (O) to the top of the extrusion (I) with (1) end plate (D) in the middle by fastening (4) screws (L) and (4) washers (N).

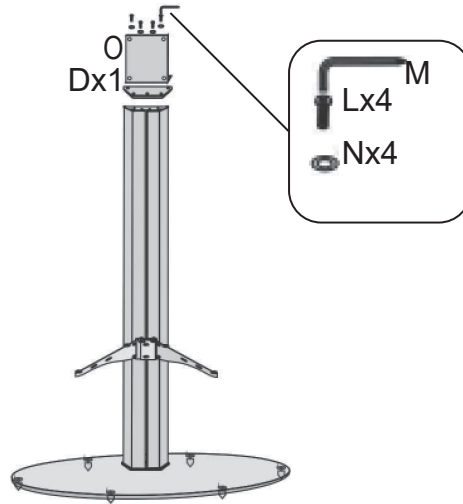


5. Assemble TV plate (P) with the square plate mounted in Step 4 by using Part (S), (N), (R) and (Q), (4) of each.

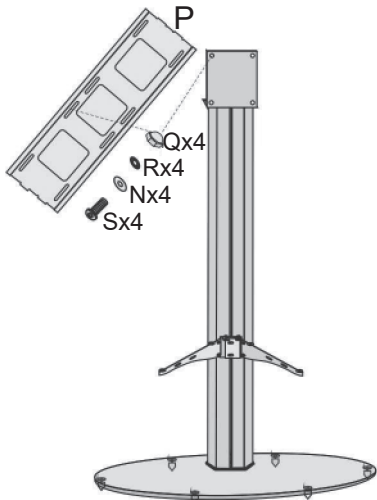

6. Slide adapter brackets (T) and (T1) from left and right respectively. See the picture below.

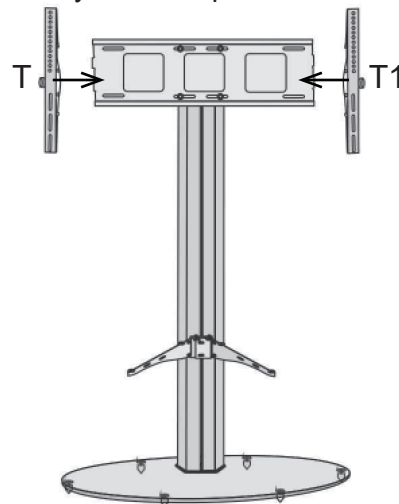

7. Carefully place the glass shelf (V) onto the supporting brackets assembled in Step 3. Adjust the height as needed.

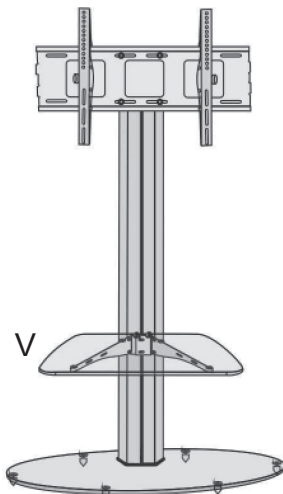

8. Safely lift the TV and attach the back of TV to the brackets (T) and (T1). Secure the brackets by tightening the screw located at the bottom of each bracket.

