

NOTE: PLEASE CONFIRM ALL PARTS SHOWN OR NOTED ARE PRESENT BEFORE STARTING.

Parts List

BOX-1		
A. Base		X1
B. Pole Adapter		X1
C. Wire Collar		X2
D. Header Clip (NOT NEEDED)		X1

BOX-2		
E. Metal Wire Frame		X1
F. Center Pole		X1
G. Bearing Assembly (2 washers & ball bearing)		X1
H. Cotter Pin		X1

Assembly Instructions


Step 1: Place the base on the floor and press the pole adapter into the center hole.



Step 2: Insert center pole into base until completely seated (pre-drilled hole at bottom).




Step 3: Insert the cotter pin into pre-drilled hole in the pole. Spread the prongs of the pin to secure it in place by using plier.

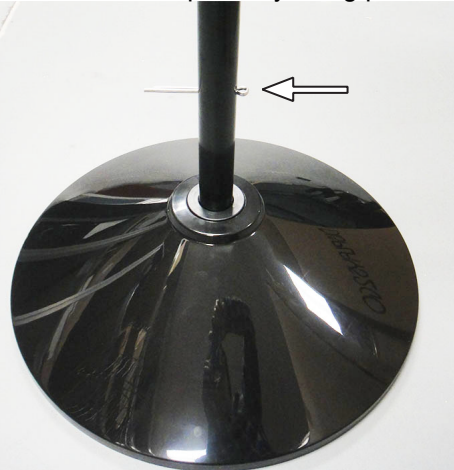


Step 4: Slide bearing assembly onto pole until it is seated on the inserted pin.




Drop (1) collar onto the bearing assembly through the pole as shown below.

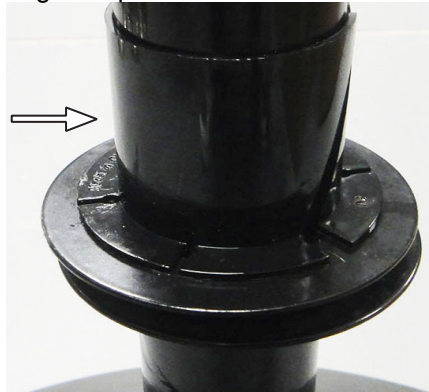


Step 5: Slide metal wire frame onto assembled pole. Be sure the bottom collar fits into the center of the wire frame.

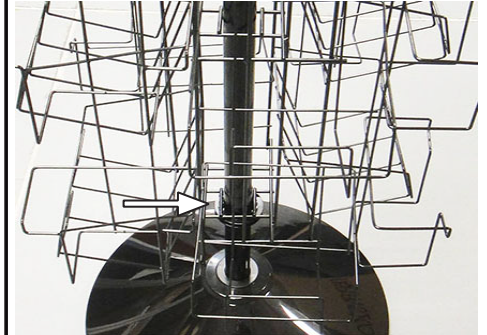

Step 6: Slide the 2nd collar down from the top of the pole, and fit it into the center of the wire frame.

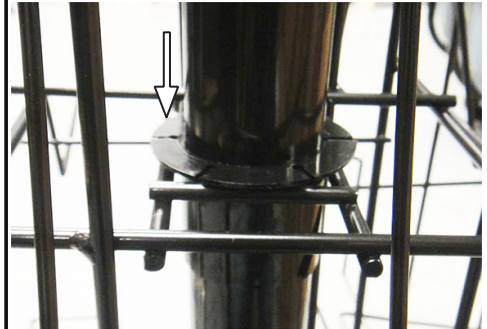

The assembly is finished.

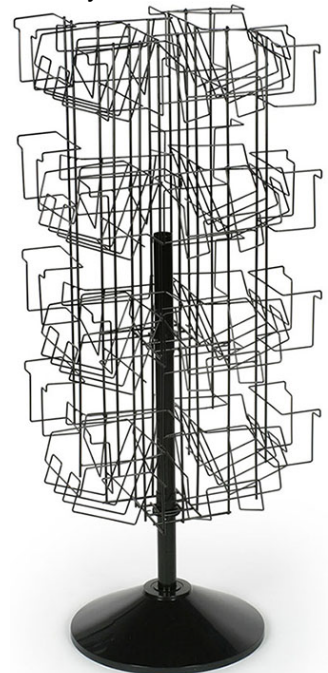

If you have any questions regarding our products, please visit us at www.displays2go.com or contact D2G customer service.