Ballot Box (Clear Acrylic, Black)

SKU: SSB811BKBK, SSB811BKCL, SSB811CLCL


DISPLAYS2GO

Version 2.0




Components

A. Body (x1)
B. Base (x1)
C. Ballot Box (x1)
D. Ballot Box Key (x2)
E. Acrylic Sign Plate (x1)
F. Sign Standoff (x4)
G. Washer (x2 Black OR x3 Clear)
H. Ballot Box Screw (x2)
I. Hex Wrench (x1)

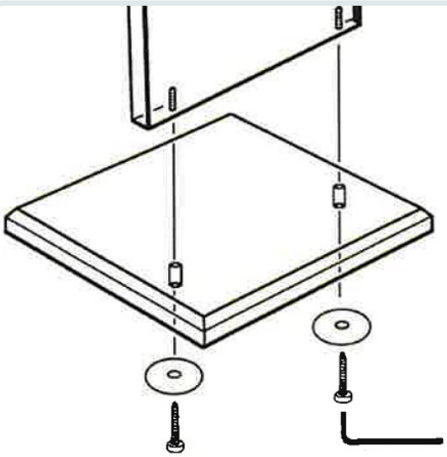

1. Remove the screws from the bottom of the Body (A) using the Hex Wrench (I).
2. Add Washers (G) to the removed screws, then insert through the Base (B) into the Body. Tighten with the hex wrench.

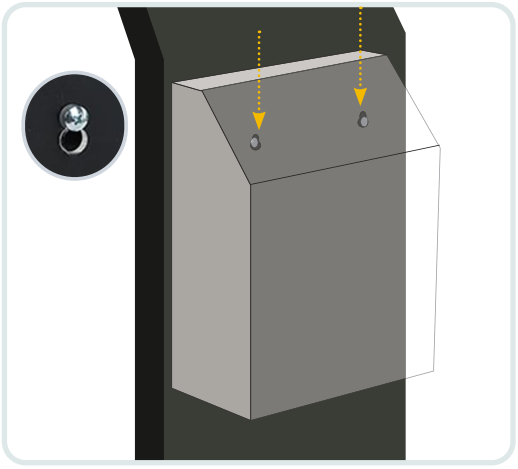

3. Insert 2 Screws (H) in the pre-drilled holes on the front of the Body, leaving ¼ inch protruding.
4. Hang the Ballot Box (C) onto the screw heads. Finger-tighten the screw heads as needed.
5. Lock the ballot box with the Key (D).

6. Peel the protective layer off the Acrylic Sign Plate (E).
7. Place your graphic. Align the acrylic with the pre-drilled holes on the body.
8. Insert and tighten Sign Standoffs (F) to secure.

Assembly is complete.

