

## Packing List

Crystal Light Box (1)

Translucent Graphic (1)



Power Cord Adapter (1)

Chrome Sign Standoffs (4)

Not Included: Screws (4), Drill, Level

## Install LED Lightbox

1. Twist to unscrew the top and middle knobs from the chrome sign standoffs.
2. Measure frame placement and drill base of standoffs into wall. Screw middle knob into each base.
3. Remove top layer of frame to place the translucent graphic. Replace top layer.
4. Align slots of frame with standoffs. Screw top knob into standoff to secure frame to the wall.

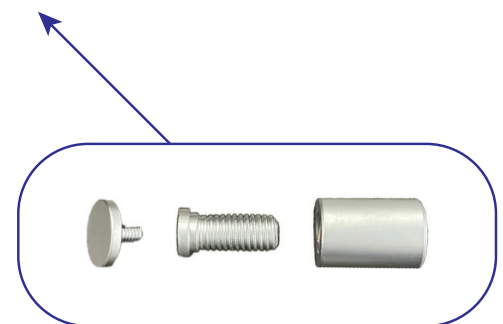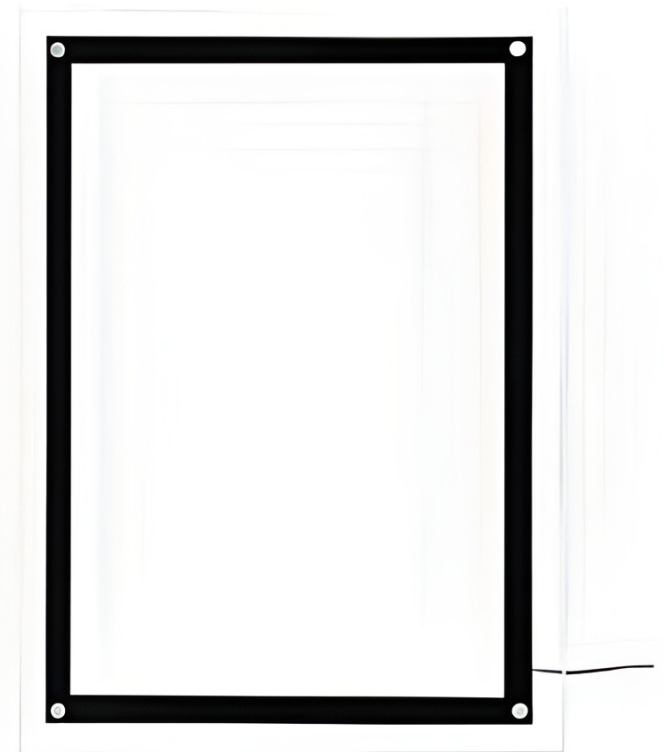

## Power On

1. Insert power cord adapter into input wire on back of frame.
2. Plug power cord into outlet. The unit turns on.
3. Unplug unit to turn off.