


## **ASSEMBLY INSTRUCTIONS 3TCBFDWT**

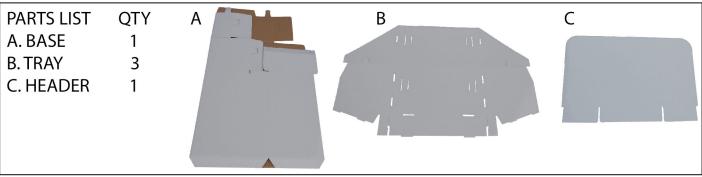

## **INSTRUCTIONS**



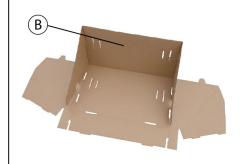

2. FOLD RIGHT & LEFT FLAPS. INSERT TABS ON SIDE FLAPS INTO SLOTS.




3. FOLD SIDE FLAPS INWARD ALONG THE EDGES ON BOTH SIDES.



4. FOLD IN 2 TABS BACKWARD.



5. FOLD THE FRONT LIP UP.

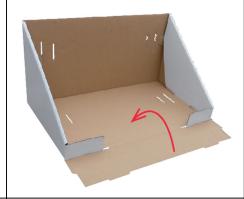


6. FOLD THE TOP FLAP OVER AND PUSH TABS INTO SLOTS.



7. THE CARDBAORD TRAY IS READY. REPEAT ABOVE STEPS TO SET UP 2 MORE TRAYS.



8. UNFOLD BASE AND SQUARE UP. **FOLD ALL PANELS AT BOTTOM** INWARD. FOLD IN MIDDLE PANEL AT

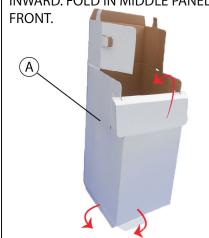

9. THE BASE IS READY.



## ASSEMBLY INSTRUCTIONS 3TCBFDWT

